

145x210mm, 105g双铜纸, 单色双面印刷

**Aitkenson**<sup>®</sup>

MODEL NO: B316


**BLUETOOTH SPEAKER INSTRUCTION MANUAL**

Functional Brief Description			
ON-OFF	Power Switch	<b>M</b>	Mode Switch
-	Volume Down	<b>+</b>	Volume Up
↻/CH	Repeat/Bluetooth Device Remove/ FM Channel and Frequency Switch		
EQ	Sound Effect Mode		
▶	FM Auto-scanning / play and pause /Answer and Dial a Call		
◀◀	Last Song / Backward FM Channel or Frequency		
▶▶	Next Song / Forward FM Channel or Frequency		
TF CARD	TF Card Socket		
⚡ DC 5V	Micro USB Charge Socket		
AUX	External Audio Input Socket		
USB	USB Socket		

**MODE SWITCH ▼**

Press "M" button to Switch "BT/ USB / TF/ FM / LINE" mode.  
The first time booting will enter into Bluetooth mode by default, booting again will enter the mode before power off.

**BLUETOOTH CONNECTING ▼**

Press "M" button to switch Bluetooth mode  to accept mobile phone or other Bluetooth signal. The Bluetooth signal light quick shining while the signal is connecting; After connect successfully, appear the warning tone (Warning Tone: a beep voice). And it can be played music if the Bluetooth signal light long shining. Even you pause the music, then light is still long shining. If you want to connect a new device to disconnect the current connection, and then according to the above steps to search the connection.

**Bluetooth Player** Under Bluetooth mode, press "▶|" can play/pause music, press "▶▶" for next song; press "◀◀" for last song; press "▶|" for pause, press once again to replay.

**Force Disconnect Bluetooth Device** Under in Bluetooth mode, long press "↻/CH" can force disconnect the current Bluetooth device, the Bluetooth signal light will shining, at the meantime, other Bluetooth device can search it.

**MP3 MODE(USB/TF) ▼**


**1. MP3 Player (USB/TF)**

Insert USB or TF card, it will play music from USB or TF card automatically, press "▶▶" to choose next song; press "◀◀" to

choose last song; press "▶|" to pause , press once again to replay.; When it has already inserted USB or TF card, the later equipment is preferred.

**2. Switch Player Mode**


Press "↻" button to switch player mode:  loop playback,  repeat

playback,  random playback(Auto-exit after model name displaying for 2 seconds, default setting to complete.)

**FM RADIO MODE ▼**

**1. Auto Scanning**

Long press "▶|" for auto scanning from 87.5MHZ to 108MHZ, then the scanned channel can be auto saved into channel

from CH01-50 in order. And the screen will display  (CH 01).

**2. CHANNEL SELECTION**(Press "↻/CH" button to switch channel and frequency)

A. FM Channel selection: The screen display CH for flashing 2 times, press "◀◀/▶▶" button to switch the channel. (Display

CH\*\*   )

B. FM Frequency selection: The screen display FM frequency flashing 2 times, press "◀◀/▶▶" to switch the frequency

 ,  ;

Remarks: 1. The default setting of FM radio mode is FM Channel selection. Restart will enter the mode before power off. P.s.

Press "↻/CH" button to switch FM Frequency selection before power off, press "◀◀/▶▶" to switch the frequency on next time enter into FM mode.


**AUX MODE ▼**

In any mode, speaker will enter AUX mode when insert AUX line, return back to Bluetooth mode when take out the AUX line.

In AUX mode, press "▶|" button is mute, press once again to replay, press "VOL+ / "VOL-" button to adjust volume up/down. Press "MODE" button to switch next mode, other buttons doesn't work.

**VOLUME CONTROL ▼**

In playing state, press " + / - " to adjust volume up/down, display "  ~


 (V 00~V 15) "

**MUTE SETTING ▼**

A. In playing state, press "▶|" is mute/pause.

B. In Bluetooth mode, long press "MODE" button for 5 seconds can turn on or turn off prompt tone of random mode.

**EQ CHOOSE ▼**

Press "EQ" button to switch sound effect(CLASS/JAZZ/POP/NORMAL), display 

 ,  ,  , after completing adjustment, no operation after 2 seconds. it will automatically return to the volume status.

**HAND FREE TALKING ▼**

 

 

1. Answering a call: After Bluetooth successfully connected, the phone will automatically connect while a call coming, press "▶|" for answering, long press "▶|" for hanging up (refusing to answer), the Bluetooth playing function will automatically recovered while end up calling.

2. Dialing a call: After Bluetooth successfully connected, long press "▶|" to dial a call.

 
When use the Bluetooth calling, hand-free signal light is on and display "  (CALL)".

**RECHARGE ▼**

Please use the DC5V / 1 A current safety standards charger or above to meet safety standards charger.

When the symbol "  " is flashing, it needs to be charged immediately. When charging, the "  " will long light; In full charge state, it won't display the symbol "  ", it will display  on top left corner.

It can keep working for 3 hours with the normal volume under the Bluetooth mode after full charged. (Accept to use the machine under the charging state)

When the symbol "  " is flashing and low battery voice prompt, it means the battery power is about to run out and auto power off soon. In the charging state, the red charging indicator behind the machine will light up until in full charge.

## FCC Warning Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.