

编号: Z-PKQG-AH6-TTN-V2

材质: 80g书纸 + 双面印刷

尺寸: 折前441.08 x 381.5 mm 折后147 x 190.746 mmmm

 
颜色: ---四色印刷




Stereo Wireless Headset

Model No.: BTH5-AH6

Language selection table: EN, DE, FR, IT, ES

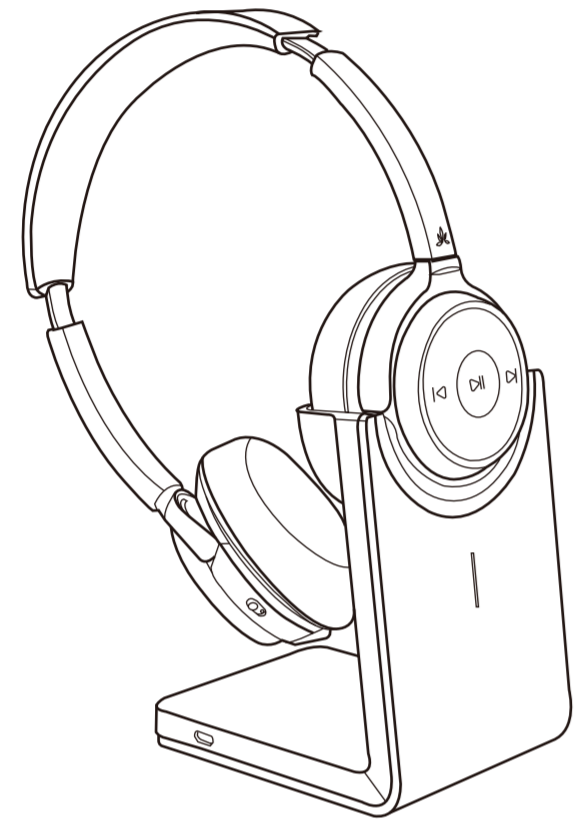

Product Overview

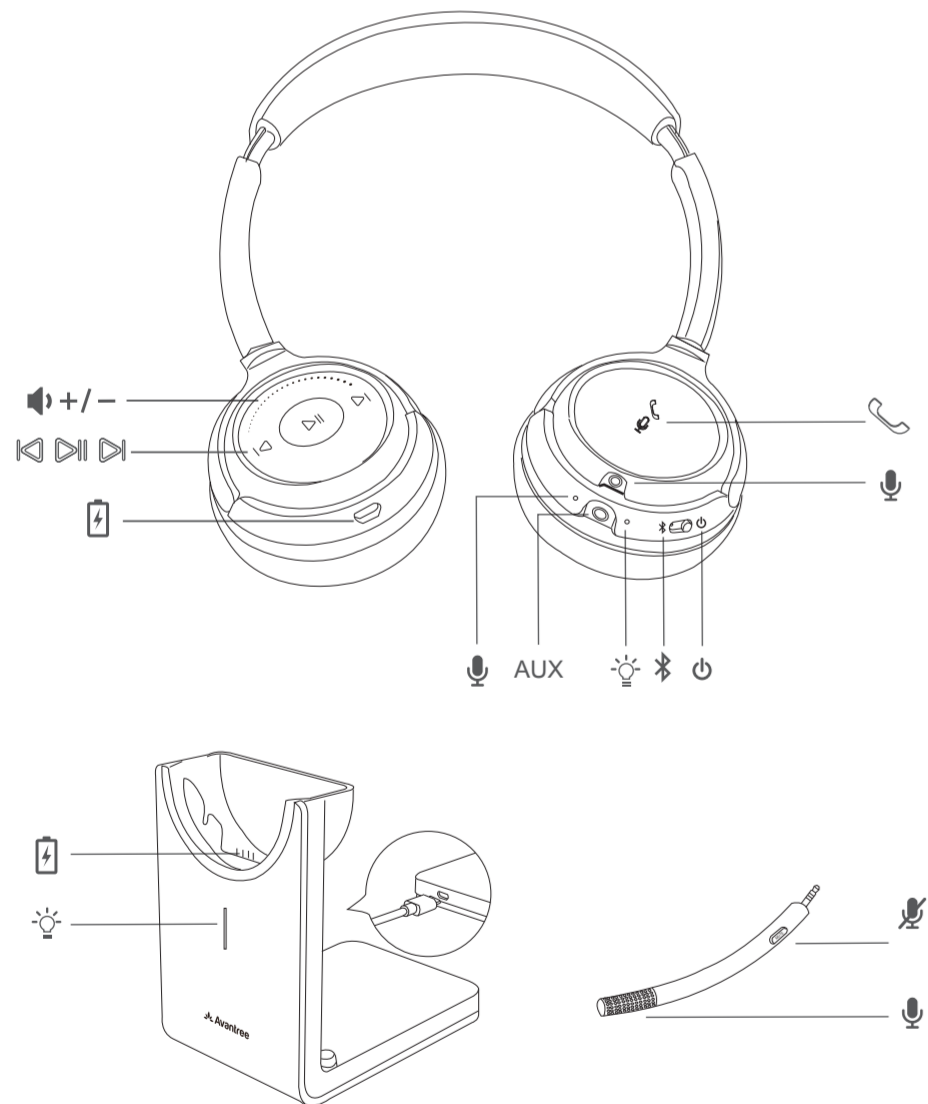 

1. Basic Operations & LED indicators

Table with columns: Button, Function, Operations. Lists various controls like Power ON/OFF, Pairing, Call management, and Volume control.

NOTE: Functionality varies by applications

Table with columns: Working Status, LED indicator. Shows LED colors for Paring Mode, Reconnecting, Disconnected, and various connection states.

- Supported devices: Avantree Oasis, Avantree Audikast etc.

For more instructions please search "AH6" or "Alto Clair" on support.avantree.com or contact support@avantree.com

EN

2. Connect & Pair

Enter Headphones into Pairing Mode: Slide the power switch to left... and hold for 3 seconds.

- Pair to mobile device: Set the headphones into Pairing Mode as above. Activate Bluetooth on your phone...

 
- To add another cell phone: Connect with the FIRST phone as above, then turn off the headphones. Connect headphones with SECOND phone...

Reconnection: Normally, when the next time you turn on Avantree AH6, it will automatically reconnect the last paired device.

- Connect to the PC/Laptop: Set the headphones into Pairing Mode as above. Activate Bluetooth function on your PCLaptop...

EN

3. Charging

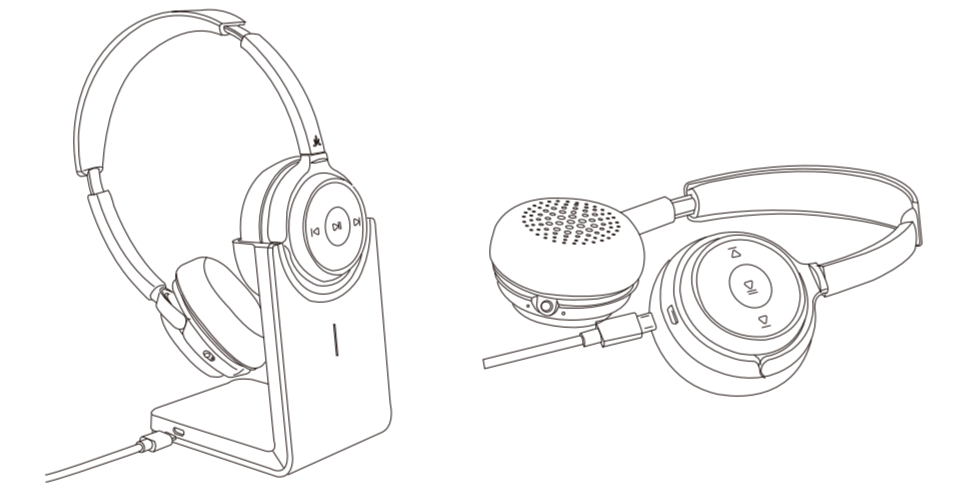

When the LED flashes RED 3 times per 10 seconds or you hear the voice prompts "Low battery please turn off and charge", you should fully recharge the device for about 1 hour.

4. Clear pairing history

If you have issues with the audio stream skipping or cutting out when using Avantree AH6, please try to clear pairing history as following: Firstly, turn on the headset (Non-calling Status), then Tap and Hold BOTH... 5 seconds till the LED blinks PINK for 2 seconds...

EN

Frequently Asked Questions

- 1. No Sounds: There are FOUR possibilities if the headset seems no sounds. Headphones and your Bluetooth audio device are not properly paired... Can this headset be used with TV/ PC? Yes, it can, for more detailed step by step instructions please search "Avantree AH6 TV/PC"...

- 3. Audio delay: To take advantage of the better performance of aptX Low Latency codec please make sure your Bluetooth devices/transmitters support the aptX Low Latency codec. 4. Poor sound quality: To take advantage of the better sound quality of its aptX-HD codec please make sure your Bluetooth devices/transmitters support the aptX-HD codec.

Any questions? Please visit: support.avantree.com (User Manuals, FAQ, Video Tutorials and more)

DE

2. Verbinden und paaren

Gehen Sie in den Avantree AH6 Paarungsmodus: Schreiben Sie den An-/Ausschalter im AUSGESCHALTETEN Zustand Richtung... bis Sie „Paarung“ hören und die LED-Anzeige abwechselnd ROT und BLAU aufleuchtet. Mit einem mobilen Gerät paaren: Setzen Sie die Kopfhörer wie oben beschrieben in den Paarungsmodus...

3. Ladevorgang

Wenn die LED-Anzeige alle 10 Sekunden 3 Mal aufblinkt, oder Sie die Sprachansage „Niedriger Akku, bitte ausschalten und aufladen“ hören, sollten Sie das Gerät für 3 Stunden vollständig aufladen. Das Headset kann mit dem Schreibtischladegerät (DC5V/0.5-1A) oder mit einem Mikro-USB-Kabel (DC5V/0.5-1A) aufgeladen werden.

4. Paarungshistorie löschen: Halten Sie die BEIDEN Knöpfe [K] und [D] im STANDBY-Modus (Strom an, nicht mit BT(BA) Geräten verbunden) 5 Sekunden lang gedrückt, bis die LED-Anzeige 2 Sekunden lang GRÜN aufleuchtet, jetzt sind die Kopfhörer im Paarungsmodus.

FR

2. Connection et appairage

Mettre l'Avantree AH6 en appairage: Casque éteint, glissez et maintenez l'interrupteur d'alimentation vers... jusqu'à ce que vous entendiez "pairing" avec l'indicateur LED clignotant alternativement ROUGE et BLEU. Appairage à un téléphone mobile: Mettez en appairage votre casque comme ci-dessus. Activez le Bluetooth sur votre téléphone et recherchez les nouveaux appareils...

Reconnexion: La prochaine fois que vous allumez l'Avantree AH6, il se reconnectera automatiquement au dernier appareil couplé. 3. Recharge: Lorsque la LED clignote ROUGE 3 fois toutes les 10 secondes (ou si vous entendez les instructions vocales "Lowbattery/assez peu de charge"), vous devez charger complètement votre casque pendant 3 heures.

4. Effacer l'historique d'appairage

Dans le mode VEILLE du casque (allumé, déconnecté avec les appareils BT / BA), maintenez les deux boutons [K] et [D] 5s jusqu'à observer la LED clignoter VERT 2 secondes. Ceci fait, le casque se mettra en APPAIRAGE automatiquement.

IT

2. Connessione e accoppiamento

Portare Avantree AH6 in modalità accoppiamento: Da spento, portare il pulsante dell'accensione verso... e tenerlo premuto fino a quando non si sente il comando vocale "accoppiamento" e l'indicatore LED non lampeggia in ROSSO e BLU in modo alternato. Accoppiamento con un dispositivo mobile: Portare le cuffie in Modalità Accoppiamento come descritto sopra. Attivare il Bluetooth sul proprio telefono e cercare nuovi dispositivi...

Per aggiungere un altro cellulare: Connettere il PRIMO telefono come sopra riportato, poi spegnere le cuffie. Connettere le cuffie con il SECONDO telefono come sopra riportato. Selezionare "Avantree AH6" sul PRIMO telefono.

3. Ricarica

Quando il LED lampeggia in ROSSO per 3 volte per 10 secondi o si sente il comando vocale "Batteria bassa, si prega di spegnere il dispositivo e ricaricarlo", occorre ricaricare il dispositivo per 3 ore. Le cuffie possono essere caricate attraverso il caricatore da tavolo (DC5V/0.5-1A) o attraverso un cavo micro USB (DC5V/0.5-1A).

4. Eliminazione della cronologia: Con le cuffie in MODALITÀ STANDBY/ MODE (acceso, disconnesso con i dispositivi BT(BA) tenere premuti i pulsanti [K] e [D] per 5s fino a quando il LED non lampeggia in VERDE per 2 secondi, poi le cuffie entreranno in MODALITÀ ACCOPIAMENTO.

2. Conectary emparejar

Entrar en Modo de EmparejamientoAvantree AH6: Con el dispositivo apagado, deslizar y mantener el interruptor en dirección a... hasta que escuche "emparejamiento" y el indicador LED alterne luz ROJA y AZUL. Emparejar al dispositivo móvil: Entrar en modo de sincronización de auriculares como arriba. Activar el Bluetooth en el teléfono y programar para que busque nuevos dispositivos...

Reconexión: La próxima vez que enciende el Avantree AH6, se volverá a conectar automáticamente con el último dispositivo emparejado. 3. Recarga: Cuando el LED parpadea en ROJO 3 veces cada 10 segundos o escuchas el comando de voz de "baja batería" por favor apagar y cargar, debe cargar completamente el dispositivo durante 3 horas.

4. Borrariohistorial de emparejamiento

Con los auriculares en MODO STANDBY (encendido, desconectado con dispositivos BT(BA) mantenga pulsados AMBOS [K] y [D] 5s hasta que el indicador LED parpadee en VERDE durante 2 segundos, después los auriculares entrarán en el modo de emparejamiento.

ES

正面

反面



Z-PKQG-AH6-TTN-V2

FCC Requirement

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.