

Car MP3

with Bluetooth®

NA-3032



Instruction Manual

Please read carefully before use and keep for future reference.

Naxa Electronics, Inc.

Thank You

We know you have many choices when it comes to technology; thank you for choosing us here at Naxa Electronics. Established in 2001 in Los Angeles, California, we are dedicated to delivering products that entertain and delight.

We trust that you will be happy with your purchase. Please read this manual carefully and save it for reference. You may also find the latest FAQ, documentation, and other product material at our website. Come visit us on the web at www.naxa.com and see all that we have to offer!

In the Box

Please take a moment to make sure that you have everything in the list below. Although we make every effort to ensure that each Naxa device is securely packed and sealed, we know a lot can happen in between us and you. If anything is missing, check back with your local retailer to get immediate assistance. If they can-

not help you, please contact our Naxa Support team at www.naxa.com/supportcenter/.

- NA-3032
- Remote control

Key Features

- Stream music wirelessly to your car stereo over FM radio frequencies
- Connect your smartphone or MP3 player wirelessly with Bluetooth® or with its headphone jack
- Bluetooth® version 2.1 supports A2DP and Hands-Free functions
- Two USB ports lets you charge and play music at the same time
- Built-in MP3 player uses microSD memory cards
- Digital display with 206 selectable FM frequencies to minimize interference

Page 2 Naxa Electronics

Getting Started

- 1. Plug the FM transmitter into the DC 12-24V power port (or cigarette lighter) of your vehicle.
- 2. Tune your car radio to an FM frequency that is clear of radio programming.
- 3. Tune the FM transmitter match the FM frequency of your car radio. To do so:
 - a. Press CH; the frequency will flash on the display
 - b. Press ►►I or I to tune to a higher or lower frequency, respectively.
- Now that the FM transmitter is broadcasting audio to your car stereo, you are ready to connect your smartphone/audio player to the FM transmitter.
 - a. To connect using the AUX in port, you will need a 3.5 mm stereo patch cable. Connect one end of the cable to the headphone jack of your

- smartphone/audio player; connect the other end to the AUX In port of the FM transmitter. Set the volume level of your smartphone/audio player to about 80%, then adjust the volume of your car stereo to a comfortable listening level.
- **b.** To connect using Bluetooth, you will need to pair your smartphone/audio player to the FM transmitter. Refer to the section below.
- c. The FM transmitter can also play MP3s from USB flash drives and microSD cards.
- 4. The USB ports can be used to charge your smartphone or other device that can be powered by USB. Use the USB cable provided by the manufacturer with your device

Pairing and Connecting Quick Guide with Bluetooth®

If you have a smartphone or other audio player with Bluetooth, you can connect wirelessly to the FM trasnsmitter. To do so:

- Make sure Bluetooth is enabled on your phone.
- Go to the Bluetooth menu screen on your phone and scan for nearby devices.
- In the list of devices that appears, select NAXA NA-3032.
- 4. If the phone asks for a passcode, use "1234" or "0000".

When the connection is successful, you will be able to play audio on your phone and hear it on the car stereo.



To learn more about pairing devices with Bluetooth, please refer to the instructions provided by the device manufacturer.

	To do this	do this (FM Transmitter)	or do this (Remote Control)
	Change the input source mode between Bluetooth®, MP3 (microSD/USB), and AUX In	Press and hold	Press MODE
	Tune to a higher frequency	Press CH, then press ►►	Press CH+
	Tune to a lower frequency	Press CH, then press ◄◀	Press CH-
	Increase the volume level	Press and hold ▶▶	Press VOL+
	Decrease the volume level	Press and hold	Press VOL-
	Play or stop music playback (MP3 or Bluetooth)	Press	Press PLAY/PAUSE
	Skip to the next track	Press >>	Press NEXT
	Skip to the previous track	Press 🖊	Press PREV

Naxa Electronics Page 4

To do this	do this (FM Transmitter)	or do this (Remote Control)
Change the Equal- izer preset of the MP3 player	Not supported	Press EQ
Answer an incoming phone call (Bluetooth mode; smartphone connection is required)	Press	Press PICK
End a phone call (Blue- tooth mode; smart- phone connection is required)	Press	Press HOLD

Specifications

Display Digital LED

Input Sources	Bluetooth® version 2.1+EDR
	3.5 mm AUX
	MP3 player
Memory Card	microSD, USB (max 32 GB)
Power	DC 24V

Note: Product are improved continuously. We reserve the right to modify the product and specifications without prior notice.

Warnings and Precautions



CAUTION

WARNING: SHOCK HAZARD. DO NOT OPEN.

AVIS: RISQUE DE CHOC ELECTRIQUE.

NE PAS OUVRIR



CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of significant magnitude to constitute risk of electric shock



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

CAUTION

- Do not block the ventilation openings or holes.
- Do not place any naked flames (such as lighted candles) on the apparatus.
- When discarding batteries, follow all local rules and laws governing the disposal of batteries. Consider the environmental impact of your actions!
- To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

Important Safety Information

- Read Instructions: All the safety and operating instructions should be read before the product is operated.
- 2. Retain Instructions: The safety and operating instruction should be retained for future reference.
- Heed Warnings: All warnings on the product and in the operating instructions should be adhered to.
- Follow Instructions: All operating and usage instructions should be followed.
- Cleaning: Unplug this product from the wall outlet before cleaning.Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 6. Attachments: Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
- Water and Moisture: Do not use this product near water (e.g., near a bathtub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
- 8. Accessories: Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

Page 6 Naxa Electronics

- 9. Ventilation: Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
- 10. Power Sources: This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
- 11. Grounding or Polarization: This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 12. Power-Cord Protection: Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.
- 13. Protective Attachment Plug: The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.
- 14. Lightning: For added protection for this product, unplug it from the wall outlet during a lightning storm or when it is left unattended and

- unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.
- 15. Overloading: Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 16. Object and Liquid Entry: Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 17. Servicing: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 18. Damage Requiring Service: Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
- 19. Replacement Parts: When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

- 20. Safety Check: Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
- 21. Wall or Ceiling Mounting: The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 22. Heat: The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

WARNING:

This product contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. *Wash hands after handling.*

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 Caution: Any changes or modifications to this device not explicit

CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate the equipment.

Trademark & Regulatory Statements

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Naxa Electronics is under license. microSD and microSDHC are trademarks or registered trademarks of SD-3C, LLC in the United States, other countries or both.

Page 8 Naxa Electronics

Support

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.naxa.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

NAXA Technical Support

2320 East 49th St. Vernon, CA 90058

http://www.naxa.com/supportcenter/