
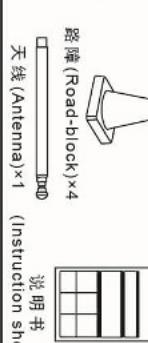
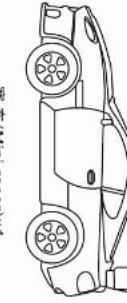


使用说明书(Operating instruction)
请在使用前详细阅读本使用说明书。(Please read the instructions carefully before using.)
请保管好本说明书以备不时之用。(Please take care of the instructions for necessary at a later date.)

本产品特点: PRODUCT FEATURES:
赛车版电时间更长: 6-10分钟 (车身配高容量电池, 正常充电几次后, 即可达到最佳效果) battery, it can reach the best effect after charged and discharging several times, 距离更远: 6-20米, Longer distance: 6-20meters, 性能更好: 选频特性好, 抗干扰能力强. Better performance, reliable frequency selection and strong anti-interference ability.


套装内容 (CONTENTS)

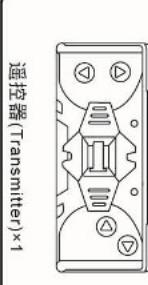

各部件名称(PART DETAILS)

● 遥控器(Transmitter)

● 赛车(Mini racer)

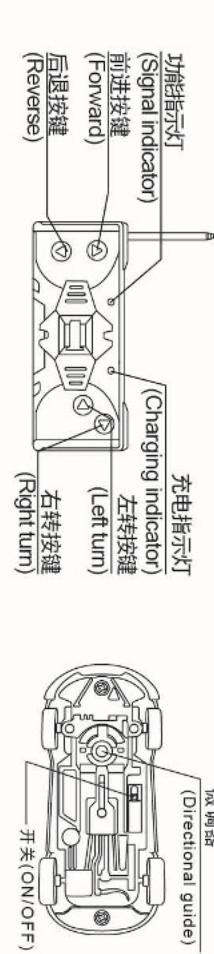


准备(PREPARATION)

1 路障 (ROAD-BLOCK)



拿起包装罐, 拔出瓶盖, 翻转包装罐盖, 按箭头方向推开卡扣, 取出4个路障. Picked up the tins, pull out the cap detach the can cover and can body. Push the LOCK inside the can cover towards the direction shown to release the 4 ROAD-BLOCKS.

2 赛车 (Racing car)

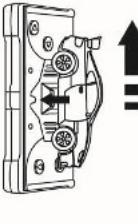

从包装罐中, 取出遥控器和赛车, 然后将赛车向后拖动, 取出赛车. From the tins, take out the remote control and the car. Then drag racing back, take out the car.

3 天线 (Antenna)




打开遥控器背后的电池盖. Slide the transmitter's battery compartment cover and open it.

4 电池 (Batteries)



按正确极性装入2粒“AA”电池, 盖上电池盖. Insert 2x AA batteries with the correct polarity, then replace the battery compartment cover.

5 功能指示灯 (SIGNAL INDICATOR)

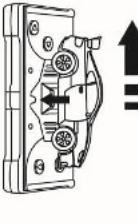


按下任何按键, 操作指示灯亮, 证明电池安装正确. Insert the CHARGING JACK on the bottom of the mini racer, the CHARGING INDICATOR lights up to indicate the charging is in process.

6 天线 (Antenna)



如图, 将天线插入遥控器天线孔, 按顺时针方向将天线拧入遥控器. Insert and tighten the antenna to the antenna hole on the transmitter as illustrated.

操作(OPERATION)

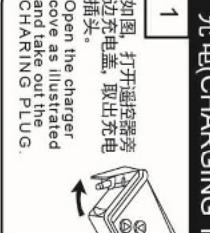

1. 使用时, 将遥控器天线拉出至最长; 将赛车放在平地上.

电源开关拨至“ON”位置. 将赛车放在平地上. Extend the transmitter's antenna for better signal reception. Move the ON/OFF switch on the mini racer to ON, and place it on the ground.

2. 遥控器按键的功能 (The transmitter is full-function.) :

1. 按下遥控器按键, 赛车便可启动, 遥控器上的功能指示灯会随着按下遥控器的按键而发亮, (按下遥控器的任何按键, 遥控器的功能指示灯均会发亮).
2. 当按前进/后退键, 赛车可前进/后退, 前后灯也随着发亮.
3. 当按前进/后退键, 同时按左/右转接键时, 赛车可左/右转.




(1) The SIGNAL INDICATOR lights up when any button on the transmitter is pressed.

(2) The mini racer runs forward and lights up its headlights when the transmitter's FORWARD button is pressed. The mini racer runs reverse and lights up its tail lamps when the transmitter's REVERSE button is pressed.

(3) Pressing the LEFT/RIGHT button on the transmitter while the mini racer is running forward or reverse, it will make left/right turns.

注意(CAUTIONS)

3、调整赛车底端的微调器, 可调整赛车的直线行驶性能。The DIRECTIONAL GUIDE is used to adjust the mini racer's direct-line-running performance.

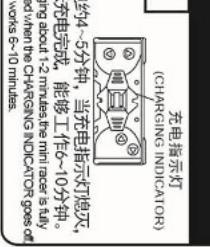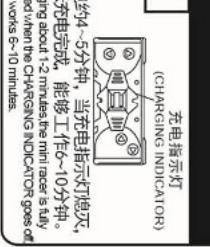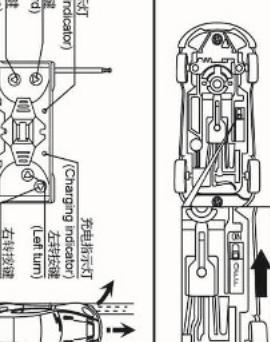

- 玩具车本身使用1.2V 1/4AAA NI-HM可充锂电池, 遥控器使用2节1.5V AA电池; 安装或更换电池时请注意极性; 不能充电电池不可充电; 当给充电电池充电时, 需要成人监护; 不可使用新旧或不同类型的电池; 从玩具内取出用尽的电池; 电源端子不应短路.
- 操作时, 手不能接触遥控器天线, 否则会影响遥控距离; 断开的天线需由成人处理.
- 本赛车因配以强大动力, 高速行驶时, 由于惯性原因, 不能急刹车, 请使用时特别注意.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Exhausted batteries should be removed from the product.
- Do not dispose of batteries in fire, or batteries will explode or leak.
- The supply terminals are not to be short-circuited.
- Batteries are to be inserted with the correct polarity.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be removed from the product before being charged(if removable).
- Remove batteries if the product is not to be used for an extended period.
- The packaging has to be kept since it contains important information.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.