

# POC RADIO IN TOUCH TIMELY EVERYWHERE



**S300** 

**Instructions** 

## Notes before using:

- Do not use the walkie talkie in an explosive environment (such as gas, dust, steam, etc.) or to charge the battery.
- Please turn off the walkie-talkie while refueling or parking at the gas station.
- Do not adapt or modify the machine whether there is any reason
- Do not let the walkie talkie by prolonged direct sunlight, do not place it near a heating appliance too.
- Do not put the walkie talkie at the extremely dusty, damp and splashing place and do not place it on an unstable surface.
- The repair of the walkie talkie only can be carried out by professional technicians, do not disassemble by yourself.



#### Note:

Please read above content carefully. It is very important for walkie talkie users to gain general knowledge and understanding of risk about the use of walkie talkie.

This guide is for reference only. Commitment does not

# **Accessory Installation**

1 To insert a SIM card



2 To insert a TF card



Install Lanyard




4 Installing headset

Open the cover from the top of device to show the headset sockets. Headset will work immediately after being plugged in.




English English

## Radio Overview

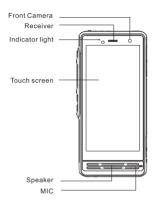



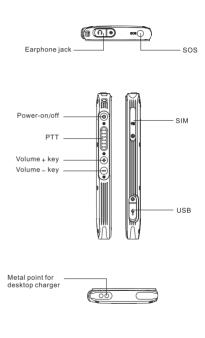

English English

## **Functions Sheet**

No.	Name	Functions
1	PTT button	PTT
2	Power-on/off	Short Press: Screen Lock / Screen Off Long Press: Long press for 3 seconds to start up and off the radio.
3	Volume + key	Short Press: Increasing the volume Long Press: Maximum volume
4	Volume - key	Short Press: Decreasing the volume Long Press: Minimum volume
5	sos	Long press : Long press for 3s for SOS, quit by pressing PTT.

## LED indicators

Description	LED indicators		
Description	Color	Status	
Charging	Red	On	
Fully charged	Green	On	

## Basic functions

#### • Power - on

Long press the Power - on / off Key for 3 seconds and wait till the program is started up.

#### Power - off

Long press the Power - on / off Key for 3 seconds to shut the program. If the device is in the power-charging state, it will flash red light and display the current power capacity.

#### Push to Talk

Press PTT key to start the call. PTT won't work under busy line. Longest talk time limits in 60s. If exceeds, it will auto release in due time. (1-60s can be set via APP)

#### Shortcut key to Fast Photograph & Video

- Combination key: Press "PTT key" + "Volume + key" to enter / quit video mode. While in the video mode short press "Volume + key" to start / end video recording.
- Combination key: Press "PTT key" + "Volume key" to enter / quit photograph mode. While in the photograph mode short press "Volume key" to take the photo.

English English

## **System Parameter**

- Jotom r dramotor					
Operating sys	stem	Android			
СРИ		MT6739V/WW (MT6761V/WB Optional ); 1.5GHz			
Support		GPS /2 G/3 G/4 G			
Camera		Front Camera: 5MP; Back Camera: 13 MP			
Size		155*74*15.8mm			
Weight		~220g			
	EU	LTE-FDD: B1/3/5/7/8/20			
		LTE-TDD: B40			
		WCDMA: B1/8			
Network		GSM: B3/8			
frequency	us	LTE-FDD: B2/4/7/12/17/66			
		WCDMA: B2/4/5			
		GSM: B2/5			
Screen Size		5 inch			
Screen Resol	ution	480*960 pixel			
Transmit pow	er	23dBm~30dBm@-104dBm			
Sound output	power	2W@10%distortion			

## Security information

Before using the device operation, please read and observe the following precautions to ensure optimum device performance, and avoid dangerous or illegal situations.

#### • Electronic equipment

The place of civilization provisions that has prohibited the use of wireless devices, don't use the device, otherwise it will lead to interference from other electronic devices or other hazards.

#### Area with easy firing and explosion

Refueling point (service station)or near inflammable and explosive materials, flammable and explosive chemical agents in any area, and don't use the device, the device may cause an explosion or fire.

#### Operating environment

Don't use the device in dusty, wet, dirty, or near magnetic fields, so as to avoid internal circuit equipment failure.

Don't use this device in a thunderstorm, thunderstorms could

result in equipment malfunction or shock hazard.

Don't place in direct sunlight for too long time.

Please avoid equipment and accessories to rain or moisture.

otherwise it may be caused a fire or electric shock.

Don't place the device near a heat source or exposed flame sources, such as electric heaters, microwave, oven, water heater. fire, candles or other places may high temperatures.

## Accessories requirement

Don't use unapproved or incompatible power supply, battery charger, otherwise, it may result in a fire, explosion or other hazard.

Only use manufacturer-approved equipment and equipment accessories for this model, if you use other types of accessories, it will be lead to accidental damage to the equipment, breach of warranty of the equipment.

#### The charger security

When fully charged or not charged, please disconnect the charger from the device and unplug the charger from the power outlet.

Don't drop or bump the charger, if the charger is damaged, don't continue to use, to avoid accidents.

Don't touch the device and charger with wet hands to avoid short-circuiting device, malfunction or electric shock.

#### Battery Safe

Don't use the metal objects with two poles of the battery to docking, or contact with the endpoint of the battery, to avoid the battery short circuit, as well as damage caused by battery overheating.

Don't expose the battery to high temperature or fever around the device, and battery overheating may cause an explosion Don't disassemble or modify the battery, insert foreign objects or liquid intrusion, in order to avoid battery leakage. overheating, causing a fire or explosion.

If a battery leaks, don't contact with skin or eyes. If contact, immediately rinse with water and go to hospital for medical treatment

If the battery is in the process of using, charging or saving, which have discoloration, deformation, abnormal heating phenomenon, please stop using and replace with new battery. Don't throw batteries in a fire, otherwise it will cause fire and explosion

Don't let children touch the battery, to avoid accidents

Don't use a damaged battery

When the standby time of the device is significantly shorter than normal. please replace the battery

Dispose of batteries according to local regulations, not dispose as household waste

## Care and Cleaning

- Do not lift up antenna or an external microphone directly.
- Please use lint-free cloth to remove dust and stains from a radio to avoid poor contact
- Please place the cover on headphone jacks when not in use.
- The keypad and sensors should be cleaned carefully with a lintfree cloth moistened with clean water and a mild washing liquid. Do not use strong corrosive solvents for cleaning

## warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including, interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection. against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions. may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined byby turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Regrient or relocate the receiving antenna
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- —Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the ECC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value.

Before a new model device is a available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each device are performed in positions and locations (worn on the body)as required by the FCC.

For face-up.10mm was used for test, this equipment should be installed and operated with minimum distance 10mm. For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that Contains no metal and that positions the handset a minimum of 5mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.