



This **USER MANUAL** is designed to help you get familiar with your new Origaudio true wireless earbuds, Kronies—the best buds you'll ever need!


#### SAFETY POINTERS:

- Although we're known for breaking the rules, we recommend that you follow the ones outlined in this manual. We care about your safety and experience, so read on before using your new earbuds!
- Be aware of any sharp edges, uneven surfaces, or metal parts/accessories included in the packaging—we want to prevent any possible injuries.
- Don't try to modify, repair or dismantle your earbuds! Doing so may

cause undesired effects such as electric shocks, product breakdown, and even fire hazards. All of which are not covered under the warranty.

- Do not use any diluents/solvents to clean your Kronies True Wireless Earbuds.
- Be practical when using your earbuds—don't wear them in situations that require the full attention of your hearing like driving, herding cats, and certainly never ever during boring company meetings (wink).

#### PARTS AND STUFF

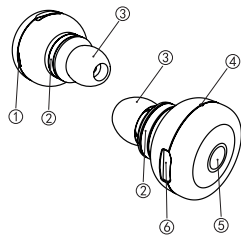


1. Indicator Light
2. Rubber Ring
3. Ear Tips
4. Microphone
5. Multifunction Key
6. USB Input

#### ACCESSORIES

**EAR TIPS:** To make sure you get the best sound possible, try out each sized ear tip to find which one fits best.



**CHARGING CABLE:** This item includes a dual micro USB cable for easy and simultaneous charging of your Kronies.

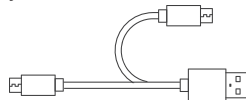

#### GETTING STARTED

We recommend fully charging your earbuds before using them for the first time. Using the included charging cable, plug your earbuds into any USB port with a 5V/1A output.

#### LED INDICATOR LIGHT

Solid RED: Charging

Solid BLUE: Fully charged

Flashing BLUE: Unit is actively playing

Flashing RED: Low battery

Flashing RED/BLUE: Powered on, ready for pairing

#### POWER ON/OFF

**Power On:** Press and hold the multifunction button on both Kronies for roughly 4 seconds until the indicator light flashes blue and you hear a tone.

**Power Off:** Press and hold the multifunction button for 4 seconds on one earbud until the LED flashes red. The other earbud will automatically turn off with it (like magic).

## WIRELESS PAIRING

1. Turn on BOTH earbuds by pressing and holding the multifunction buttons for about 4 seconds until the indicator starts flashing.
2. Keep buds within 6 inches of each other to allow them to pair to one another. (They have abandonment issues). Once the buds are paired, one bud will flash a blue LED slowly, while the other will flash blue and red quickly. This one is the “master” bud. (They also have a complicated relationship.)

3. Once on and paired with one another, proceed to pair your Kronies to your device by selecting “Kronies” on the device list. If you’re not connected right away, simply click “Connect” and if prompted to enter a passkey, enter “0000.”

**NOTE:** Seriously though, don’t try pairing your buds to your wireless device until they have been turned on and paired with one another first. It won’t work.

4. You will know that your buds are paired successfully with your device when they are both flashing a slow blue indicator light.

## CALLING

Only the “master” bud may be used to receive and listen to calls.

Answer/End a call: Press the multifunction button once.

Reject a call: Press and hold down the multifunction button.

Redial a number: Quickly press the multifunction button twice.

## PLAYING MUSIC

To pause your music: Press the multifunction button once while music is playing.

To play your music: Press the multifunction button once to resume your music.

## ADDITIONAL NOTES

- If your Kronies cannot find any pairing device for 5 minutes, they will power off automatically.
- You must charge your wireless earbuds if they have not been used for more than 3 months.
- What’s the point of buds if you can’t share with a

friend? You can jam out with your human bud, but make sure you stay within 20 feet of one another.

## WARNINGS

1. Do not keep or store your Kronies in an area too hot or too cold for a long period of time, as it may cause deformation, reduce battery capacity, and even shorten your Kronies’ lifetime. Room temp is recommended.
2. Do not attempt to disassemble your wireless earbuds for any reason, as it can create a safety hazard.

3. Keep your Kronies and all accessories out of the reach of children and pets, as small parts can fit in the mouth and cause potential choking and/or a bad time in general.
4. Keep your Kronies out of the water! They’re earbuds—not goldfish!

## PRODUCT SPECIFICATIONS

Play time: Up to 4 hours

Wireless Range: Up to 33ft.

Working Voltage: 3.2V - 4.2V

Wireless Frequency Band: 2.4 - 2.48Ghz

Driver: 10mm copper ring loudspeaker

Impedance: 16  $\Omega$

Microphone Sensitivity: -40dB  $\pm$  2dB

Charging: Dual Micro USB

Size: 0.87 in x 1.10in

ORIGAUDIO.COM

**KRONIES**  
TRUE WIRELESS EARBUDS

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.