 


**X-66**

**MAGIC UFO**

 
**MANUAL**  
**使用说明书**

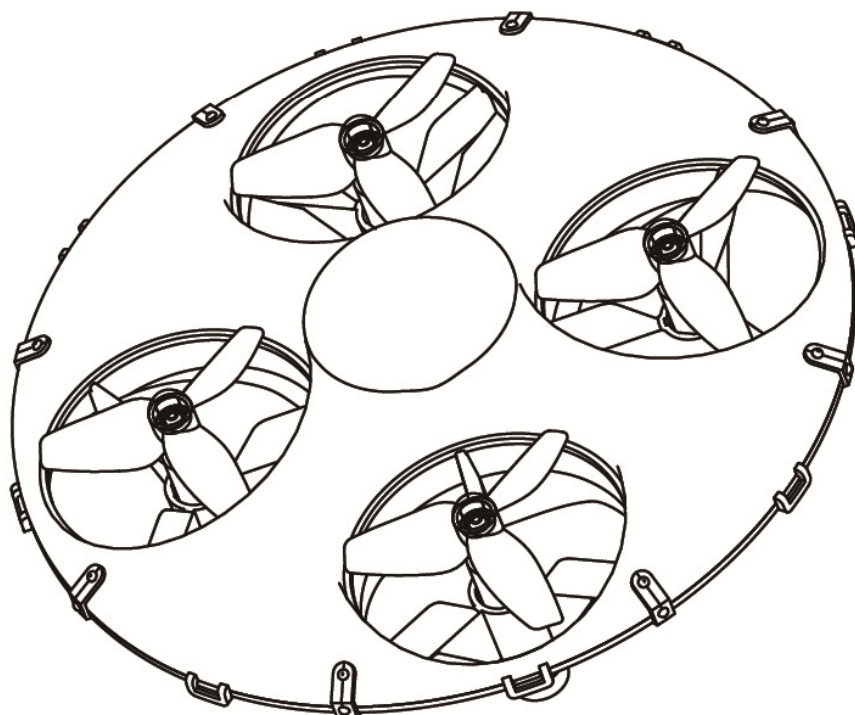

Please read the instruction manual carefully before operation.

操作前请仔细阅读说明书


# THE PART NAME 飞行器各部位名称

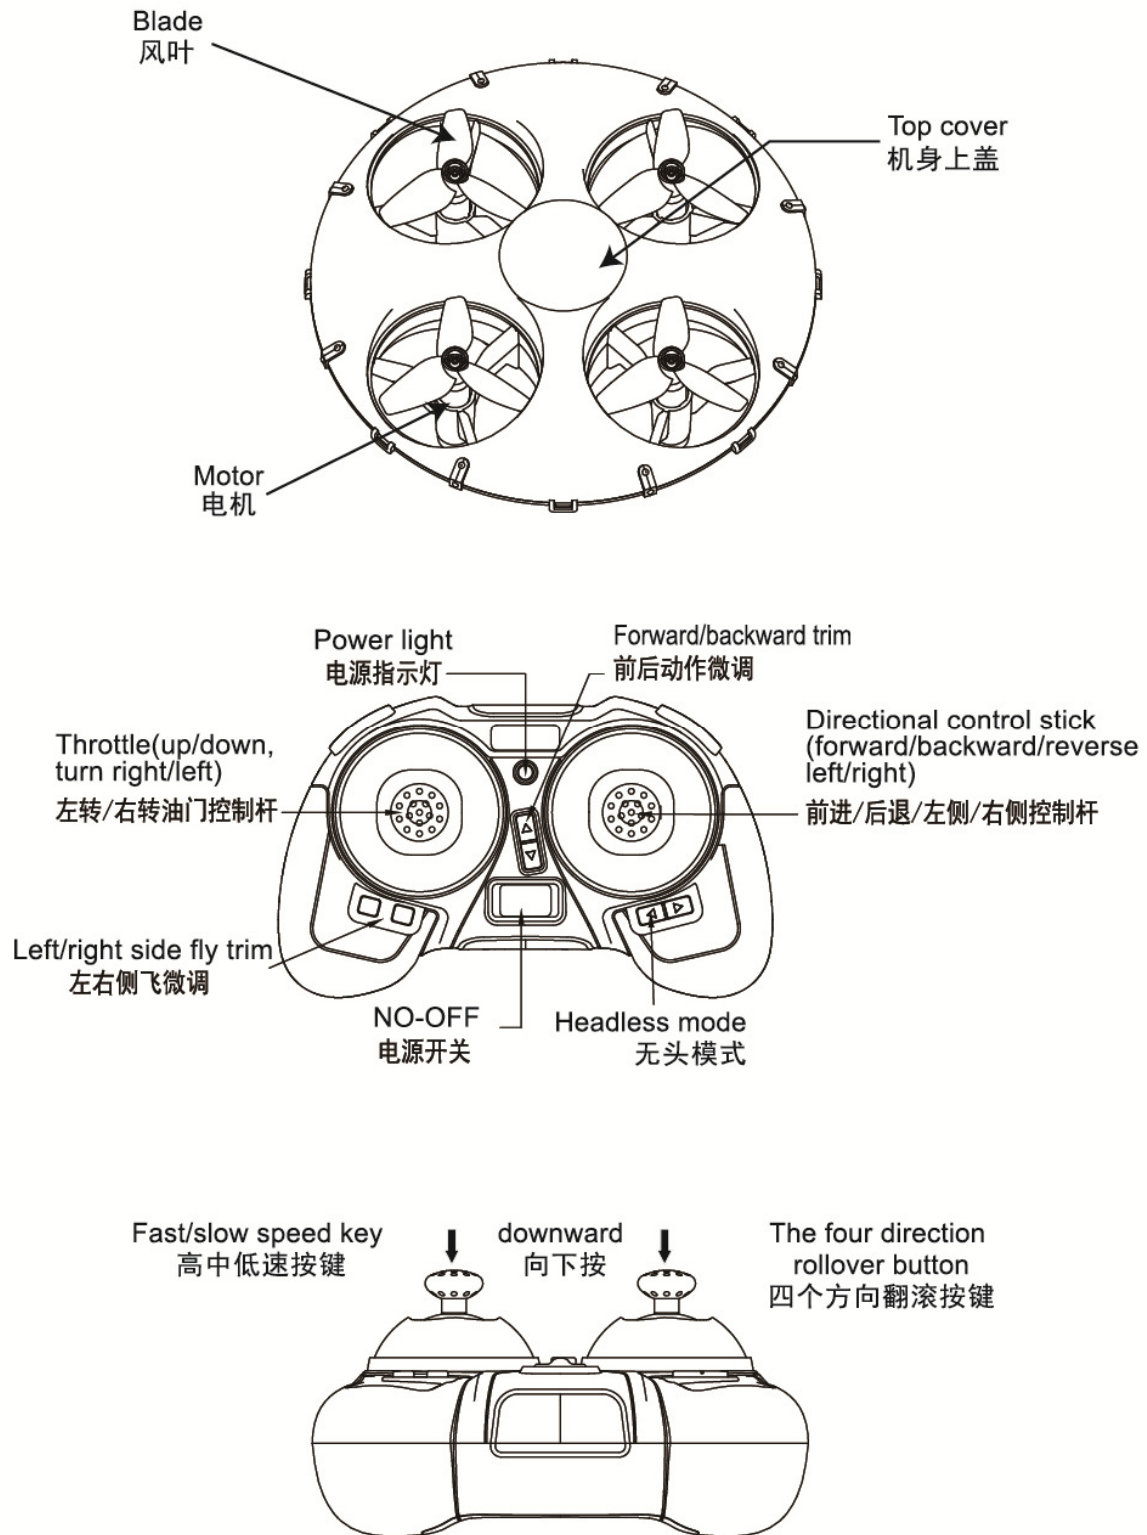

## REMOTE BATTERY INSTALLATION 遥控器电池安装

As shown in figure, remove the remote controller battery cover, in accordance with the battery box of the polarity of the battery, install correctly 2pcs 1.5V "AA" batteries (not included), and then load on the battery cover, tighten the screws.

 
如图：拆下遥控器电池盖，依照电池箱内的电池极性正确装入2粒1.5伏“AA”电池（另购），再装上电池盖，拧紧螺丝。

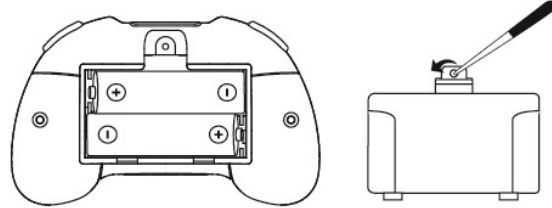

## LITHIUM BATTERY CHARGE DESCRIPTION 锂电池充电说明

Caution: before charging, the aircraft power switch to the "OFF" state

 1. Connect the usb interface with open compture, the usb light is "on" state.
2. Connect other side of USB charge line with aircraft charging socket, the USB light is "off" state.
3. Charging for about 40-50 minutes, the USB indicator lights up, show that the charging is completed, please disconnect all connections and placed in a safe place.

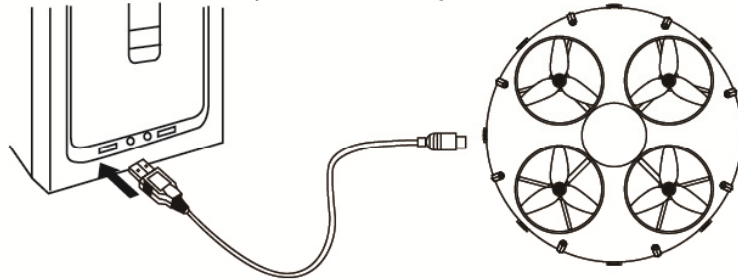

## NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


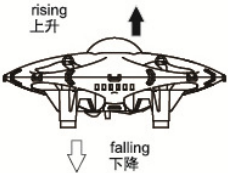
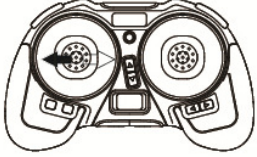





## LITHIUM BATTERY RELATED MATTERS NEEDING ATTENTION 锂电池使用的相关注意事项

- a、 When charging, personnel do not leave and charging time is not long, in the process of charging the battery hot found, immediately stop charge, avoid battery damage or fire.
- b、 Do not put the charging battery beside flammable and explosive articles, when the battery is in use or the charging process once the smell or the battery suddenly become hot, deformation, discoloration and other phenomena, please stop using the battery immediately.
- c、 If the battery has fluid, please don't let it leak to your skin, eyes. If it has, please wash with a lot cold water and see doctor immediately.
  
- d、 Use only original charger to charge configuration of products, and determining the charger voltage in accordance with your local standard.
- e、 Do not put the battery into the fire, microwave oven or a pressure tank.
- f、 Do not use solvents industrial alcohol or other flammable solvents to clean products and charger.
- g、 Products include plastic, electronic components and a battery,do not put such items as the daily garbage disposal, please according to the requirements of local garbage collection, classification.
  
- a、 充电时, 人员切勿离开并充电时间不易过长, 充电过程中发现电池发烫, 请立即停止充电, 避免电池损坏或起火等。
- b、 切勿把电池放在易燃易爆物品旁边充电, 当电池在使用过程中一旦出面异味或电池骤然变热、变形、变色及其它异常现象, 请立刻停止使用该电池。
- c、 如果电池发生泄漏, 请避免液体与皮肤、眼睛接触。若接触到皮肤和眼睛, 请立即用大量冷水冲洗并立刻就医。
- d、 只能使用本厂配置的充电器给产品充电, 并确定充电器的电压符合您当地的标准。
- e、 请勿将电池放入火中、微波炉或压力罐中。
- f、 请勿使用溶剂、工业酒精或其他易燃溶剂对产品 & 充电器进行清洁。
- g、 产品包含塑胶、电子元器件及电池组成, 请勿将此类物品当作日常垃圾处理, 请按照当地垃圾回收要求, 进行分类处理。

## AIRCRAFT MATCHING CONTROL METHOD 飞行器对码操控方法


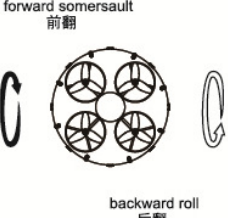


1. The aircraft power switch to the "ON" state and placed on the flat ground,LED lights flashing rapidly, Do not move the fuselage.
  2. To confirm the remote control throttle lever in the lowest, the power switch to the "ON", Hear "drop, drop...Ming" sound.
  3. Aircraft LED light has been lit, That the pairing is successful, Can control the aircraft.
  4. When multi aircraft control, must be individually matched, avoid not to match or match error.
1. 将飞行器电源开关拨至 "ON" 状态并放于平整地面, LED灯快速闪烁且不要移动机身。
  2. 确认遥控器油门操纵杆处于最低, 将电源开关拨至 "ON" 状态, 听到 "滴滴... 鸣" 声。
  3. 飞行器LED灯常亮, 表明对码成功, 可准备操控飞行器。
  4. 当多部飞行器同时操控时, 必须逐个对码, 避免对不上或对错造成的危险。
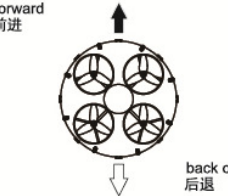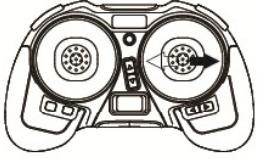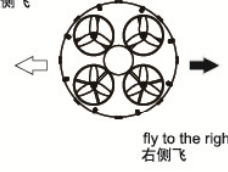
## THE NORMAL CONTROL METHOD OF AIRCRAFT 飞行器的正常操控方法

		<p>When the throttle lever is pushed upward, the aircraft rising; 当油门操纵杆向上推, 飞行器上升;</p> <p>When the throttle lever is pushed downward, the aircraft falling. 当油门操纵杆向下推, 飞行器下降。</p>
		<p>When the throttle lever is to the left, the aircraft turn left; 当油门操纵杆向左推, 飞行器左转;</p> <p>When the throttle lever is to the right, the aircraft turn right. 当油门操纵杆向右推, 飞行器右转。</p>
		<p>When the throttle lever is pushed upward, the aircraft forward; 当油门操纵杆向上推, 飞行器前进;</p> <p>When the throttle lever is pushed downward, the aircraft back off. 当油门操纵杆向下推, 飞行器后退。</p>
		<p>When the throttle lever is to the left, the aircraft fly to the left; 当油门操纵杆向左推, 飞行器左侧飞;</p> <p>When the throttle lever is to the right, the aircraft fly to the right. 当油门操纵杆向右推, 飞行器右侧飞。</p>

Tip: press the "speed switch" can realize fast, medium speed, slow switching.  
提示: 下按“速度切换键”可实现飞行器快速、中速、慢速的循环切换。

## THE CONTROL METHOD OF AIRCRAFT ROLLOVER 飞行器的翻转操控方法

		<p>Flip button press once, a direction rod to push up release quickly, aircraft forward somersault; “翻转键”下按一次, 方向操纵杆向上推瞬间放开, 飞行器前翻。</p> <p>Flip button press once, a direction rod to push downward release quickly, aircraft backward roll; “翻转键”下按一次, 方向操纵杆向下推瞬间放开, 飞行器后翻。</p>
		<p>Flip button press once, a direction rod to push to left release quickly, aircraft roll left; “翻转键”下按一次, 方向操纵杆向左推瞬间放开, 飞行器左翻。</p> <p>Flip button press once, a direction rod to push to right release quickly, aircraft roll right; “翻转键”下按一次, 方向操纵杆向右推瞬间放开, 飞行器右翻。</p>

## HEADLESS MODE 无头模式

The LED lights on drone will be flashing after entering in headless mode. Before entering in headless mode, please place drone in front, set tail facing the player, nose right ahead. This direction will be considered as 'forward' always as long as forward signal is given from the remote control, no matter where the drone's nose is pointing to. The same with 'backward' direction. The player's left side will defined as left, the player right side will be defined as right. No Matter where the drone's nose is pointing to, as soon as you push throttle up, the drone will go forward, go right as soon as you push throttle to right, in the same time, the drone will be spinning slowly. The drone will be out of headless mode when you press the headless mode again.

四轴上面的灯光进入无头模式后将会闪烁, 当你要进入无头模式时, 请把四轴前方放在前面, 尾巴正对着操控者。同时四轴前面正对前方。这个方向将会认定为“前面”, 当四轴接受遥控器前进信号, 不管四轴前方指向哪里, 结果都是操控者的前方认定为: “前面”“操控者后面认定为”后面“同理, 操作者左右都认定为“左右”在无头模式。不管四轴的指向哪个方向, 只要你向前推遥控器上的操纵杆, 四轴就会向前, 你推向右, 四轴就会向右。同时四轴会缓慢旋转。你再按一次无头模式按键, 四轴就会退出无头模式!

### WARNING 警告:

- Please follow the instructions for correct installation and use, some parts are assembled by an adult.  
请遵照说明书或包装说明要求正确安装和使用, 部分零件由成人组装。
- The product contains small parts, eating or possible choking hazard.  
产品含有小零件, 可能产生误食或窒息危险。
- Please put away the packaging material, so as not to cause harm to children.  
请及时将包装材料收起, 以免对儿童造成伤害。
- Need to periodically check the charger, wires, plugs, shell and other components, there are damaged, should stop using, complete until the repair.  
需定期检查充电器、电线、插头、外壳和其它部件, 发现有损坏时, 应停止使用, 直至恢复完好。
- Charger, battery box charging device needs to be inserted into the specified power and labeling of the same.  
充电器、电池盒等充电装置需插入与产品标示相同的指定电源中。
- Use only original configuration charger, charger is not a toy.  
只能使用原厂配置的充电器, 充电器不是玩具。
- In the clean toys shall be disconnected from the battery charger.  
清洁玩具前应当与充电器断开。
- Non rechargeable batteries are not rechargeable.  
非充电电池不可充电。
- To charge the rechargeable battery, need adult care.  
给充电电池充电时, 需成人监护。
- Do not mix old and new batteries or batteries of different types, the exhaustion of battery should be removed timely.  
不可混用新旧电池或不同类型的电池, 用尽的电池应及时取出。
- Do not put the battery short circuit, decomposition, Falling from high altitude or thrown into the fire.  
切勿将电池短路, 分解、高空跌落或投入火中。
- Do not use the product for a long time, remove the battery.  
长时间不操控产品, 请取出电池。
- Do not touch the rotating parts, avoid harm to human body.  
请勿用手触摸转动部件, 避免对人身造成伤害。
- Please don't impact or dropping aircraft and remote control.  
请勿严重撞击或跌落飞行器和遥控器。
- Please use a clean soft cloth to clean the product.  
请用干净柔软的布清洁此产品。
- The user has the responsibility to ensure that the product will not cause harm to themselves or others. caused by improper operation of injuries and property on their own or others' safety caused by the loss, manufacturers and dealers do not bear any responsibility.  
使用者有责任确保产品不会对自身或他人造成伤害, 因操作不当对自身或他人安全造成伤害和财产损失, 制造商和经销商不承担任何责任。
- The packaging and instructions contain important information of products, please be retained.  
本包装及说明书含有产品重要信息, 请予以保留。

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received,  
Including interference that may cause undesired operation.

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.