Constant 10000 mAh Wireless Power Bank with LED Display

Instruction Manual 7121-46 (2)

- Features:
 1. LED Display
 2. USB Output 1
 3. Micro USB Input
- USB Output 2

5. ON/OFF Button 6. Wireless Charging Pad What's included:

- 1 x 10000 mAh wireless Power Bank 1 x USB to Micro-USB charging cable 1 x Instruction Manual

Tech Specifications

- 10000mAh polly-li battery
 Input power: 5V/2A
 USB 1 Output power: 5V/1A
 USB 2 Output power: 5V/2.1A
 Wireless Output: DC 5V/0.8A

LED Indicators:

ON/OFF Button: Press once to view the remaining power capacity.

Instructions:

- 1. Charging the power bank: Unarging the power bank:
 Using USB to Micro-USB charging cable, insert the USB Charging cable into a certified USB AC adapter or USB port of a computer to begin charging.
 When Charging, LED Indicator will illuminate BLUE, Once fully charged all LED lights will be illuminated.
 Charging with the power bank through.
- Charging with the power bank through cable:
- a. The power bank has a 2xUSB output ports, (USB1) has a maximum out 1A and (USB2) has a maximum out 2.1A. b. Connect the Micro-USB cable to your
- mobile phone/device using the appropriate connector. Connect the other end of the connector. Connect the other end of the power bank, BLUE LED Indicator will illuminate when charging.

 c. Remove the USB cable from your mobile device when it is fully charged.

 3. Charging Mobile phones and other electronic devices with wireless charging.

- a. Hold ON/OFF Button till the RED LED Hold ON/OFF BUTON till the RED LED illuminates, Place wireless charging enable device on Wireless Charging Pad, LED will illuminate GREEN when charging. Hold ON/OFF Button till LED lights turn off to turn OFF Wireless charging.
- Note: In order to charge devices, use only the accessory cable or the cable included with your own device by the manufacturer

SAFETY PRECAUTIONS:

WARNING-When using this product, basic precautions should always be followed,

- precautions should always be followed, including the following:

 1. Read all the instructions before using the product.

 2. Charge the power bank fully before initial use. The unit's full performance is achieved only after 2 or 3 completed charge and discharge rvcles
- cycles.
 3. To reduce the risk of injury, close supervision is necessary when the product is used near children.
 4. Do not expose the device to moisture.
 5. Do not use the device in excess of its
- output rating. Overload outputs above rating may result in a risk of fire or injury.
- Do not use the device if damaged or
- Do not use the device if damaged of modified.
 Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- 8. Do not disassemble the device. Take it to
- Do not disassemble the device, lake it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury. Do not expose the device to fire or excessive temperature. Exposure to fire or temperatures above 212°F may cause explosion. explosion.
- 10. Have servicing performed by a qualified repair person using only identical replacement parts.

 11. This will ensure that the safety of the product is maintained.

FCC Statement:

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not exlicitly approved by the party responsible for compliance could void the user's authority to operate this equipment. Note: this equipment as been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radate accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reonent or relocate the receiving antenna.

- to correct the interference by one or more or me tollowing measures:

 Reorient or relocate the receiving antenna.

 Reorient or relocate the equipment and receiver, loncease the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for halo,

help.
The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. During the operation of device a distance of 15 cm surrounding the device and 20 cm above the top surface of the device must be respected.

WIRELESS CHARGING ENABLED DEVICES:

DEVICES:
iPhone 8/8Plus/X, Samsung Galaxy S8/
S8+/S7/S7 Edge/S6/S6 Edge, Nokia Lumia
1020/920/928, HTC BX, HTC Droid DNA, HTC
Rzound, HTC Incredibly 4G LTE, Moto Droid
Turbo, Motorola Moto 360 Smart Watch, Moto Droid Maxx, Droid Mini, Google Nexus 6/4/5/7 (2013), LG D1L, LG LTE2, LG G2 (Verizon), Blackberry Z30 (Verizon)

Made in China

170*90MM