

OUTSIDE

FOLD

SAFETY PRECAUTIONS:

WARNING—When using this product, basic precautions should always be followed, including the following:
 Read all the instructions before using the product.
 Charge the power bank fully before initial use. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
 To reduce the risk of injury, close supervision is necessary when the product is used near children.
 Do not expose the device to moisture.
 Do not use the device in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury.
 Do not use the device if damaged or modified.
 Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
 Do not disassemble the device. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury.
 Do not expose the device to fire or excessive temperature. Exposure to fire or temperatures above 212°F may cause explosion.
 Have servicing performed by a qualified repair person using only identical replacement parts.
 This will ensure that the safety of the product is maintained.

FCC STATEMENT:

This device complies with part 15 and part 18 of the FCC Rules. Operation is Subject To the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not explicitly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Note: this equipment has been tested and found to comply with the limits for a Class B digital device,

pursuant to part 15 and part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. During the operation of device a distance of 15 cm surrounding the device and 20 cm above the top surface of the device must be respected. This device complies with Part 18 of the FCC Rules. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Increase the separation between the equipment and any other radio device.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

INSTRUCTIONS

UP-9107
 Stockton Wireless Charging Refillable Journal

BACK


FRONT

INSIDE

FOLD

2.000"
 50.800 mm

- | | |
|-----------------------------|------------------|
| 1. Pen Loop | 5. Card Pockets |
| 2. Phone & Tablet Stand | 6. ON/OFF Button |
| 3. Wireless Charging Pocket | 7. Journal Book |
| 4. Cable Organizer | |

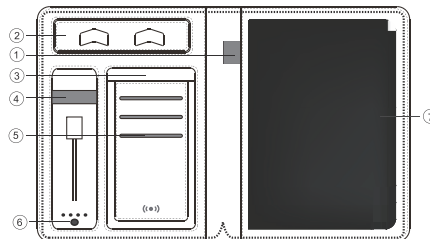

* Functions only with wireless charging compatible devices

SPECIFICATIONS:

Battery Type: Lithium Polymer
 Battery Capacity: 5000mAh
 Input: 5V/2.0A
 USB Output: 5V/2.1A
 Wireless charging Output: 5V/1.0A , 5W

INSTRUCTIONS:

Charging the power bank: Insert provided Micro-USB charging cable into power input port. Insert the USB end of the cable into a certified USB AC adapter or USB port of a computer to begin charging. When Charging, LED Indicator will flash BLUE. Once fully charged all LEDs will illuminate BLUE.

Charging mobile phones and other electronic devices using appropriate cable: Connect the appropriate charging cable to your phone or mobile device. Connect the other end of the cable to the USB power output and press power button. BLUE LED Indicator will illuminate when charging. Remove the USB cable from your mobile device when it is fully charged.

Charging Mobile phones and other electronic devices with wireless output. Press ON/OFF Button until the BLUE LED indicator turns on. Place wireless charging compatible device in Wireless Charging Pocket. LED will illuminate BLUE when charging. Remove device from Wireless charging pad once device is fully charged. Charging pad will turn OFF when idle for 20 seconds.

Note: In order to charge devices, use only the accessory cable or the cable included with your own device by the manufacturer.

FRONT

BACK

3.500"
 88.900 mm

7.000"
 177.800 mm