

**Karaoke USA**

# **DVD / MP3G / CDG KARAOKE & BLUETOOTH MEDIA PLAYER**

## User's Guide

MODEL:  
GF842



Smart Device not included

Before operating this product, please read these instructions.

# Contents

---

 
Warnings and Precautions.....	01
Important Safety Instructions.....	02
Caution.....	03
What's in the Gift Box.....	04
Song List on your Disc.....	05-06
Features.....	07
Front Panel Illustration.....	08
Top Panel Illustration.....	09
Connecting to a TV Set.....	10
Smart Device connection.....	10
Remote Control.....	11
Remote Control Operation.....	12-15
How to Play a Disc.....	16
MP3G Disc and MP3G Format Music Playback.....	17
Play Bluetooth Music.....	18
Play SD Card and USB.....	19
Record Operation Procedures.....	20
Playback the Recorded File.....	21
The Setup Menu System.....	22-23
Specifications.....	24
Troubleshooting.....	25-26
Notes on SD Card.....	27

## Warnings and Precautions

**WARNING:** To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

**CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

“Caution Marking and Rating Label” is affixed under the lid or on the bottom of the unit with a mass not exceeding 7kg.

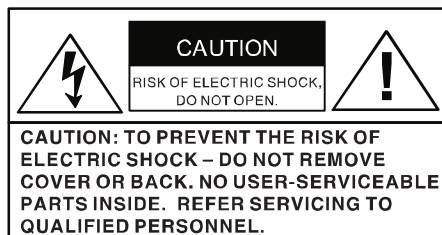

This symbol is intended to alert you to the presence of uninsulated, dangerous voltage within the unit's enclosure that might be of a sufficient magnitude to constitute a risk of electric shock. DO NOT OPEN THE UNITS CASE.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

### SAFETY

For units with an insertable AC Power Adapter cord set:

- The power adapter should remain operable for its intended use. Disconnect the AC Power Adapter if you are not intending to use the unit for a long period of time.
- When connecting or disconnecting the AC Power Adapter Cord, grip the plug and not the cord itself. Pulling the cord may cause damage and create a hazard.

For units with a Rechargeable Battery:

- Do not expose batteries to excessive conditions – extreme cold, heat, sun or fire.

### MOISTURE AND CONDENSATION

If the unit is exposed to moisture and extreme cold temperatures and moved to a warm environment, condensation may form on the units internal components. Under these circumstances, turning the power “ON” may cause damage to the unit or cause harm to the user. Allow the unit to stand in a warm environment for 1 to 3 hours and allow the unit to air dry safely.

### WHEN IN USE

- Do not use this unit in conditions that are extreme – hot, cold, dusty or humid.
- Do not restrict the air flow of the unit by placing it on a soft surface like a bed, carpet or covering.

### FCC INFORMATION

This unit complies with part 15 of the “FCC Rules.” Operation is subject to the following conditions:

1. This unit may not cause harmful interference.
2. This unit must accept any interference received, including interference that may cause undesirable operation.



Double insulation.  
This is a Class II apparatus.

# Important Safety Instructions

**1. Read These Instructions:** All safety and operations manual should be read before the product is operated.

**2. Keep These Instructions:** The safety and operations manual should be retained for future reference.

**3. Heed All Warnings:** All warnings applicable to the unit and in the operations manual should be adhered to.

**4. Follow All Instructions:** All operations manual should be followed.

**5. Water and Moisture:** Do not use this unit near water. For example, do not use near a bath tub, wash bowl, kitchen sink, or laundry tub. Do not use this unit in a wet basement or near a swimming pool or similar location. The unit shall not be exposed to dripping or splashing and no objects filled with liquids (ex: vases), shall be placed on or near this unit.

**6. Cleaning:** Clean the unit only with a dry cloth. Unit must be unplugged from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners on the unit.

**7. Ventilation:** Slots and openings in the cabinet of the unit are provided to ensure reliable operation and ventilation and to protect the unit from overheating. The openings must not be covered and should never be blocked by placing the product on a soft surface like a bed, sofa, or rug. This unit should not be placed in a built-in installation like a bookcase or rack, unless proper ventilation is provided.

**8. Heat:** Do not install the unit near any heat source like a radiator, heat register, stove or other device that produces heat, including amplifiers.

**9. Grounding or Polarization:** If applicable, do not disable or circumvent the polarized or grounding-type plug. A polarized plug has 2 blades with 1 wider than the other. A grounding-type plug has 2 blades and a 3<sup>rd</sup> grounding plug. The wide blade, or the 3<sup>rd</sup> prong, is provided for your safety. If the provided plug does not fit into an outlet, consult a qualified electrician for replacement of this outlet.

**10. Power Cord Protection:** Protect the power cord from being walked on, pinched or cut or damaged in any

way. If any damage occurs, consult with a trained technician for repair.

**11. Accessories:** Only use accessories specified and approved by the manufacturer. Do not place this unit on an unstable cart, stand, tripod, bracket or table that has not been previously approved by the manufacturer. This unit may fall, causing serious injury to a child, adult or to the unit itself. Any mounting of the unit should be done within the manufacturer's guidelines.

**12. Transporting:** If a pre-approved device is used to transport this unit, caution and care must be observed and practiced to avoid damages. Make sure the device and unit together are stable before moving.



PORTABLE  
CART  
WARNING

**13. Lightning:** Unplug this unit and disconnect the antenna or cable system during lightning storms or when unused for long periods of time. This will help prevent damage to the unit due to lightning and power line surges.

**14. Servicing:** Do not attempt to service this unit yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to a qualified service technician.

 
**15. Power Sources:** Only connect to the type of household power supply as indicated in the operations manual and "Caution Marking and Rating Label." If you are not sure of the type of power supplied to your home (or location of the outlet the unit is being plugged into), consult with the local power company. For units intended to operate from battery power, or other sources, refer to the manufacturer's operations manual.

**16. Overloading:** Do not overload wall outlets or extension cords. This can result in a risk of fire or electric shock and may be hazardous.

**17. Foreign Material:** Protect this unit from intrusion of any foreign substances like dirt, water, moisture and insects. Do not force any foreign materials or chemicals into this unit. This could result in a risk of fire or electric shock and may be hazardous.

**18. Replacement Parts and Safety Check:** When replacement parts are required, be sure the service technician has used replacement parts specified and approved by the manufacturer. Ask the service technician to perform safety checks to ensure the proper operation to avoid possible fire, electric shock or other hazards.

**19. Outdoor Antenna Grounding:** If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. If there is any doubt to the proper grounding of these systems, contact a qualified electrician to inspect your location.

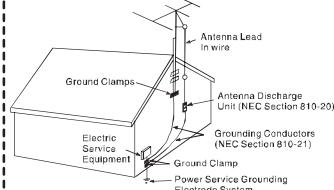

**20. Wall or Ceiling Mounted:** The unit should be mounted to a wall or a ceiling only as recommended by the manufacturer.

**21. Disconnect Device:** Make sure all disconnect devices are in proper working condition and readily available in the event of an emergency or if power "off" is needed quickly.

**22. Protective Attachment Plug:** If applicable, this unit may be equipped with an attachment plug having overload protection. This is a safety feature. See the operations manual for replacement or resetting of this protective device. If replacement of the plug is required, be sure the qualified service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

**23. Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them may be fatal. Always consult with your local power company before installing an outside antenna.

## Caution

---

- Please use the original box and packing materials for safe transportation of this product.
- It is normal for the cover and rear panel to become warm after the player has been operating for an extended period of time.
- Do not move this product during playing. Doing so may cause damage to the pickup and the disc.
- Press OPEN CD DOOR button to open tray. Do not pull the tray. Do not touch tray when opening or closing.
- USB Flash Devices and SD Cards should be formatted to FAT32 on your computer before use.
- When EQ function /key control is turned on, the Recording effect/result would not be ideal.
- Do not use hard or sharp instruments to touch the TFT Screen, it may scratch or damage its surface!

## What's in the Gift Box

---



GF842 X1



Microphone x 2



RCA Cable x 1



 
Smart Device  
Holder x 1




AC Adaptor x 1  
DC12V/2A



Remote  
Control x 1

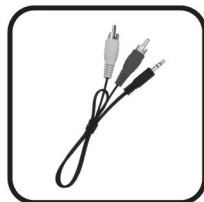

Cable for  
Smart Device x 1

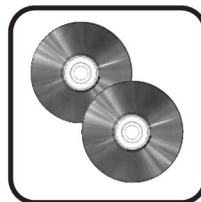 

MP3G Demo  
Disc x 2




User's Guide x 1



Warranty Card x 1

## Features

 
---

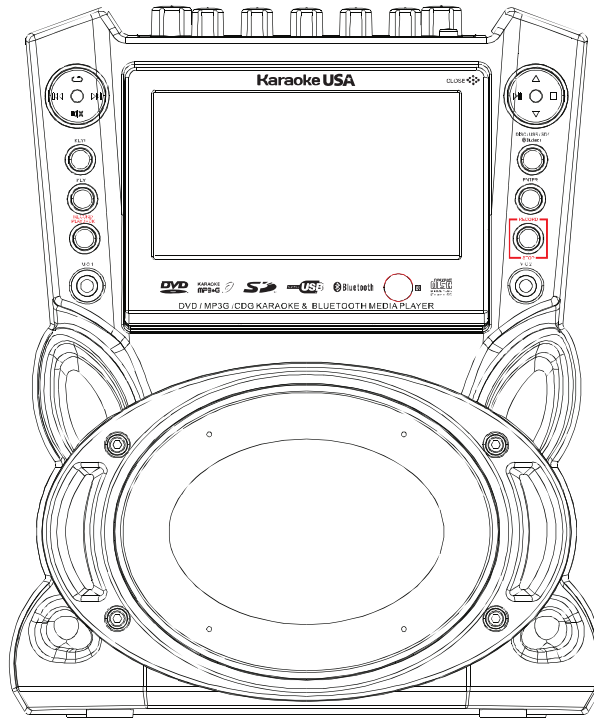

- DVD/CD+G/MP3+G Karaoke Player
- 7" TFT Color Screen
- Record CD+G/MP3+G Video/Audio mix
- Record and Record Instant Playback
- 35W Peak Power Output
- Remote Control
- 2 Microphones
- 2 Microphone Inputs and Holders
- USB/SD Card Slots ( up to 128GB)
- USB Charger for Smart Device
- LED Lightings that Synchronize and Flash with the rhythm of Music
- Analog Echo Control
- Bluetooth wireless connection and Speaker
- Balance Control
- Digital Key Control
- Audio and Video Input
- Audio and Video Output
- Audio/Video RCA Cable
- 3.5mm to RCA Cable
- AC 100V~240V Adaptor
- DC 12V Car Adaptor (Optional)

*\*Can be ordered online: [karaokeusa.com](http://karaokeusa.com)*

## Front Panel Illustration

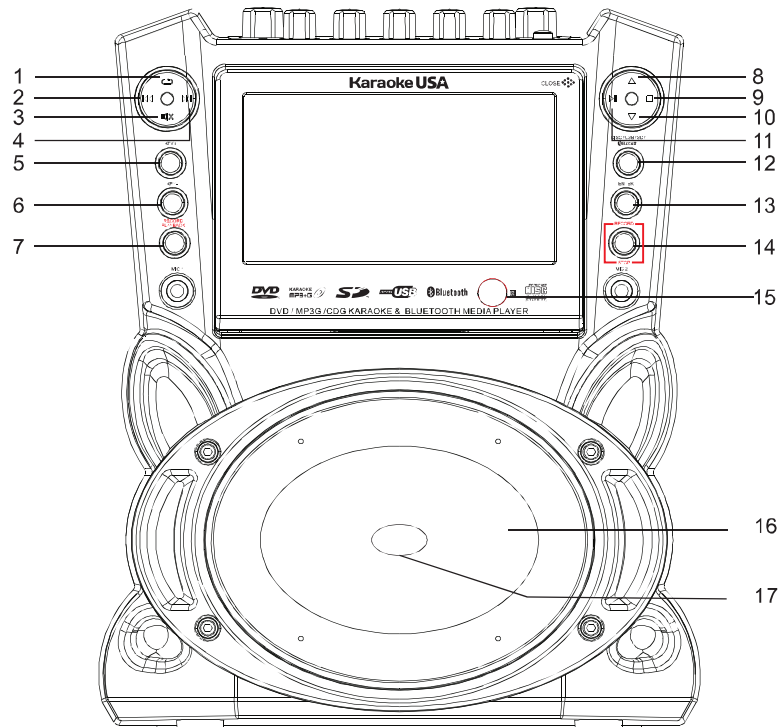 


- |  |   |
|--|---|
| 1.  : Repeat the Song Playing                      | 10.  : Navigate DOWN in the Menu  |
| 2.  : PREVIOUS Song                                | 11.  : Play or Pause  |
| 3.  : Mute the Audio Output                        | 12. DISC/SD/USB/Bluetooth: Choose Content Source Disc, SD, USB or Bluetooth |
| 4.  : Next Song                                    | 13. Enter: Select a Menu Item   |
| 5. Key + : Raise the Tone                          | 14. RECORD/STOP: Record Start & Stop  |
| 6. Key - : Lower the Tone                          | 15.  : Remote Control Infrared Receiver                                     |
| 7. Record Playback:<br>Playback the Recorded Track | 16. Speaker: Audio Speaker  |
| 8.  : Navigate UP in the Menu                      | 17. Flashing LED Lights   |
| 9.  : Stop   |   |



## Top Panel Illustration

 
---

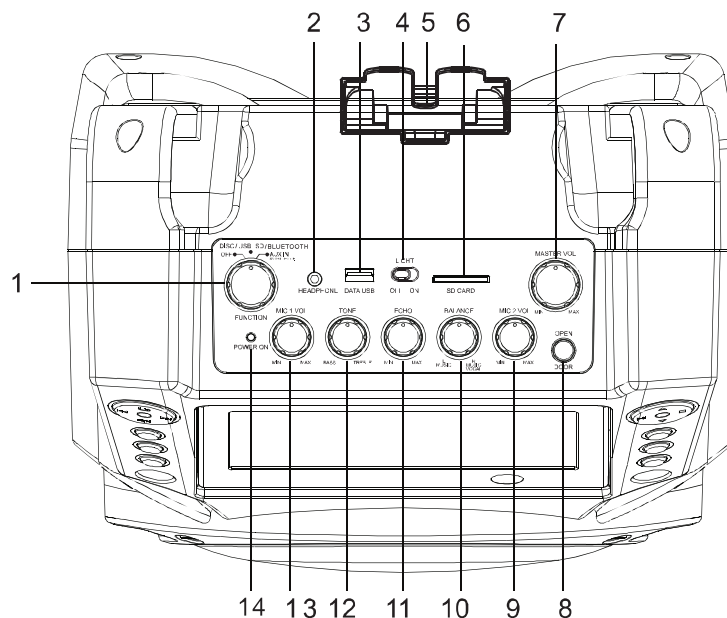


1. POWER & FUNCTION: Switch the player ON/OFF, Select Play mode in Disc, USB, SD,Bluetooth or AUX IN.
2. HEADPHONE: Standard 3.5mm headphone jack
3. USB SLOT: For playing / recording music and vocal mix
4. LIGHT ON/OFF: Flashing LED Lights ON/OFF Button
5. CRADLE: Removable Personal Player Cradle for holding Smart Devices and playing / charging
- 6.SD CARD SLOT: For playing/recording music and vocal mix
7. MASTER VOL: Master Volume Control
8. CD DOOR OPEN BUTTON: Open CD door
9. MIC 2 VOL: Volume Control for Microphone 2
10. BALANCE: Music only/music and vocal
11. ECHO: Add an echo effect to singer's voice
12. TONE: Adjust the Level of Treble and Bass
13. MIC 1 VOL: Volume Control for Microphone 1
14. POWER LED: Power ON/OFF indicator

## Connecting to a TV Set

 To watch lyrics on your TV screen, connect the yellow (video), red (audio) and white (audio) RCA ends into the matching color jacks on the TV. To view lyrics, you must select an input channel on your TV (Video1, Video 2 , Aux, etc.)

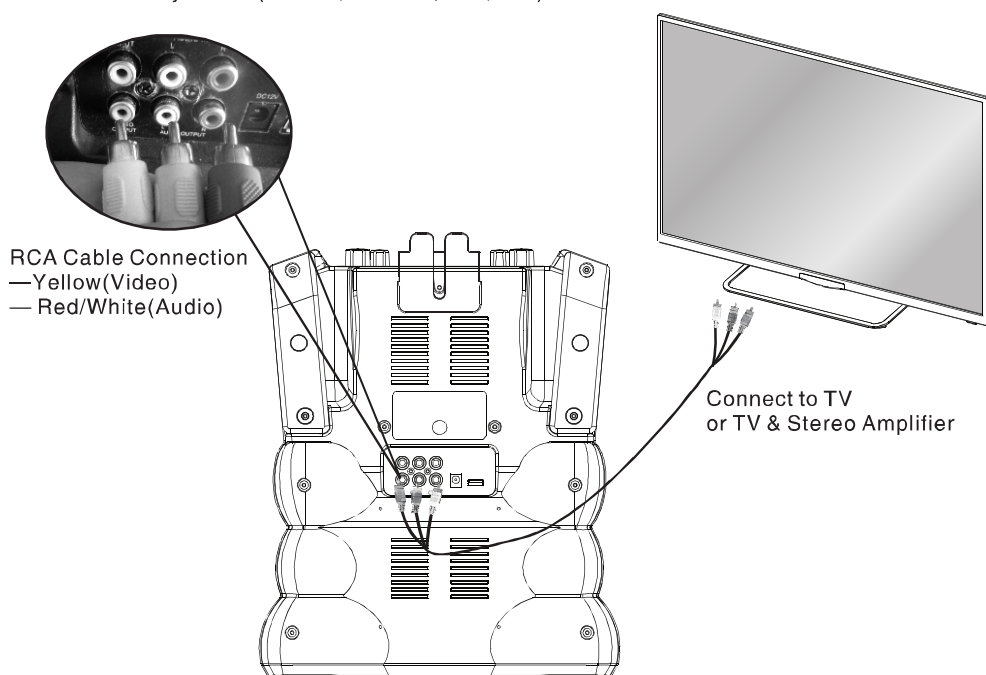


## Smart Device Connection

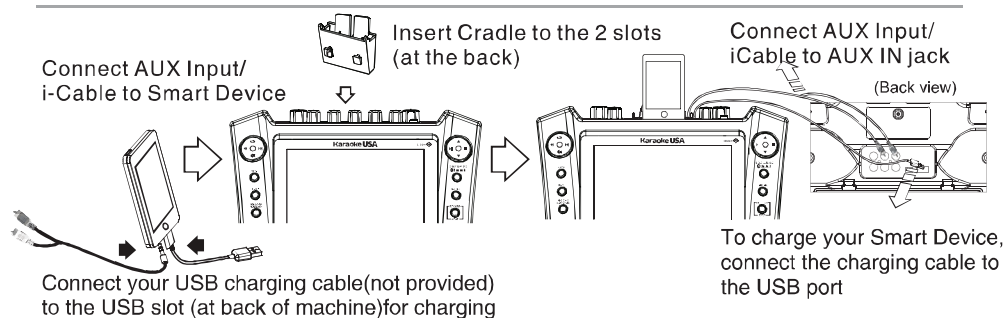 

### NOTES.

- 1.If connecting to a surround sound or enhanced sound system, you may have to temporarily disable the sound effect(s). Sound systems manipulate incoming audio to give you the desired sound effect. This effect may cause two unwanted results: the timing between the audio and lyrics displayed on screen, and an echo affect on the audio.
- 2.To play music from your Smart Device, connect your device's headphone jack to the machine 3.5mm AUX-IN jack, then select AUX IN mode on the machine. Audio will play on machine speaker. You will not see lyrics on the machine's screen from your device.
 
## Remote Control

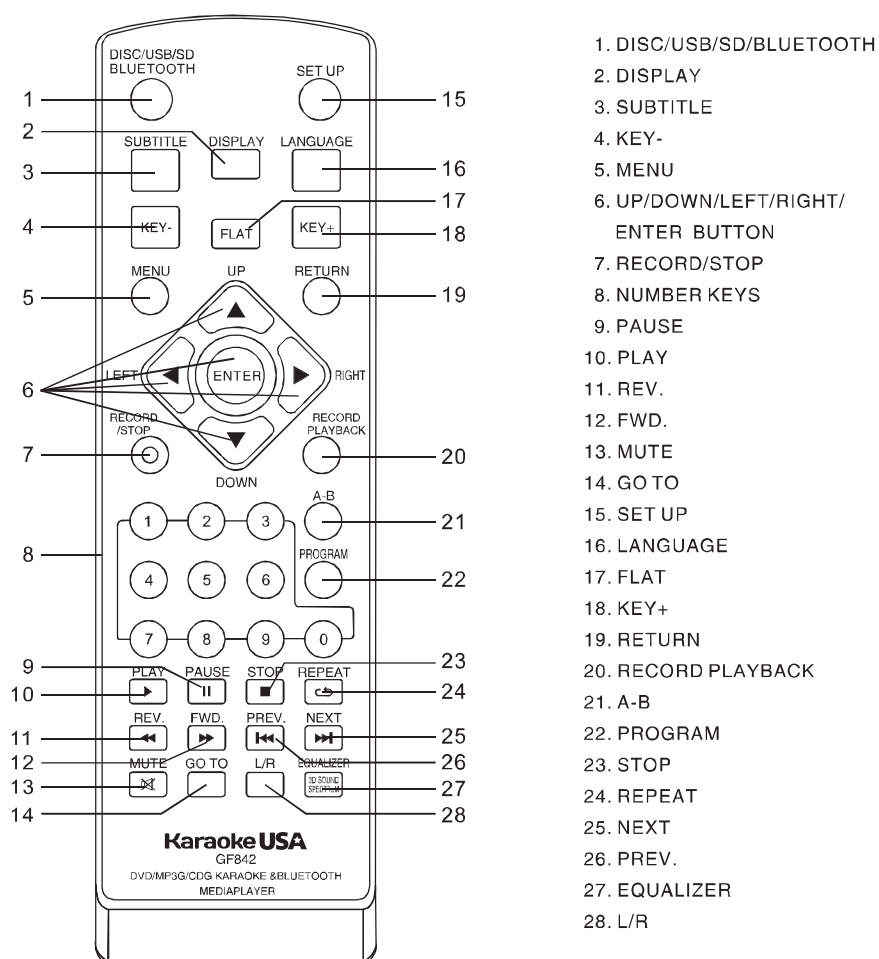


### NOTES:


1. In this Manual, the directional symbols “◀▶▲▼” are NAVIGATION ARROWS on the Remote Control.
2. To operate any of the Remote Control functions, you must press and enter the relevant DISC, SD, USB mode.

## Remote Control Operation

 1. **DISC/USB/SD  
BLUETOOTH** ● Press to change media in [ DISC->USB->SD->BLUETOOTH]. Press and Select.



 2. **DISPLAY** ● During playback, press DISPLAY to show the current time counter position.

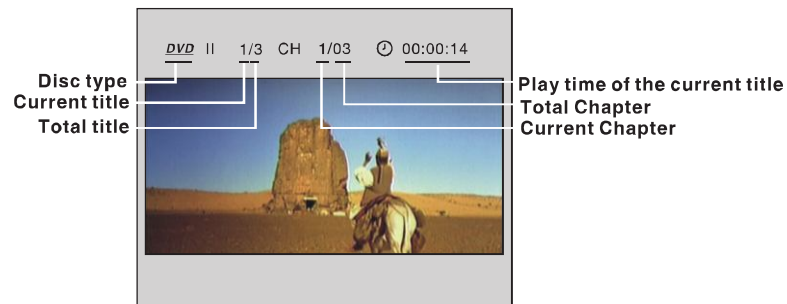

Press DISPLAY to show the audio and subtitle message menu.



3. **SUBTITLE** ● Press to display the subtitles.  
(Only applicable in movie, depends on your disc or your download file.)



4. **KEY-** ● Transpose the music key down.



5. **MENU** ● During DVD playback, press MENU to return to the program menu.  
Note: This function is subject to the disc.

 








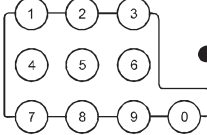

6. ● Used for navigation within a selection menu.


 
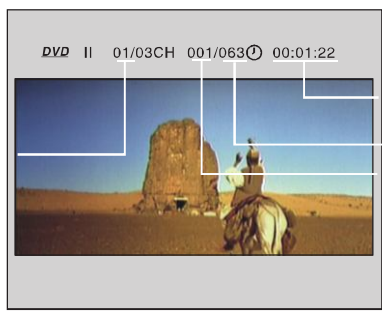 
7. **RECORD  
/STOP** ● Record your vocal and music to the USB or SD card.  
(Note: USB or SD card must be inserted before start recording. DVD disc is not available for recording.)



## Remote Control Operation

8.  ● Use to specify a track number for playing or programming.
9.  ● Press PAUSE during playback to pause.
10.  ● Press PLAY to start playing.
11.  ● During CD/DVD playback, keep pressing  to scan reverse. The player will review the disc at 2,4,8,20 times and off normal speed as follows:  






Press PLAY to resume normal playback.
12.  ● During CD/DVD playback, keep pressing  to scan forward. The player will review the disc at 2,4,8,20 times and off normal speed as follows:  


Press PLAY to resume normal playback.
13.  ● Press MUTE to cut the Audio output.  
 ● Press MUTE again to resume normal Audio output.
14.  ● During playback, press GO TO show the current time counter position.  






Enter number to choose the title

 
Enter number to choose the Play time

Total Chapter

 
Enter number to choose the chapter.
15.  ● Press to setup the TV settings according to your needs.
16.  ● To select the movie language.
17.  ● Set the music key as normal.
18.  ● Transpose the music key up.

## Remote Control Operation


 


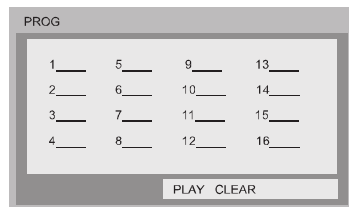
 
19.  ● Return to a Menu screen while playing.
20.  ● Press this button to listen the music that you **JUST** recorded.
21.  ● Press A-B first to set location A: REPEAT: A-, press again to set location B, and then playback will repeat during the two locations: REPEAT: A-B. Press A-B the third time to cancel the function and return to normal playback: REPEAT: CANCEL.
22.  ● This is the function provide you to listen the tracks in a desire order.  
While [PROGRAM] is on, press ENTER to display the [Program submenu]:

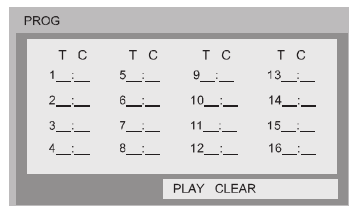

Input the track numbers in the order you would like them to play. When you have finished, press **PLAY** then press **ENTER** to play the tracks in the new programmed order. Select **CLEAR** then press **ENTER** to clear all numbers



Input the title and chapter numbers in the desired order. Then press **PLAY** then press **ENTER** to play the chapters in the order you have set. Select **CLEAR** then press **ENTER** to clear all the numbers.


23.  ● Press **STOP** once during playback to stop and hold playback.  
● Press **PLAY** to resume playback from the point you pressed **STOP**.  
● Press **STOP** twice to stop playback completely.
24.  ● Press this key to play selected item repeatedly.  
The screen shows as below:  
REP: [OFF]   REP: [REP1]   REP: [REP ALL]
25.  ● Press **NEXT** to skip to next chapter or track.
26.  ● Press **PREV.** to skip to previous chapter or track.
27.  ● This key is set the different sound effect of the music.
28.  ● Activates the multiplex function, which switches to **NORMAL** (stereo), **L-ch** monaural and **R-ch MONAURAL**.

## Remote Control Preparation

 
---

### Battery installation


#### 1. Open the Cover

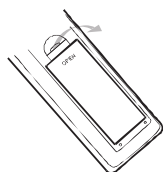


#### 2. Install Batteries (AAA 1.5Vx2, not included)

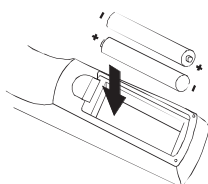 

#### 3. Close the Cover

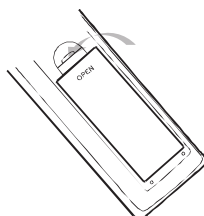 

### Using the Remote Control

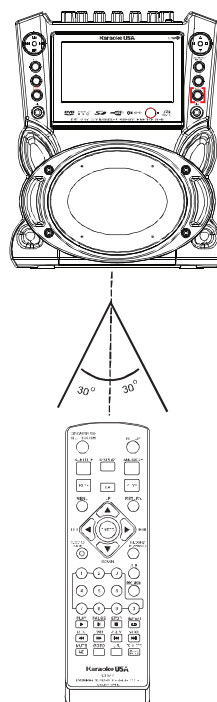 

### Notes:

 
- Point the Remote Control directly to the sensor of the machine.
- Do not leave the Remote Control in an extremely hot or humid place.
- Do not spill water or put anything wet on the Remote Control.
- When this machine will not be used for an extended period of time, please remove all Batteries from the Battery Compartment.

## How to Play a Disc

---

Your GF842 will support CD,CDG,MP3,MP3G and DVD format disc.

- 1.Connect the AC adaptor to the unit;

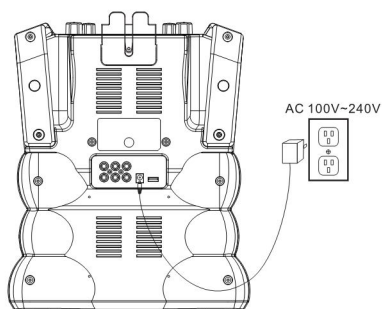

- 2.Load your disc;



- 3.Close the CD door;





4. Turn on the unit (switch the machine to DISC/USB/SD/BLUETOOTH mode) and select the "DISC" mode, the power indicator will light up.

5. Press PLAY to start playing your Disc



## MP3G Disc and MP3G Format Music Playback

  When an MP3G Disc,SD Card or USB device is connected,the screen will display as follows:

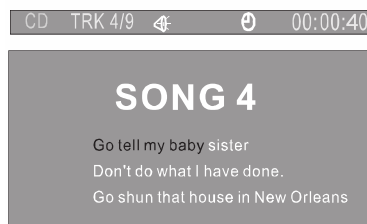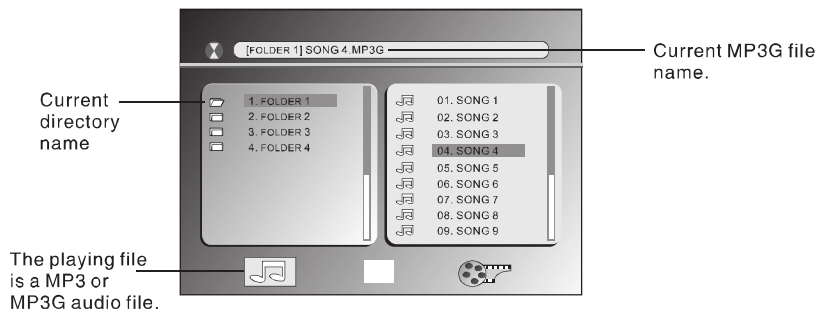

Press ▲ ▼ to select the file when the cursor appears in the file window.  
Press PLAY to play the current file selected by the cursor.  
Press ◀ ▶ to switch between the directory window and the file window.


Notes: The machine will not function correctly under the following condition:

1. The disc is badly scratched, damaged or dirty.
2. The recording format is not supported by the player.

## Play Bluetooth Music

 ---

1. Pairing your Smart Phone using Bluetooth :
  - A. Power the machine ON and then select DISC/USB/SD/BLUETOOTH mode.
  - B. Select Bluetooth mode with the DISC/USB/SD/BLUETOOTH button.

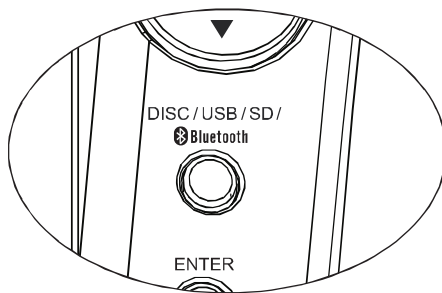

(on the Front Panel or on the Remote Control)


When in Bluetooth mode, the screen shows : “BLUETOOTH NO CONNECTION”.

2. Setting your Smart Device to “explore” the unit.
  - A. Activate your Bluetooth function on your smart device.
  - B. Click “Setting” and select “Bluetooth”
3. Using your Smart Device to connect to the Machine
  - A. Your Smart Device will Discover:GF842.
  - B. Select GF842.
  - C. To accept the pairing to your smart Device .
  - D. If they are paired, the screen will show: “Bluetooth Connected” and you will hear a “beep” sound.
  - E. If they are not paired, the screen will show : “BLUETOOTH NOT CONNECTION”.
  - F. Please repeat “Steps 1,2 & 3”above until they are paired.
4. Play Audio via Bluetooth After Pairing:
  - A. Select the song files that you wish to play from your Smart Device.
  - B. Then press “▶II” to start sending to the Machine by Bluetooth connection.
  - C. Always remember to use full volume to send your song files from your smart device.
  - D. Adjust the Master Volume on the Machine to a comfortable level when necessary.
  - E. Music will be put “on Hold” automatically when your Smart Device receives a phone call to let you answer. The music will resume when you end the call.
5. Bluetooth transmits audio only. You will not see lyrics when using Bluetooth for a music source.

## Play SD Card and USB
 
### Play Music

Before you do this, make sure you have download the music(MP3,MP3G format) to your SD card or USB. Plug the SD card or USB to the machine, press “DISC/SD/USB/BLUETOOTH” to select your desire device, then the screen will shows:

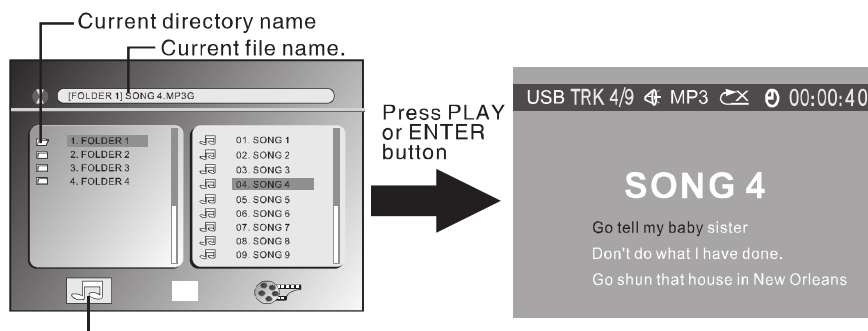


The frame shows it is in music mode.


Press ▼ ▲ to select the file when the cursor appears in the file window.  
Press ENTER or PLAY to play the current file select by the cursor.  
Press ◀ ▶ to switch between the directory window and the file window.

### View Photo

 Before you do this, make sure you have download the image(JPG.format) to your SD card or USB(The operation is same as “Play Music”). And the screen will show:

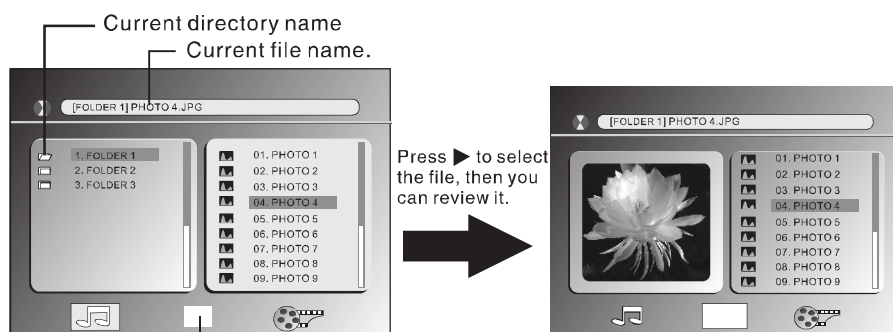

The frame shows it in photo mode.

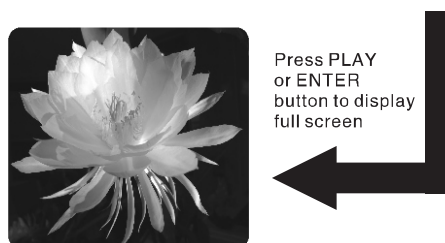 

## Record Operation Procedures

### Record your own voice / music mix to SD Card / USB Flash

1. Load Disc, SD Card or USB Flash Drive.
2. Select song title from the song list.
3. Press PLAY. Music will start.
4. Press RECORD/STOP. Music will start over in record mode.
5. Sing and record your song.
6. When finished, press RECORD/STOP to stop Recording.

 
### For Best Recordings

1. Set Microphone Volume(s) to 70% or higher. The higher the Microphone Volume(s), the louder the singer's voice will be on the recording.
2. Set the Master Volume to whatever is comfortable, or less.
3. This unit supports recording on these formats: MP3, MP3G, CD, CDG.
4. Recording will not work with DVD's or auxiliary devices connected to the AUX-IN jacks.
5. SD Cards and USB Flash Drives should be formatted to FAT32 on your computer before inserting into machine.
6. Recording will record to SD Card or USB Drives, not discs.
7. If SD Card and USB Flash Drive are both installed, the default recording will go on the USB Flash Drive, regardless of the music source.
8. If it's necessary to have the recording on the SD Card, remove the USB Flash Drive.
9. To clean out old recordings, insert SD Card or USB Flash in your computer and delete selected files.


### When recording, the screen shows the below:

#### A.In MP3G mode

##### ①. Playing

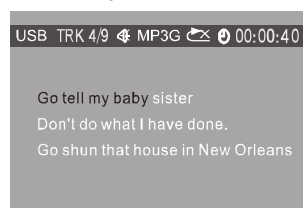

##### ②. Recording

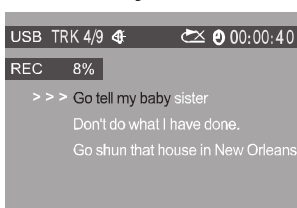 


##### ③. Recording finished




#### B.In CDG mode

 
##### ①. Playing

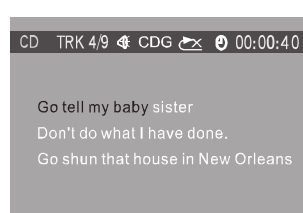

##### ②. Recording

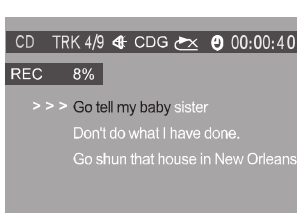 

##### ③. Recording finished

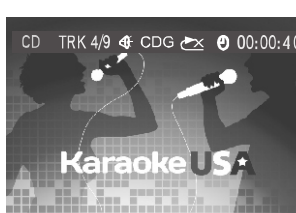 

4. Press "RECORD PLAYBACK" to listen the song you just recorded.


### Note:

 USB Flash Drives and SD Cards should be formatted to FAT32 on your computer before use. Not all USB Flash Drives are created equal. Some USB Flash Drives may not work properly with this machine. Please try a different brand if you have recording problem. Most SD Cards work well with this machine. DVD format discs do not support Recording function.


## Playback the Recorded File

---

1. Press "RECORD PLAYBACK" RIGHT AFTER YOUR RECORDING.
2. Press DISC/SD/USB button to select USB or SD mode.

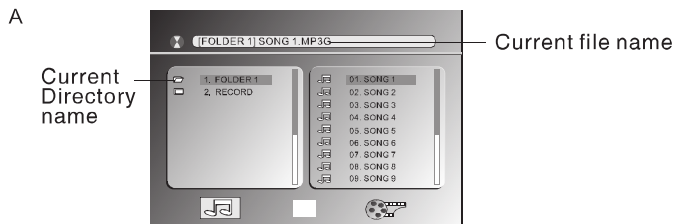

 - B. Select RECORD folder, then press ENTER.  
--> Screen shows all track numbers.

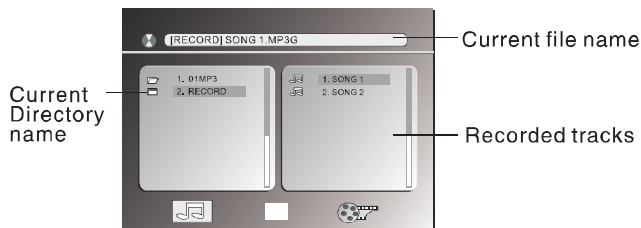

- C. Use the navigation buttons to pick the identical track number when the Song/Vocal was recorded, Press ENTER to playback.

# The Setup Menu System

## Advanced Features

### 1. SYSTEM SETUP

The system setup options are illustrated as below:

#### 1.1 TV SYSTEM

Using UP/DOWN arrow button to make a selection for TV system.

There are some TV output systems for choosen: NTSC ,PAL, AUTO.

#### 1.2 SCREEN SAVER

The SCREEN SAVER function is always on; when the machine is in STOP mode, after few minutes in Open or No disc state, it will appear a DVD logo moving around the screen.

 
#### 1.3 TV TYPE

According to the TV type, you can choose 16:9,4:3LB or 4:3 PS.

16:9 : The picture fills the screen of a wide screen TV.

4:3 PS: Pan and Scan, the image is cut in order to fit the whole screen.

4:3 LB: Letter box, two black bands will appear on the upper and lower part of the screen.

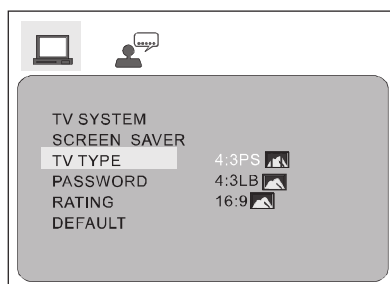

#### 1.4 PASSWORD

The password option is initialized locked, and you can not set the ratings limit or change the password. In order to set the Ratings feature to work, the password mode must be turned on. If you want to set the rating limit, you will need to enter the default password, which is 0000, then press ENTER to confirm. To change the password, you will be prompted for the old password, then be prompted for a new one. Enter a 4-digit number ( this is your password). Please remember your PASSWORD, as the DEFAULT setting will revert everything.

#### 1.5 RATING

The Rating feature is a rating limit system, like movie ratings. it works with DVD discs that have been assigned a rating. This helps you control the types for DVDs that your family watches.

#### 1.6 DEFAULT

The DEFAULT setup options are RESTORE factory setup.

When your machine does not work properly. It may probably result from some wrong setting. Please try the Restore Factory Setting function to see if the unit can restor to its normal working status.

# The Setup Menu System

## Advanced Features

### 2. LANGUAGE SETUP

The language setup options are illustrated as below:

#### 2.1 OSD LANGUAGE

Highlight the OSD LANGUAGE option, and press the Arrow buttons to choose the OSD language you prefer. Press ENTER to confirm, then the language will be set as OSD language.



#### 2.2 SUBTITLE LANG

 
Highlight the SUBTITLE LANG option, and press the Arrow buttons to choose the subtitle language you prefer. Press ENTER to confirm. If the disc you are playing has that language, it will display subtitles in that language.



#### 2.3 MENU LANG

Highlight the MENU LANG option, and press the Arrow buttons to choose the menu language you prefer. Press ENTER to confirm. If the disc you are playing has that language, it will display the menu in the language.

*Notes: if your preferred language is not available, the disc default language will be played.*

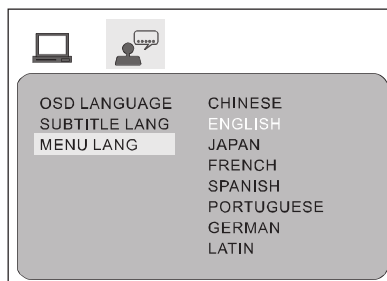

## Specifications

---

Power requirements: DC 12V/2A

Power Consumption: 25 Watts

### Video output

1.0 V(p-p) / 75  $\Omega$  ,sync, negative polarity

### Audio output

2.0 channel output

Power output: 35W Peak Power

Frequency response :150HZ to 15KHZ

S/N ratio: >90 dB

Total harmonic distortion: <0.0025%

### Accessories

AC Adapter x 1

RCA cables x 1

i-cable x 1

Remote Control x 1

User's Guide x 1

Warranty Card x 1

Holder for Smart Devices x 1

MP3G Demo Disc x 2

Microphone x 2



## Troubleshooting

---

	Symptom	Possible Problem	Solution
<b>General</b>	No Power	Power outlet	Ensure all are connected firmly
		power adaptor	
		Power cord	
		Power switch on OFF position	Ensure the switch is in "ON" mode(on top)
	Powered but no respond	Needs reset	Turn off the unit then turn on again
<b>Microphone</b>	Volume too low	Microphone volume setting	Set the microphone volume higher especially when recording
<b>TV Connection</b>	No picture (or sound) on TV	RCA cable connect in the wrong way	Ensure the RCA cable connect to the correct AV input on your TV
		Wrong setting on your TV	Ensure TV setting on the proper channel (video 1, channel 1 etc.)
<b>Play Disc</b>	No picture displays on the unit	No disc	Put in a disc
		Disc stained, warped or scratched	Ensure the disc is in good condition
		Wrong disc type	The unit will plays DVD, CD, CD+G, MP3+G
		Unit set in AUX IN mode	Set the Function knob in DISC/USB/SD mode

## Troubleshooting

---

 
	Symptom	Possible Problem	Solution
<b>Play USB &amp; SD</b>	No read	No files or wrong format file on your USB & SD	Download the files to your device and try different format if necessary
	No record	USB or SD store memory is full	Delete some files to reserve some space for recording
	No function at all	wrong format or use too long time	Backup your files on your computer and format the USB or SD card
<b>Play AUX IN</b>	No music	AUX IN cable not connected properly	Ensure the AUX IN cable connect to the correct RCA input jack on the back
		Unit set in DISC/USB/SD mode	Set the Function knob in AUX IN mode
		The volume setting too low on your smart device and the unit	Set the volume higher on your smart device and the unit
<b>Bluetooth</b>	No pairing	In the wrong mode	Set the Function knob to DISC/USB/SD/ Bluetooth mode, and select the source button to Bluetooth mode.
	No music	Unit set in AUX IN mode, or no connection	Set the Function knob to DISC/USB/SD/ Bluetooth mode, and select the source button to Bluetooth mode, make sure the Bluetooth is connected
	Music too low	Volume setting too low on your smart device	Turn the volume up on your smart device and the unit volume,too

## Notes on SD Card

---

### SD CARD

- \* Please use standardized SD Cards. poor quality SD Cards may cause Karaoke machine to malfunction.
- \* Gently insert the SD Card with its label facing upwards.

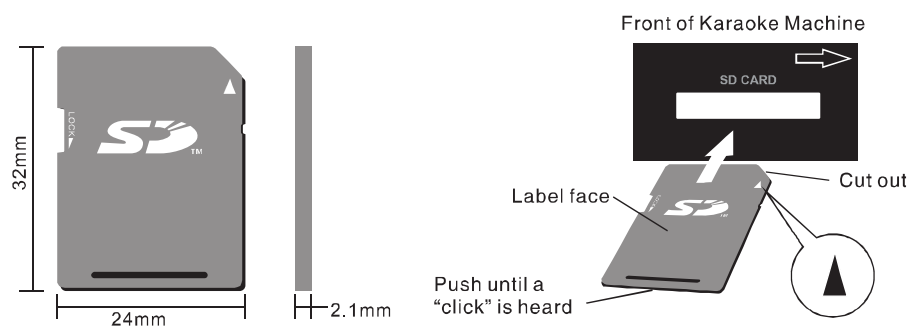

- \* Compliant card type: SDHC Card, SD Card, miniSD Card, mini SDHC Card, microSD Card, mircoSDHC Card (requiring miniSD Card/miniSDHC Card/microSD Card/microSDHC Card adaptor)
- \* When any mini size SD Card or TF Card is used, firstly insert it to an Adaptor before application.

# Karaoke USA

KARAOKE USA  
1185 GOODEN CROSSING  
LARGO, FL 33778 USA

TECH SUPPORT: [WWW.KARAOKEUSA.COM/CS](http://WWW.KARAOKEUSA.COM/CS)  
DOWNLOAD SONGS: [WWW.SINGTHEHITS.COM](http://WWW.SINGTHEHITS.COM)  
SALES DEPARTMENT: [SALES@KARAOKEUSA.COM](mailto:SALES@KARAOKEUSA.COM)

Printed in China

## Warnings:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

CE2200

