 


2. Put the cover back to the terminal.

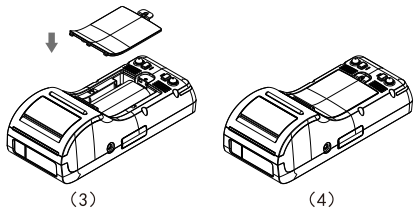

Warning: The changing of wrong battery type has risk to be explosive.

Warning: Don't throw battery casually.

Accessories	
Main Device	1Set
Power Adapter	1Piece
Battery	1Piece
User Guide	1Volume

Before using the POS terminal, ensure that all the accessories above are included in the package.

If you have any problems, please contact the services provider of the distributors.

 
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 —Reorient or relocate the receiving antenna.
 —Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 —Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the product while operating can be well below the maximum value. Before a new device is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each device are performed in positions and locations as required by the FCC. For handheld operation, this device has been tested and meets the FCC RF exposure. Guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

TPS390 Handheld POS User Guide

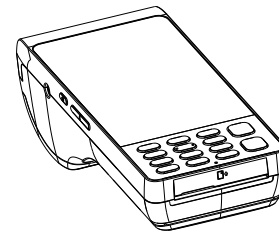


TPS390 Specification

Processor	A7 Dual-Core 1.3GHz
OS	Android 4.4
Memory	4GB FLASH,512M RAM
Ext. Memory	TF Card, up to 32GB
Display	5", TFT LCD display, with backlight resolution (854*480).
Magnetic Card Reader (Optional)	Track 1/2/3, bi-directional swipe, ISO7810, ISO7811, ISO7812
Smart Card Reader (Optional)	ISO 7816
Contactless Card Reader (Optional)	ISO14443 Type A/B, Mifare®, ISO18092 compliant
Camera	5 megapixels, auto focus
Thermal Printer	Speed: 18 lines/sec, paper width: 58mm; ϕ 35mm
GPS	Built-in
SIM	2 SIMs
Communications	WCDMA/WiFi/Bluetooth/GPRS
Peripheral Ports	1 Micro USB, 1 audio jack
Power Supply	Input: 100-240V AC, 50Hz/ 60Hz. Output: 5V DC, 2A.
Battery	Li-ion, 3.7V, 5000mAh
Built-in 1D/2D Barcode Reader (Optional)	Laser reader, hardware decoding


1

SIM Card & TF Card Installation

 1. Take out the back cover, the SIM card socket will be shown.

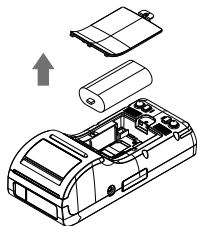


 2. Push the SIM card into the socket correctly. Be sure the SIM card is in right position.

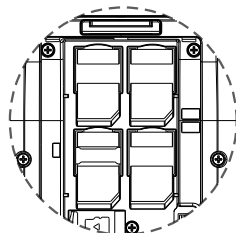


2

 3. Push the TF card into the socket correctly.

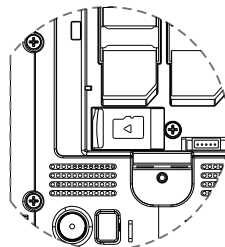


Paper Roll Installation

 1. Open the printer cover.
2. Put the paper roll into the holder.

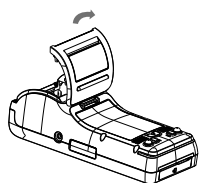

 
(1)

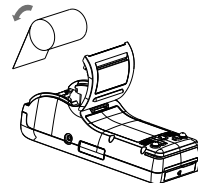


(2)

3

 3. Make sure the paper roll has been put in right direction. Push back the cover.
4. Installation completed.

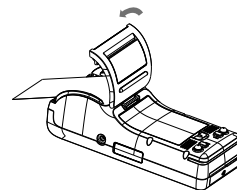

 
(3)

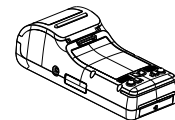


(4)

Battery Installation

 1. Open the back cover and put the battery into the holder. Install the battery in right direction as the label instructed.

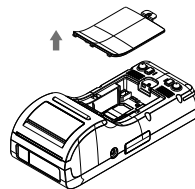

 (1)

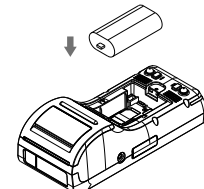

(2)

4