

User Manual



Alarm Clock Radio Bluetooth

ITOMA

www.itoma.com.hk

Printed in China

ITOMA Part No. CKS503BT-Z0 160907-01

www.itoma.com.hk

ITOMA

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED AND THERE IS NO BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p>	
<p>The lightning flash with arrow-head symbol, within an equilateral triangle is intended to alert the user to the presence of unshielded 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	<p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>

IMPORTANT SAFETY INSTRUCTIONS

 
- 1.) Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
- 2.) Do not use this apparatus near water.
- 3.) Clean only with dry cloth.
- 4.) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 5.) Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- 6.) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, ask an electrician for replace the obsolete outlet.
- 7.) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
- 8.) Only use attachments / accessories specified by the manufacturer.
- 9.) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 10.) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 11.) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
- 12.) The AC adaptor must not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on apparatus.
- 13.) The AC plug is used as a disconnect device and it must remain readily accessible during intended use. In order to disconnect the apparatus from the AC power completely, the AC plug must be removed from the AC outlet completely.
- 14.) The battery must not be exposed to excessive heat such as sunshine, etc.



CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

LOCATION OF CONTROLS AND INDICATORS

Front Panel

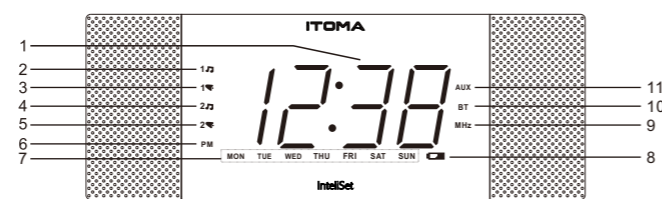

- 1). LED Display
- 2). Alarm 1 'Radio' Indicator
- 3). Alarm 1 'Buzzer' Indicator
- 4). Alarm 2 'Radio' Indicator
- 5). Alarm 2 'Buzzer' Indicator
- 6). PM Afternoon Indicator
- 7). Day of Week Indicator
- 8). LOW BATT. Indicator
- 9). MHz FM Radio Indicator
- 10). Bluetooth Indicator
- 11). AUX IN Indicator

- 12). BACKUP BATTERY Compartment
- 13). DC Jack input
- 14). AUX IN Jack
- 15). USB CHARGING Port
- 16). POWER / MODE Button
- 17). VOLUME - / ALARM 1 Button
- 18). VOLUME + / ALARM 2 Button
- 19). SNOOZE/DIMMER/SLEEP Button
- 20). SET/TUNE '-' Button
- 21). SET/TUNE '+' Button
- 22). SET Button
- 23). Antenna

PREPARATION FOR USE

Unpacking And Set Up

- Remove the radio from the carton and remove all packing material from the radio. Save the packing material, if possible, in case the radio ever needs to be serviced or transported. The original carton and packing material is the only safe way to pack your radio to protect it from damage in transit.
- Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
- Note the serial number on the bottom of your radio and write this number in the space provided on the Warranty page of this manual.
- Place your radio on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.
- Unwind the Line cord connecting to the AC adapter and extend it to its full length. The FM antenna is built in to this cord. It must be fully extended to provide the best FM reception.

Protect Your Furniture

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

Power Source

 
This radio is designed to operate on normal 120V 60Hz AC power only. Do not attempt to operate the radio on any other power source. You could cause damage to the radio that is not covered by your warranty. This radio should be connected to an AC outlet that is always 'live'. Do not connect it to an outlet that is controlled by a wall switch. When the power to the radio is interrupted, the built in lithium battery takes over to maintain the time and alarm settings. To maximize the life of the lithium battery keep the radio connected to a 'live' AC outlet at all times.




IMPORTANT NOTES

- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as: electric heaters, on top of other stereo equipment that radiates heat, places lacking ventilation, dusty areas, places subject to constant vibration and/or humid or moist areas.
- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the AC adapter is properly installed.
- When moving the set, be sure to first disconnect the AC adapter.

PREPARATION FOR USE

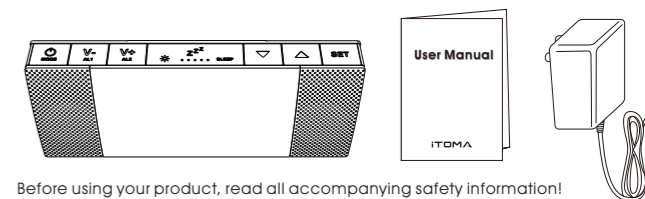

 Before using your product, read all accompanying safety information!

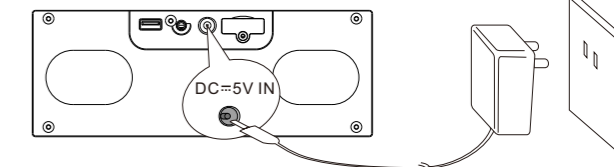


Unit connect with power enter standby. Press "Ⓞ" turn on. Long press "Ⓞ" 2s enter turn off (standby off) status.
Standby: The display shows time only .

SETTING THE TIME ZONE

IMPORTANT :

The first time you connect your new E-Z Setclock radio to the AC outlet the internal computer will automatically set the time correctly for the **Eastern Time Zone**, which is the initial default setting. The display will scan for a few seconds and then show the correct **Day and Time** in the Eastern zone. If you live in the Eastern Time zone which is identical to what is displayed when pressing and holding the TIME ZONE button, your clock will automatically be correctly set. Otherwise you must change the default zone display to your own zone. After re-setting the time zone this one time, it will not be necessary to repeat, even after a power interruption.

 There are 7 time zones programmed into your clock radio as follows:
UTC-6 — Atlantic Time — ZONE 1
UTC-5 — Eastern Time — ZONE 2
UTC-4 — Central Time — ZONE 3
UTC-3 — Mountain Time — ZONE 4
UTC-2 — Pacific Time — ZONE 5
UTC-1 — Yukon Time — ZONE 6
UTC — Hawaiian Time — ZONE 7

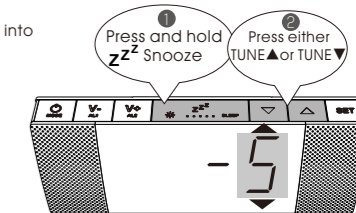


(with the Radio standby operation)

SETTING THE TIME

(with the Radio standby operation)

 
Check the current time:
Year / Date / Time

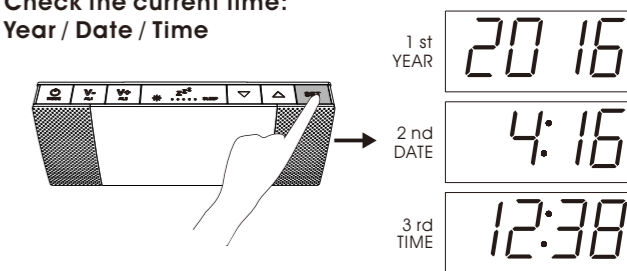

Resetting time

● Year → ● Date → ● Time

 - 1 Long-press SET until the Year display blink
- 2 Press either TUNE▲ or TUNE▼ to adjust YEAR
- 3 Press SET and the Month Display will blink
- 4 Press either TUNE▲ or TUNE▼ to adjust MONTH
- 5 Press SET and the Date Display will blink
- 6 Press either TUNE▲ or TUNE▼ to adjust DATE
- 7 Press SET and the Time Display will blink
- 8 Press TUNE▼ to adjust Hour
Press TUNE▲ to adjust Minutes

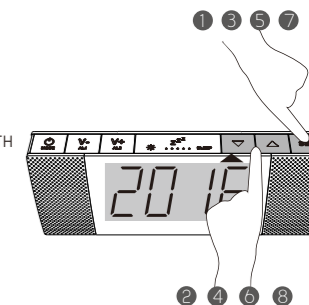

Daylight Saving and Leap Year Adjustments

All daylight saving and leap year adjustment are made automatically by the IntelSet computer as follow:

- Start of Daylight Saving time:
At 2:00 AM on the 2nd Sunday in March, the clock will automatically advance to 3:00 AM
- End of Daylight Saving time: At 3:00 AM on the 1st Sunday in November, the clock will automatically reset to 2:00 AM
- Leap year:
At 12:00 midnight on February 28th, the calendar display will change to '2.29'.

Note: Buttons displayed with additional REVERSED PRINT font or icons have multiple functions in different operation modes. Generally, the functions displayed in REVERSED PRINT font are for operation when Radio is ON.