

# User Manual

*It's my pleasure to help you!*





# CONTENTS

Warning.....	1
Preparation for Use.....	2
Important Notes.....	2
Location of Controls and Indicators.....	3
5 in1 Control Description .....	4
Setting the Clock for the First Time.....	4
Setting the Time Zone.....	5
Setting the Date / Time Manually .....	5
Daylight Saving Time Setting.....	6
Setting the Alarm.....	7
Snooze / Repeat.....	8
Playing the FM Radio.....	8
Using the Sleep Timer.....	10
Dimmer Control .....	10
2-Level LED decor.....	11
Bluetooth Connection.....	11
USB for Charging .....	12
Changing the Lithium Battery.....	13
Care and Maintenance.....	13
FCC Warning .....	14
Limited Warranty .....	14

# WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED AND THERE IS NO BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

## CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## IMPORTANT SAFETY INSTRUCTIONS

- 1.) Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
- 2.) Do not block any ventilation openings.
- 3.) Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including audio amplifiers) that produce heat.
- 4.) If the provided AC mains adapter does not fit your outlet or is damaged, seek the advice of a qualified electrician before using a replacement mains adapter.
- 5.) Protect the power cord from being walked on knotted, snagged or pinched.
- 6.) Only use attachments / accessories specified by the manufacturer.
- 7.) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 8.) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
- 9.) Do not use the apparatus or its AC mains adapter in environments where there is a risk of water dripping or splashing. Do not place objects filled with liquids, such as vases or drinks, near the apparatus or AC mains adapter.
- 10.) The AC mains adapter should remain readily accessible so that AC power can be disconnected in an emergency. The AC mains adapter must be removed completely from the AC power outlet to disconnect the power supply.
- 11.) The lithium battery must not be exposed to excessive heat (such as sunshine) and must be correctly installed. Refer to the Changing the Lithium Battery section for more information.



# PREPARATION FOR USE

## Unpacking and Set Up

- Remove the alarm clock radio from the carton and packaging materials. Retain the carton and packaging for future reference and in case the alarm clock radio ever needs to be serviced or transported.
- Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet. Note the serial number on the bottom of your radio and write this number in the space provided on the Warranty page of this manual.
- Place your radio on a level surface such as a table, desk or shell, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity or vibration.
- Select and attach the appropriate plug attachment to the AC mains adapter. Unwind and fully extend the power cable.
- The FM antenna is built into this cord. It must be fully extended to provide the best FM reception.
- Connect the mains adapter to the mains supply and the radio. Ensure the mains socket is switched on.

## Protect Your Furniture

This model is equipped with non-skid rubber feet to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil-based furniture polishes, wood preservatives, and cleaning sprays may cause the rubber "feet" to soften and leave marks on the furniture. To avoid the risk of such damage to your furniture we recommend either a piece of cloth or self-adhesive felt pads attached to the underside of the alarm clock radio.

## Power Source

The alarm clock radio uses an AC power adapter of a kind that depends on where the alarm clock radio is purchased. The AC power adapter for North America is rated 120V at 60Hz and within Europe or Australia is rated 220-240V at 50Hz. Using an incorrect AC power adapter is not covered by your warranty because it may damage the alarm clock radio. A lithium battery is used to maintain the time and alarm settings when the alarm clock radio loses AC mains power. To maximize the life of the lithium battery and to keep the radio and alarm functions active you must ensure the AC power adapter remains connected and that the AC mains outlet is never turned off. Ideally you should use an un-switched mains outlet.

# IMPORTANT NOTES

 
- Avoid installing this alarm clock radio in direct sunlight, close to sources of heat, where there is poor ventilation and places that are dusty, humid, wet or subject to vibration.
- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the AC adapter is properly installed.
- When moving the unit, be sure to first disconnect the AC adapter. Do not use the AC power adapter if any part of it shows signs of damage.

# LOCATION OF CONTROLS AND INDICATOR


## FRONT PANEL



## TOP PANEL

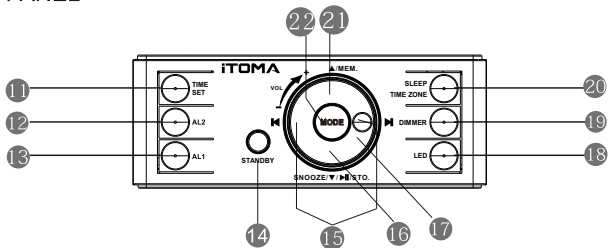


## BACK PANEL

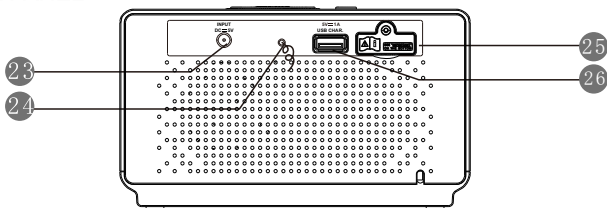 


- |   |   |
|---|---|
| 1. <b>ALARM 1 RADIO/BUZZER</b> Indicators                 | 17. <b>ROTATING VOLUME CONTROL</b> Button |
| 2. <b>AM</b> Indicator ("on"=AM)                          | 18. <b>LED</b> Button                     |
| 3. <b>PM</b> Indicator ("on"=PM)                          | 19. <b>DIMMER</b> Button                  |
| 4. <b>DST</b> Indicator(DST Start)                        | 20. <b>SLEEP/TIME ZONE</b> Button         |
| 5. <b>DAY of WEEK</b> Indicator                           | 21. <b>UP/RECALL/▲</b> Button             |
| 6. <b>LOW BATTERY</b> Indicator                           | 22. <b>MODE</b> Button                    |
| 7. "SLP"Indicator(Sleep on)                               | 23. <b>DC JACK</b>                        |
| 8. <b>MHz</b> Indicator(FM Radio frequency)               | 24. <b>FM Antenna Cable</b>               |
| 9. <b>BLUETOOTH (BT)</b> Indicator                        | 25. <b>BACKUP BATTERY</b>                 |
| 10. <b>ALARM 2 RADIO/BUZZER</b> Indicators                | 26. <b>COMPARTMENT</b>                    |
| 11. <b>TIME SET</b> Button                                | (Located on back of unit)                 |
| 12. <b>AL2 ON/OFF/SET</b> Button                          | <b>USB CHARGING Port</b>                  |
| 13. <b>AL1 ON/OFF/SET</b> Button                          |   |
| 14. <b>STANDBY</b> Button("on"/standby)                   |   |
| 15. <b>◀ / ▶</b> Button                                   |   |
| 16. <b>DOWN/PLAY/PAUSE</b> / <b>STORE/SNOOZE ▼</b> Button |   |

# 5 IN 1 CONTROL DESCRIPTION

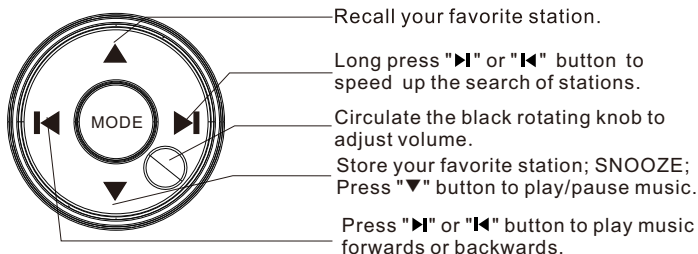 

- ① When using the Bluetooth connection, press "▼" button to play or pause music; press "▶" or "◀" button to play music forwards or backwards; circulate the black rotating knob to adjust the volume.
- ② While listening to the radio, short press "▶" or "◀" button to adjust the radio frequency; long press "▶" or "◀" button to speed up the search of stations; press "▼" button to store your favorite station; circulate the black rotating knob to adjust the volume level.

## SETTING THE CLOCK FOR THE FIRST TIME

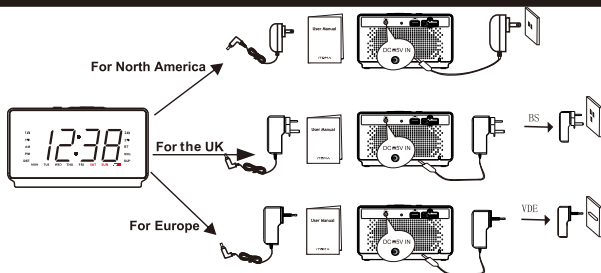 

Before using your product, read all accompanying safety information!

1. Make sure your product is connected to the power supply first before used, remind that DC jack plug in correct position .
2. After connect the AC power, the time will show on the display.

Note 1: For North America, it is default to the Eastern Time Zone (New York Time)

Note 2: For the UK, it is default to the UK Time Zone (London Time)

Note 3: For Europe, it is default to the German Time Zone (Berlin Time)


Note 4: For Australia, it is default to the Australian Time Zone (Melbourne, Canberra Time)

Note 5: For Mexico, it is default to the Mexican Time Zone (Mexico City Time)

Note 6: For Japan, the default Tokyo time zone (Tokyo time)

# SETTING THE TIME ZONE

 If the time displayed HOUR is different from your current time, you can quickly manually adjust the HOUR

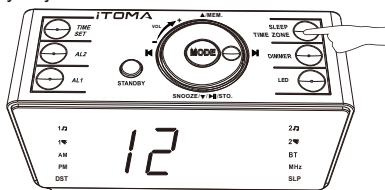


- ① Press and hold "TIME ZONE" button, the HOUR digits will blink.
- ② Press "▲" or "▼" button to adjust the hour.

**Note:** Time Zone and Clock Setting can only be adjusted in Standby mode, where the function of Radio, and Bluetooth are disabled (Indicators of "MHz", and "BT are OFF).


# SETTING THE DATE/TIME MANUALLY

 (Turn the clock to Standby mode before setting the time)

Check the Current Time / Month / Day / Year / 12/24H

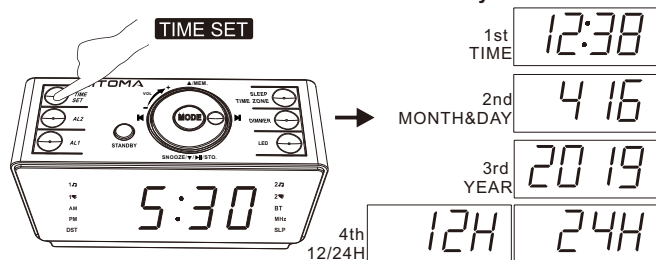

 To check the current date and time, short press "TIME SET" repeatedly to see the time, month, day and year.

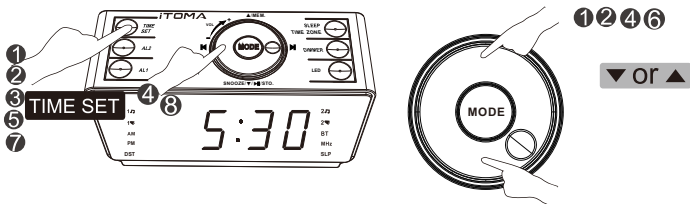




- ① Press and hold "TIME SET" button the HOUR and MINUTE digits will blink at the same time, Press "◀" or "▶" button to adjust the minute. Press "▲" or "▼" button to adjust the hour;
- ② Press "TIME SET" button again ,the "MONTH" and "DATE" digits will blink at the same time, Press "◀" or "▶" button to adjust the date, Press "▲" or "▼" button to adjust the month .
- ③ Press "TIME SET" button again and the "YEAR" digits will blink.
- ④ Press "▲" or "▼" button to adjust the year.
- ⑤ Press "TIME SET" button again "24H" or "12H" blinks on the display. (24H means 24-hour clock, 12H means 12-hour clock)
- ⑥ Press "▲" or "▼" button to adjust the time format.
- ⑦ Press "TIME SET" button again or wait for 40 seconds to return to the clock display.

## DAYLIGHT SAVING TIME SETTING

 This clock was presetted Auto DST(Daylight Saving Time) for different countries as below:

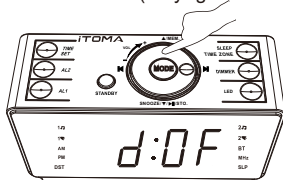

PRODUCT CODE	DISPLAY INDICATION	AREA
DE	dEU	Europe
NA	dUS	America/Canada
UK	dEn	United Kingdom
AU	dAU	Australia
CO	dCo	Mexico
JP	dJP	Japan

- ① Once the product RESET (factory setting) becomes, the product needs to set DST before reuse. This DST setting can be set in the Time Setting, just after the setting of hour, minute, month, day, year and 12/24 hours, and this method can be available only in this condition.
  - ② You can also set the DST Time area by long press the "▲" button until the DST words (dOF/dEU/dUS/dEn/dAU/dCo/dJP) flashes, then press the "▼" button again to switch to your local DST. (dOF is for Turn off DST; dEU is for Europe; dUS is for United States; dEn is for The United Kingdom; dAU is for Australia; dCo is for Mexico; dJP applies to Japan)
- Note: When your local DST starts, the indicator "DST" will appear on the display untill the DST ends up.**

# SETTING THE ALARM

Turn the clock to **STANDBY** mode before setting the alarm

Your clock radio has two separate alarms (Alarm 1 and Alarm 2) that can be set and used independently. Please ensure that you have set the wakeup time(s) and the day(s) of the week needed for the alarms correctly.

 
- 1♪/2🎵 Wake to Radio
- 1🔔/2🔔 Wake to Buzzer
- (Two alarm ringtones are available)

## Setting Alarms for the Day(s) of the Week

- EVERYDAY** Monday to Sunday
- WEEKDAYS** Monday to Friday
- WEEKENDS** Saturday and Sunday
- SINGLE DAY** Monday/Tuesday/Wednesday/  
Thursday/Friday/Saturday/Sunday



## SETTING THE WAKEUP ALARMS

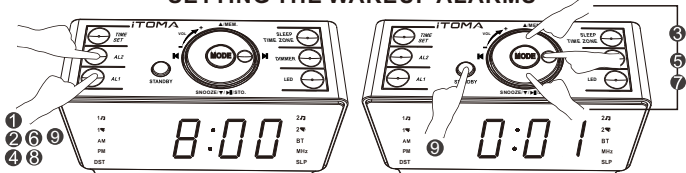


- 1 Press "AL1" repeatedly to select your alarm ringtone: When "🔔" is on the display, Alarm 1 (Wake to Buzzer) is turned on. When "♪" is on the display, Alarm 1 (Wake to Radio) is turned on. If both "🔔" and "♪" disappear on the display, Alarm 1 is completely turned off. After selecting your desired alarm ringtone,
- 2 Press and hold "AL1" button for 3 seconds and the "HOUR" and "MINUTE" digits will blink at the same time.
- 3 Press "K" or "▶" to adjust the minute, Press "▲" or "▼" to adjust the hour.
- 4 Press "AL1" again and the "CURRENT VOLUME LEVEL" digits will blink. The volume levels range from 1 to 15, with level 15 being the loudest.
- 5 Press "▼" or "▲" to adjust to your desired alarm volume level.
- 6 Press "AL1" again and the "DAY(S) OF THE WEEK" texts (MON to SUN) will blink.
- 7 Press "▼" or "▲" to select the alarm day mode (You can set the alarm days in the following 4 options:
  - Option 1: Everyday Monday to Sunday
  - Option 2: Weekdays Monday to Friday
  - Option 3: Weekends Saturday and Sunday
  - Option 4: Single Day Monday/Tuesday/Wednesday/Thursday/Friday/Saturday/Sunday)
- 8 Press "AL1" button or wait for 40 seconds to exit the alarm setting. After you have set the alarm, the alarm indicator of "♪" or "🔔" will appear on the display.
- 9 If you need to turn off the AL1 completely, please press "AL1" or "STANDBY" button.
- 10 To set the Alarm 2, repeat the above steps 1 to 9.

**Note 1:** If no operation is performed while the alarm is sounding, the alarm will stop after 60 minutes.

**Note 2:** The last radio station you listened to will play when you choose "Wake to radio" for your alarm ringtone.



# SNOOZE/REPEAT

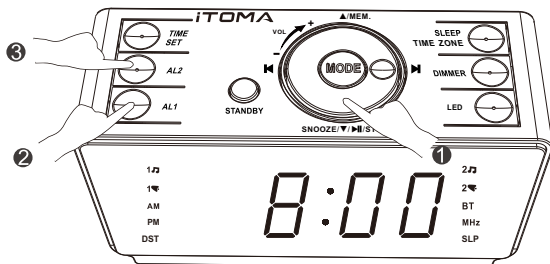 

- 1 When the alarm goes off, press "SNOOZE/▼/▶/STO." button to doze for another 9 minutes, You can repeatedly press "SNOOZE/▼/▶/STO." for more dozings during the 60-minute cycle.
- 2 Press "AL1" or "AL2" button to stop the alarm from sounding.
- 3 To deactivate the alarm completely, keep pressing "AL1" or "AL2" button until the alarm indicator disappears on the display.

# PLAYING THE FM RADIO

  Press "STANDBY" button to open the clock radio and press "MODE" button to switch to the radio mode. The frequency of "MHz" will appear on the display. For better reception, fully extend and adjust the position of the antenna. Below are the 5 instructions (A to D) to operate the radio.

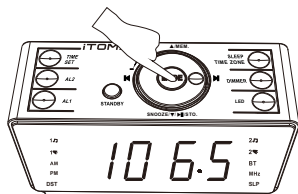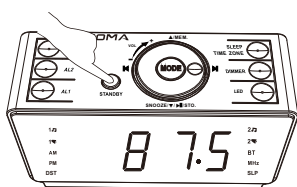


## A: Adjust the "MHz"

In the radio mode, when the "MHz" digits appear on the display, press "◀" or "▶" button to adjust the MHz frequency.


## B: Auto-search/scan FM stations

 Press "◀" or "▶" button for 2 seconds and release. The search/scan will stop at the next available lower or higher station.

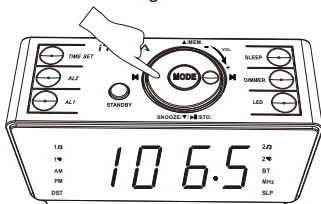


Press for 2 seconds and release

## C: Store radio station presets (max. up to 20 stations)

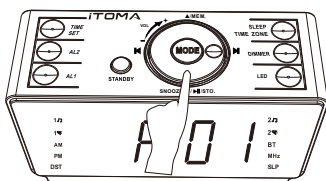 

- 1 Press and hold "▼" button to store station presets.
- 2 In the radio mode, press "◀" or "▶" button to search your desired station.
- 3 Press and hold "▼" button until the Program Number (from P01 to P20) appears on the display.
- 4 Press "◀" or "▶" button to change to the Program Number you desired, press "▼" button again and your specific station will be stored under the selected Program Number.

## D: Recall preset radio stations

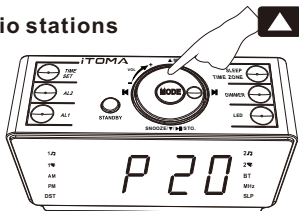 


- 1 When the radio mode is on, short press "▲/MEM." button and the Program Number (from P01 to P20) will appear on the display.
- 2 Press "◀" or "▶" button to select your stored Program Number and listen to your preset station.

**Note: Keep the clock radio away from other electronic devices to avoid radio interference. For better reception, fully extend and adjust the position of the FM antenna wire.**
 
# USING THE SLEEP TIMER

You can fall asleep to the radio using the sleep timer, which is set up in 10-minute increments (The sleep timer duration ranges from 10 minutes to 90 minutes). After reaching the desired duration, the radio will turn off automatically.

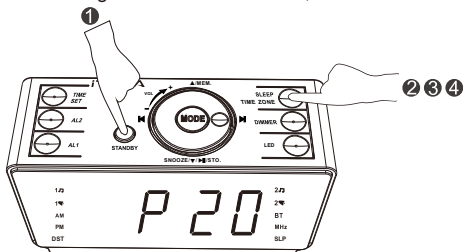


- 1 Press "STANDBY" to turn on the clock radio.
- 2 Press "SLEEP" and the "10" digits will appear on the display which indicates the sleep timer has been set for 10 minutes.
- 3 To change the sleep timer duration, keep pressing "SLEEP" button until your desired duration appears.
- 4 To deactivate the sleep timer, keep pressing "SLEEP" until "OFF" appears on the display, or press "STANDBY" to turn off the sleep timer directly.

**Note:** When setting the Sleep Timer, the indicator "SLP" flashes and it appears on the screen until the sleeping time ends.


# DIMMER CONTROL

 To adjust the display brightness, keep pressing "DIMMER" button until your desired brightness level appears. Brightness is available in 4 levels and can be adjusted even when the radio or Bluetooth connection is in use. Press "DIMMER" button, you can adjust the brightness level as below:

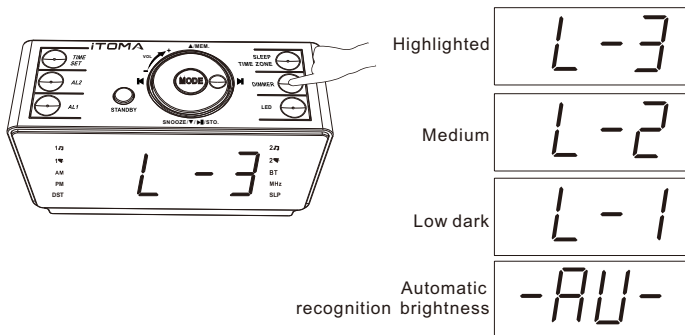


# 2-LEVEL LED DECOR

 Press "LED" button to turn the ice blue light on/(high/low)of off if needed.

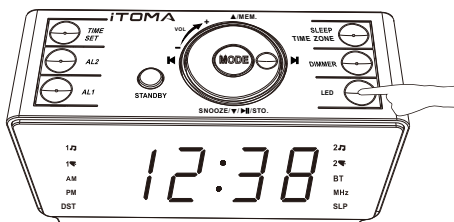

# BLUETOOTH CONNECTION

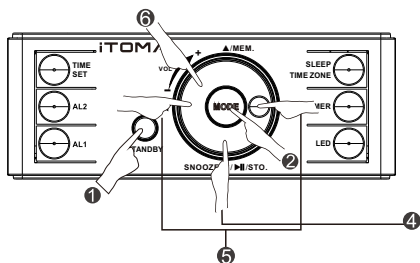 


- 1 Press "STANDBY" button to turn on the clock radio.
- 2 Press "MODE" button to switch to Bluetooth (BT) connection.
- 3 When the "BT" indicator blinks, the clock is searching for Bluetooth connection. Please turn on the Bluetooth of your external audio device and look for **CKS708** for connecting. Once connected, the "BT" indicator stops blinking. Then you can play music from your external audio device through the clock speaker.
- 4 You can control the music playing either on your external audio device or by pressing "▶" button on your clock to play or pause music.
- 5 Press "▶" or "◀" to play music forwards.
- 6 Circulate the 5 in 1 rotating knob to change the volume.

# USB FOR CHARGING

 Output 5V up to 1A for charging mobile phone or portable digital audio player.


**Note:** Charging current drawn from the unit may vary due to different USB charging cable conditions or battery charging characteristics.

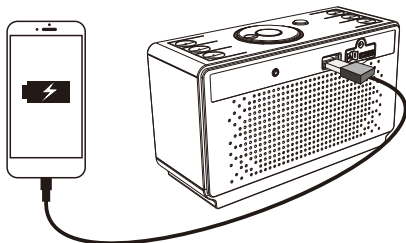

## CHANGING THE LITHIUM BATTERY



 The lithium battery needs replacing when the red battery indicator shows brightly.

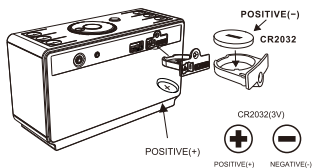

- ① The lithium battery needs replacement when the Low BATTERY indicator flashes. If you do not replace the battery, then the time and alarm settings will be lost if there is a power interruption.
- ② Use a small cross-point screwdriver to open the battery compartment, then slide out the carrier. Replace the CR2032 battery .

### WARNING

**DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED.**  
**REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.**  
**DO NOT INGEST BATTERY.CHEMICAL BURN HAZARD**

This product contains a coin/button cell battery.If the coin/button cell battery is swallowed,it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.If the battery compartment does not close securely,stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body,seek immediate medical attention.

# CARE AND MAINTENANCE

## Care of Cabinets

If the cabinet becomes dusty, wipe it with a soft cloth. If the cabinet becomes smudged or dirty, clean it with a soft, slightly dampened cloth. Never allow water or any liquid to get inside the cabinet. Never use any abrasive cleaners or cleaning pads as these will damage the finish of your radio.

## Lithium Battery Precautions

- Dispose of the old battery properly. Do not leave it lying around where a young child or pet could play with or swallow it. If the battery is swallowed, contact a physician immediately.

- The battery may explode if mistreated. Do not attempt to recharge it or disassemble it. Do not dispose of the old battery in a fire. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on the apparatus. This marking indicates that this product should not be disposed of with other household wastes throughout the country. To prevent possible harm to the



environment or human health from uncontrolled waste disposal, recycle this unit responsibly so as to promote the re-use of material resources. To return your used device, please use return and collection systems or contact the retailer where the product was purchased as they know how to safely recycle this product.



# FCC WARNING

## FCC PART 15.19 WARNING STATEMENT

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE. AND

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

## FCC PART 15.21 WARNING STATEMENT

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

## FCC Part 15.105 Warning Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## RF warning statement:

The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

## **iTOMA** 1-Year Limited Warranty

iTOMA (Hong Kong) Company Limited (iTOMA) warrants to the original consumer of this iTOMA product that it will furnish a replacement for, or, at its sole discretion, repair any part which proves (upon inspection by iTOMA) to be defective under normal use within 1 year of the original purchase date.

This warranty does not apply to cosmetic appearance and consumable items, including, but not limited to, antennas, knobs, cabinets, or cases, and in the case of batteries, for damage caused by leaking batteries. It also does not apply to the product, or to any part thereof, that damaged through misuse or negligence.

Furthermore, this warranty will become invalid if, in the judgment of iTOMA the product or any part thereof has been a more readable installed incorrectly, or has been repaired or altered other than by iTOMA.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusions and limitation may not apply to you.

For Service, Warranty, or Product Information,

Please contact iTOMA (Hong Kong) Company Limited,  
[www.itoma.com](http://www.itoma.com) /contact us by email at [info@itoma.com](mailto:info@itoma.com)

**PLEASE SAVE THIS CARD TOGETHER WITH ORIGINAL DATED PROOF OF PURCHASE FOR YOUR RECORDS AND FOR CUSTOMER SERVICE.**

# INHALT

Warnung.....	16
Vorbereitung für den Gebrauch .....	17
Wichtige Hinweise.....	17
Position der Steuerungen und Anzeigen .....	18
Beschreibung der 5 in 1 Steuerung .....	19
Erstmaliges Einstellen der Uhr .....	19
Zeitzone einstellen.....	20
Manuelles Einstellen von Datum und Uhrzeit .....	20
Sommerzeiteinstellung.....	21
Einstellen des Alarms .....	22
Schlummer/Wiederholen.....	23
UKW-Radio abspielen .....	23
Verwenden des Sleep-Timers .....	25
Dimmersteuerung .....	25
2-Stufiges LED-Dekor .....	26
Bluetooth-Verbindung .....	26
USB zum Laden .....	27
Lithiumbatterie wechseln .....	28
Pflege und Wartung.....	28
FCC-Warnung .....	29
Eingeschränkte Garantie.....	29

# WARNUNG

VERWENDEN SIE DIESEN STECKER NICHT MIT EINEM VERLÄNGERUNGSKABEL, EINER STECKDOSE ODER EINER ANDEREN STECKERBUCHSE, ES SEI DENN, DIE KONTAKTSTIFTE KÖNNEN VOLLSTÄNDIG EINGESTECKT WERDEN, UM DIE GEFAHR EINES BRANDES ODER EINES STROMSCHLAGS ZU VERHINDERN. ZUR VERMEIDUNG VON FEUER- ODER STROMSCHLAGGEFAHR DARF DAS GERÄT WEDER REGEN NOCH FEUCHTIGKEIT AUSGESETZT WERDEN.

## VORSICHT

**STROMSCHLAGGEFAHR -  
NICHT ÖFFNEN**

Das Blitzsymbol mit Pfeilspitze in einem gleichseitigen Dreieck soll den Benutzer auf das Vorhandensein einer nicht isolierten „gefährlichen Spannung“ im Gehäuse des Produkts aufmerksam machen, die so groß sein kann, dass die Gefahr eines Stromschlags für Personen besteht.

WARNUNG: UM DAS RISIKO EINES STROMSCHLAGS ZU VERRINGERN, DARF DIE ABDECKUNG (ODER DIE RÜCKSEITE) NICHT ENTFERNT WERDEN. ES BEFINDEN SICH KEINE VOM BENUTZER ZU WARTENDEN TEILE IM INNEREN. ÜBERLASSEN SIE DIE WARTUNG QUALIFIZIERTEM SERVICEPERSONAL.

Das Ausrufezeichen innerhalb eines gleichseitigen Dreiecks soll den Benutzer auf wichtige Betriebs- und Wartungsanweisungen in der dem Gerät beiliegenden Literatur hinweisen.

Deutsch

## WICHTIGE SICHERHEITSHINWEISE

- 1.) Lesen Sie diese Anleitung sorgfältig durch und bewahren Sie sie gut auf. Folgen Sie allen Anweisungen. Beachten Sie alle Warnungen.
- 2.) Blockieren Sie keine Lüftungsöffnungen.
- 3.) Installieren Sie das Gerät nicht in der Nähe von Wärmequellen wie Heizkörpern, Heizungen, Öfen oder anderen Geräten (einschließlich Audioverstärkern), die Wärme erzeugen.
- 4.) Wenn das mitgelieferte Netzteil nicht in Ihre Steckdose passt oder beschädigt ist, lassen Sie sich von einem qualifizierten Elektriker beraten, bevor Sie ein Ersatznetzteil verwenden.
- 5.) Schützen Sie das Netzkabel davor, dass jemand darauf tritt, es verknotet wird, sich verhakt oder eingeklemmt wird.
- 6.) Verwenden Sie nur die vom Hersteller angegebenen Anbaugeräte / Zubehörteile.
- 7.) Ziehen Sie den Netzstecker bei Gewittern oder bei längerer Nichtbenutzung ab.
- 8.) Wenden Sie sich bei allen Wartungsarbeiten an qualifiziertes Servicepersonal. Eine Wartung ist erforderlich, wenn das Gerät in irgendeiner Weise beschädigt wurde, z. B. wenn das Netzkabel oder der Netzstecker beschädigt ist, Flüssigkeiten oder Gegenstände in das Gerät geraten sind, das Gerät Regen oder Feuchtigkeit ausgesetzt war, nicht normal funktioniert oder heruntergefallen ist.
- 9.) Verwenden Sie weder das Gerät noch sein Netzteil in Umgebungen, in denen die Gefahr von Wassertropfen oder -spritzern besteht. Stellen Sie keine mit Flüssigkeiten gefüllten Gegenstände wie Vasen oder Getränke in die Nähe des Geräts oder des Netzteils.
- 10.) Das Netzteil sollte gut zugänglich bleiben, damit es im Notfall schnell vom Netz getrennt werden kann. Das Netzteil muss vollständig aus der Steckdose entfernt werden, um die Stromversorgung zu unterbrechen.
- 11.) Die Lithiumbatterie darf keiner übermäßigen Hitze (z.B. Sonnenschein) ausgesetzt werden und muss korrekt installiert sein. Weitere Informationen finden Sie im Abschnitt „Wechseln der Lithiumbatterie“.



# VORBEREITUNG FÜR DEN GEBRAUCH

## Auspacken und Aufstellen

- Entfernen Sie der Radiowecker aus dem Karton und dem Verpackungsmaterial. Bewahren Sie den Karton und die Verpackung für den Fall auf, dass der Wecker jemals gewartet oder transportiert werden muss.
- Entfernen Sie alle beschreibenden Etiketten oder Aufkleber auf der Vorder- oder Oberseite des Gehäuses. Entfernen Sie keine Etiketten oder Aufkleber von der Rückseite oder dem Boden des Gehäuses.
- Schreiben Sie die Seriennummer, die Sie auf der Unterseite Ihres Radios finden, in das entsprechende Feld auf der Garantieseite dieses Handbuchs.
- Stellen Sie Ihr Radio so auf eine ebene Fläche wie einen Tisch, einen Schreibtisch oder ein Regal, dass es in der Nähe einer Steckdose steht, vor direktem Sonnenlicht geschützt ist, sowie fernab von Hitze-, Schmutz-, Staub-, Feuchtigkeits- oder Vibrationsquellen steht.
- Wählen Sie den passenden Steckeranschluss aus und schließen Sie ihn an das Netzteil an. Wickeln Sie das Netzkabel ab und verlängern Sie es vollständig.
- Die FM-Antenne ist in das Kabel integriert. Daher muss es vollständig erweitert werden, um den besten FM-Empfang zu gewährleisten.
- Schließen Sie das Netzteil an das Stromnetz und das Radio an. Stellen Sie sicher, dass die Netzsteckdose eingeschaltet ist.

## Schützen Sie Ihre Möbel

Dieses Modell ist mit rutschfesten Gummifüßen ausgestattet, um zu verhindern, dass sich das Produkt beim Betätigen der Bedienelemente bewegt. Diese „Füße“ sind aus nicht migrierendem Gummimaterial hergestellt, das speziell entwickelt wurde, um Flecken auf Ihren Möbeln zu vermeiden. Allerdings können bestimmte Arten von ölhaltigen Möbelpolituren, Holzschutzmitteln und Reinigungssprays dazu führen, dass die Gummifüße weich werden und Spuren auf den Möbeln hinterlassen. Um die Gefahr solcher Schäden an Ihren Möbeln zu vermeiden, empfehlen wir, entweder ein Tuch oder selbstklebende Filzpolster an der Unterseite des Weckers anzubringen.

## Stromquelle

Der Radiowecker verwendet ein Netzteil, dessen Art davon abhängt, wo der Radiowecker gekauft wurde. Das Netzteil für Nordamerika ist für 120V bei 60Hz und innerhalb Europas oder Australiens für 220-240V bei 50Hz ausgelegt. Die Verwendung eines falschen Netzteils wird nicht von der Garantie abgedeckt, da dies der Radiowecker beschädigen könnte. Eine Lithiumbatterie wird verwendet, um die Zeit- und Weckereinstellungen auch dann aufrechtzuerhalten, wenn der Radiowecker von der Netzspannung getrennt wird. Um die Lebensdauer der Lithiumbatterie zu maximieren und die Radio- und Alarmfunktionen aktiv zu halten, sollten Sie sicherstellen, dass das immer Netzteil angeschlossen bleibt und die Netzsteckdose niemals ausgeschaltet wird. Idealerweise sollten Sie eine ungeschaltete Netzsteckdose verwenden.

# WICHTIGE HINWEISE

- Vermeiden Sie es, diesen Radiowecker dort aufzustellen, wo er direkter Sonneneinstrahlung, Wärmequellen, schlechter Belüftung ausgesetzt ist und an Stellen zu platzieren, die staubig, feucht, nass oder Vibrationen ausgesetzt sind.
- Bedienen Sie Bedienelemente und Schalter wie im Handbuch beschrieben.
- Vergewissern Sie sich vor dem Einschalten, dass das Netzteil richtig eingesteckt ist.
- Wenn Sie das Gerät bewegen, müssen Sie zuerst den Netzstecker ziehen.
- Verwenden Sie das Netzteil nicht, wenn ein Teil davon beschädigt ist.