
单页尺寸: 80*110mm 展开尺寸: 240*110mm 双面三折页彩色印刷 105G铜版纸

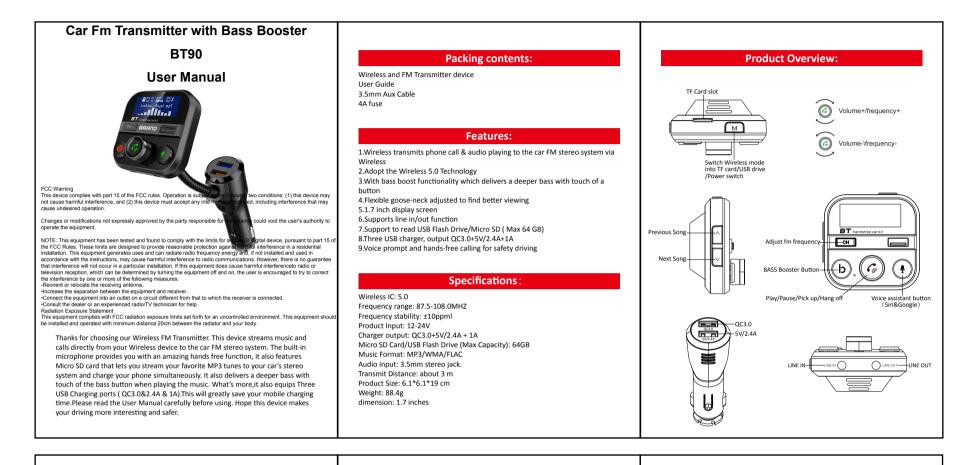

How to Install

1.Star your car,open car radio to set a blank FM frequency(like 106.2MHZ) without any show(must be blank)

2.Insert the device into your car cigarette, set same FM frequency(106.2MHZ) as your cars.

3.Open your phone wireless to find the device named"BT90" to connect it successfully(Using Wireless for the first time, normally it will pair automatically but sometimes it will require you to enter the passworld.Please use the passworl "0000")

4.Enjoy the device with hands-free call and music from your phone or flash drive

FM Frequency Tuning

star your car,open car radio to set a blank FM frequency(like 106.2MHZ) without any show(must be blank).Press "CH" button and rotate the C_p button to set the frequency on the device same as your cars

Wireless Pairing

When you insert the device into your car cigarette lighter, you need to open the BT on your mobile phone to search the device named"BT00" to pair. At the first you use, Normally the connection will pair automatically but sometimes it will requires you to enter the password. Please use the password 0000.

Wireless calling:

1.Please press $C_{\mathscr{P}}$ to answer the incoming call or hang off a call. 2.Please press $C_{\mathscr{P}}$ and hold for 2 seconds during call to reject the incoming call in Wireless calling mode.

3.Please press 💪 twice to dial the last Number automatically.

4.When making a call, you can only dial the phone number by your mobile phone, but once the call connected, you can use the hands-free function to enjoy it.

Playing Music

Turn on the music APP on your phone or insert the USB flash drive/Micro SD card containing mp3 files into the port. (It will play music automatically if using USB flash drive/Micro SD card) 1.Press 🏠 button to play or pause music 2.Press < button to play previous song 3.Press < button to play next song

4.Long press \land button to Fast forward(not support in Line in mode)

5.Long press v button to fall back(not support in Line in mode)

Bass Music:

When listening the music by TF/USB/ or mobile phone. Press the button " $\,$ b " to enjoy the bass music. Press again to get back the original audio.

Voice Assistant:

" \P " click to enter the voice assistant function, support siri, google voice

assistant Under the " \P " voice interface, click again to exit the voice assistant.

Turn On/Off:

When do not need to use the FM function,You can long press " M" for 3 seconds to turn off the device, the charge function still work well. Also, when you listen music from wireless and TF card or usb drive, you can press " M" switch from wireless mode into TF card/usb drive mode into wireless mode.

AUX input / output

 $(1)\,$ AUX input: This device supports external input, through the AUX connector to receive music sources, such as MP4.CD.etc and then the music source will be converted to FM signal by radio

 $(2)\;$ AUX output: The device supports music internal output, which can be accepted by combining sound, car audio and portable phone.

Using USB charger function:

This device with three USB port for charging, One port is QC3.0 fast charger,One port is 2.4A, Another port is 1A. When this unit powered from car lighter socket, connect the USB Charger port

to your mobile phone or others device with a special USB cable (not included).

Quick Guide:

Operation Guide	On FM transmitter
1. Answer / hang up the call:	Press " \mathcal{C}_{p} " button: answer the call Press " \mathcal{C}_{p} " button: hang up the call
2.Ignore call	Press " ${\cal G}$ "and hold for 3 seconds to reject incoming calls
3.Call last Number	Press " 🍫 "twice to dial the last Number automatically.
4.Private calling	When answering a call, press " \mathcal{C}_{p} "and hold for 3 seconds to switch to private call mode.
5.Play and Pause the music:	Press " 🌈 "Button: Play the music Press " 🌈 "Button again: Pause playing
6. Adjust the Volume:	Press " 🌮 "Rotate right to increase the Volume+ Press " 🌈 "Rotate right to decrease the Volume-
7.Set frequency:	press the "CH"button, and rotate " \mathcal{C}_{g} " to adjust fm frequency
8.Choose music:	Press " \lor "Button: Play the next song Press " \land "Button: Play the previous song
9.Bass Booster:	Press " D "Button to active the deeper bass music
10.Feature Switch /Power switch	Press " M "Button to switch the modes between the Wireless and Micro SD card and USB drive reading Press"M" Button for 3 seconds to Power switch