

**Control
light &
sound**
from your
mobile device

 
STREET  HOPPER

User Manual

The Street Hopper Bluetooth Portable Speaker System with rechargeable battery will stream your favorite music for hours, from any Bluetooth device card or the USB. Street Hopper gives you a full Multi-Color LED light show, with a variation of programmed light displays. All controlled via the front panel, remote control or Streethopper App.

The Streethopper free app is available from Android/Apple App Stores. The Streethopper app gives you full control of the Street Hopper features via bluetooth connection. Control the source, volume and EQ levels. Change the LED lighting to any color and light profile to set the mood. Choose and playback music from your music library, or the USB. The Street Hopper portable design and go anywhere with anything feature, like the Microphone input and Guitar input for those plug and play times.

Download
The FREE
APP

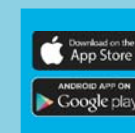

FEATURES:

RECHARGEABLE LITHIUM BATTERY FOR UP TO 10 HOURS OF AUDIO PLAYBACK
5" ACTIVE & PASSIVE RADIATOR SUBWOOFERS W/ 2.50" SPEAKERS & TWEETERS
20 PRESET & CUSTOM APP CONTROLLED RGB LED LIGHTING MODES
BRILLIANT WHITE LED FUNCTION DISPLAY WITH SCROLLING READOUT
DIGITAL FM RADIO TUNER BUILT-IN WITH 30 AUTOMATIC PRESETS
USB & MICRO-SD INPUT FOR MP3 & OTHER DIGITAL MUSIC PLAYBACK
USB CHARGING OUTPUT FOR MOBILE DEVICES: 5V/1A
3.5MM LINE INPUT FOR PLAYBACK FROM OTHER DEVICES
1/4" PHONO MICROPHONE INPUT TO SING ALONG WITH YOUR FAVORITE SONG
VOLUME & DIGITAL ECHO CONTROL FOR DYNAMIC KARAOKE SOUND EFFECTS
1/4" PHONO GUITAR INPUT TO PLAY ALONG WITH YOUR FAVORITE SONG
PRESET & CUSTOM EQUALIZER FOR DYNAMIC SOUND QUALITY
NYLON SHOULDER CARRY STRAP WTH QUICK RELEASE INCLUDED
DIMENSIONS: 7.50 "X 7.25" X 17.75"

There is two different ways to connect the Bluetooth feature for STREET HOPPER 5+. **Bluetooth direct** connect from the STREET HOPPER 5+, or **Bluetooth connect** via the StreethopperApp.

Note: The STREET HOPPER 5+ can be connected to both Bluetooth direct and the Streethopper App at the same time. **Bluetooth direct** will be used to playback any music media and apps, such as Pandora, You Tube, your music player etc. All control of the music media will be controlled through their prospected app controls.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For **Bluetooth connect** from the Streethopper App you will have full remote control of the STREET HOPPER 5+ features, playback controls, volume & EQ as well as lighting control.

Bluetooth direct connect control:

Bluetooth:

1. Turn the power button to "ON".
2. Activate *Bluetooth* of mobile phone and search for device name "Street hopper 5+" then connect it. The blue LED light twinkle slowly and and beep third times once connected successful.
3. Play the music from your mobile phone and enjoy.
4. Press LAST or NEXT button on the devices or on Mobile phones to select songs you like.
5. Press Play/pause button on the devices or on Mobile phones to play/stop the music
6. Use the "Volume Gear "to adjust volume up and down. Or adjust the mobile phones' volume.

Playing music from USB disk & MICRO SD card:

1. Turn the Power button to "ON".
 2. Insert MICRO SD card or USB flash disk into slot, the music stored will be played automatically and blue LED light always keep lighting.
 3. Under playing mode, short press Forward or Backward button to select songs you like, long press to fast forward or backward the song.
 4. Press PLAY/PAUSE to play or pause.
 5. Please turn the Power button to "OFF" while without use.
- Remark: Under Bluetooth playing mode, insert MICRO SD or USB will disconnect the Bluetooth and switch the playing from USB or MICRO SD card. You can press the MODE button to switch back to Bluetooth mode again.

Radio Operation(Auto search)

Press MODE button to select FM mode.

1. Radio program automatic scan
Hold PLAY / PAUSE button on the front panel around 3 seconds to have the device enter into automatic scan.
2. Station program selection
Press PLAY / PAUSE button on the front panel, you can choose & listen to the saved programs when flashing radio frequency.

Radio Operation(Manual up/down)

Press MODE button to select FM mode.
Press PREV/NEXT button on the front panel to manual fine tune the radio station.



fig.4



fig.5

Mute line in/aux input when connected



Fig.6

Interface Index & Radio Operation
Press enter into FM radio mode, press SCAN to enter into radio program automatic scan. Press for radio program manual scan, Top and bottom trimming, slide around to adjust radio frequency between 87.5MHz~108.0MHz



fig.7 fig.8

Accessories:

Adapter, charge cable, audio cable, strap.

fig.3.1

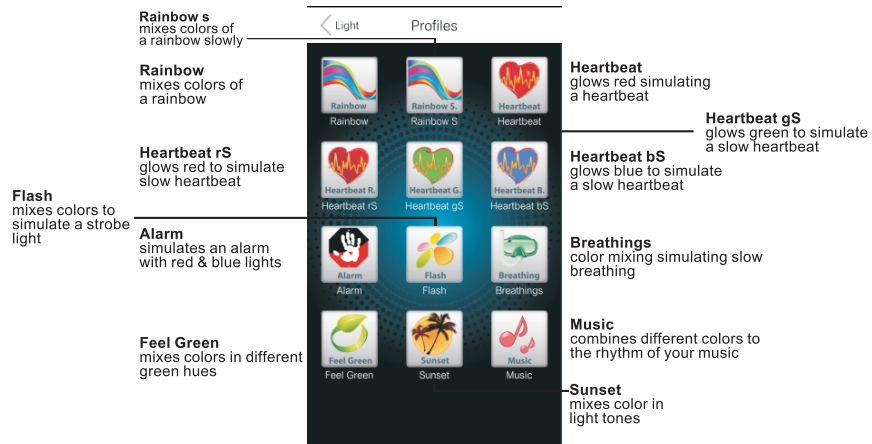 


Fig3.2 Access lighting Customize profiles



Roll up and down to choose different light effect.

Colorful gradient, Red gradient, Green gradient, Blue gradient, yellow gradient, Cyan gradient, Purple gradient, white gradient, Red green gradient, Red Blue gradient, Green blue gradient, Colorful strobe, Red strobe, Green strobe, Blue strobe, yellow strobe, Cyan strobe, Purple strobe, White strobe, Colorful jump

AUX-IN:

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this devices. Press MODE button to select AUX IN mode. When using an external device, all functions will be controlled by the external device except the "Play/pause" button.

Use wired or Wireless Microphones(Optional):

Just plug the 6.5mm microphone into the microphone inputs. Or turn your wireless microphone included with speaker to "ON". Wired and wireless microphones can work together. The Microphone Volume and Microphone Echo can be adjusted by the "MIC-GUITAR" and "MIC-ECHO" knobs.

Play Guitar:

Just plug the Guitar into the Guitar inputs. The Guitar Volume can be adjusted by the "MIC-GUITAR" knobs.

How to charge:

1. Power off the unit, put the provided charge cable into the charge slot of unit(NO.20 in the panel illustration), connect the other end to provided charger, the red charging indicator keep lighting.
2. Charge time should be around 6 hours. When charging full, the indicator light will switch off.
3. In order to prolong the life of battery, please do not charge more than 8 hours.

Bluetooth connect via the StreethopperApp:

 
1. Turn on Bluetooth via your device settings, locate and pair to STREET HOPPER 5+.
2. Verify that your device is connected to the STREET HOPPER 5+ device
3. Download the FREE Streethopper App in your App Store and install it




4. Now activate your application and select Bluetooth symbol.



5. Select STREET HOPPER6 APP to connect via the application.

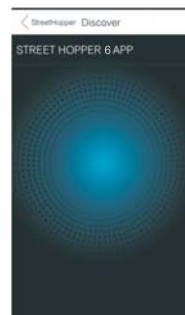

Panel

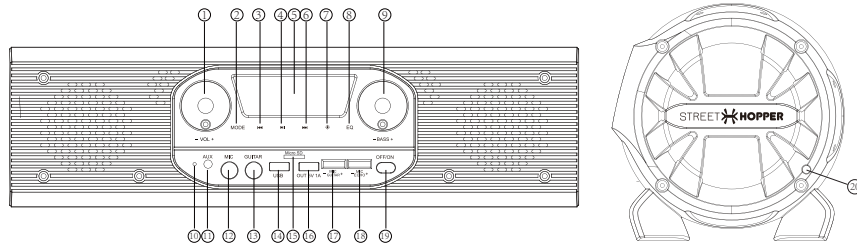 

- 1. **Volume /Mute:** Adjusts main volume;Holding this button for 3 seconds will mute the unit.
- 2. **MODE:** USB/LINE IN/BLUETOOTH/FM:Switch functions by pressing button:
- 3. **Previous Song**
- 4. **Play / Pause**
- 5. **LED Panel Function Display**
- 6. **Next Song**
- 7. **light control:** Long press to Power on and off the LED,short press to change light effect (Music,Rainbow,Rainbow S,heartbeat,heartbeat R.,Heartbeat G.,Heartbeat B., Alarm,Flash,Breathing,Feel Green,Sunset,Music)
- 8. **EQ:**Switch sound style:Popular,Rock,Urban,Jazz,Classical
- 9. **Base-/+:** Adjusts bass volume
- 10. **Charge Indicating LED**
Red, indicates Charging
Green indicates charging is complete
- 11. **Aux in**
- 12. **Mic Input**
- 13. **Guitar Input**
- 14. **USB**

15. **SD card jack**

16. **Output (USB 5V 1A)**

 
17. **Mic Guitar Volume-/+:** Adjusts Mic Guitar Volume

18. **Echo Volume-/+:** Adjusts Echo Volume

19. **Power Button**

20. **Charger Input**

* Note: For optimal performance, charge battery for a period of 10 hours

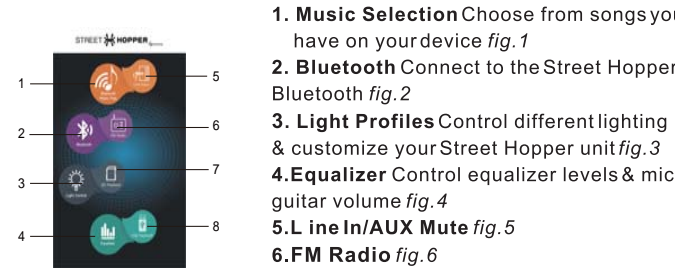

1. **Music Selection** Choose from songs you have on your device *fig. 1*

2. **Bluetooth** Connect to the Street Hopper unit via Bluetooth *fig. 2*

3. **Light Profiles** Control different lighting profiles & customize your Street Hopper unit *fig. 3*

4. **Equalizer** Control equalizer levels & microphone/ guitar volume *fig. 4*

5. **Line In/AUX Mute** *fig. 5*

6. **FM Radio** *fig. 6*

7. **SD SCard** *fig. 7*

8. **USB** control music from USB Card *fig. 8*



fig.1

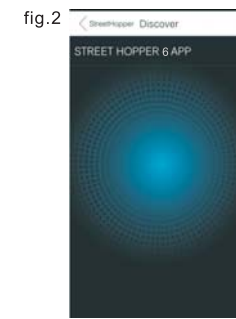 


fig.2

-Bluetooth
Synchronizing your app with the Street Hopper Unit

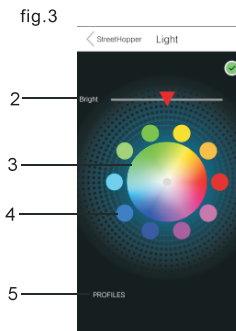 


fig.3

1. **Active Illumination** You can enable or disable the illumination

2. **Lumin** controls the intensity of illumination

3. **Color Wheel** Here you can select colors directly and change the pitch by dragging it to any part

4. **Fixed Colors** Control 6 different color tones

5. **Profiles** Access lighting profiles *fig. 3. 1*