














<div data-bbox="246 1200 493 1229"><h3>Be friends with Krypton 7</h3></div> <div data-bbox="246 1261 723 1342"><p>How to awaken the controller: Press the power on/off button and hold for three seconds. The screen displays the  is rotating, which means the controller has been woken.</p></div> <div data-bbox="246 1370 723 1504"><p>Rest When there is an icon “REST” rotating, it means the controller is under REST mode, namely the controller is running at a low power dissipation. Click the icon again then the “” stops rotating, and then the REST mode stops.</p></div> <div data-bbox="246 1532 723 1638"><p>Soul Slide icon “REST”  to the left, it displays an icon “”, which is a built-in program of the Krypton 7. Come and make friends with this robot of character!</p></div> <div data-bbox="246 1666 723 1853"><p>How to program for Krypton 7? (1) Download the following 4 progressive programming apps from the APP Store (iPad) or AbilixApp Store (Android Tablet): Meet Krypton Krypton Project Programming Abilix Chart Abilix Scratch</p></div>	<div data-bbox="840 1261 1317 1338"><p>(2) Slide the controller screen; find the “QR Code”; run the simplest “Meet Krypton 7” APP on the tablet; click icon  and scan the QR code; connect the tablet to the robot as the prompts go.</p></div> <div data-bbox="840 1370 1317 1447"><p>(3) When the robot and the tablet are connected, Krypton 7 will run the “Krypton Project Programming” app automatically, and there will be an icon  on the screen.</p></div> <div data-bbox="840 1478 1317 1634"><p>(4) If you write a program named “Program 1” with the “Krypton Project Programming” APP, and download it to the robot, you can find the icon “”. Congratulations! You made your first program. By this time, the icon is in a state of rest; click it and the star starts to rotate, it means the program is running; click again, the program stops; long press the icon, a delete confirmation will pop up.</p></div> <div data-bbox="840 1661 1317 1930"><p>How to update? (1)Exit all the programming apps; connect the tablet to the network router and keep the password of which in mind (if there is one). (2)Find the “QR Code” in the controller; open the “Meet Krypton 7” App; click the icon ; scan the QR code; connect the robot to the tablet as the prompt goes, during which, the password of the router needs to be input in the APP, after that, the router info will be sent to the krypton 7 by the APP. (3)Slide the icons in the controller; click the “update” and update by following the prompts.</p></div>	<div data-bbox="1422 1261 1834 1342"><p>Learn more For more information about the Krypton 5, please visit website www.abilix.com or call 400 808 0199 for more support.</p></div> <div data-bbox="1422 1370 1834 1491"><p>*This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation</p></div> <div data-bbox="1422 1725 1905 1900"><div><div><p>partner^x</p><p>Creator: Shanghai PartnerX Robotics Co., Ltd. Address: Building 90, No. 1122, North Qinzhou Road, Shanghai Tel:400 808 0199 Website: www.abilix.com</p></div></div></div>
---	--	---

请核对上面信息

- 尺寸
- 88X125MM
- 128克哑粉纸
- 三折页

Attention! 注意！

- 定期检查其电线、插头和其他部件是否损坏、发现损坏时应停止使用，直至修复完好
It shall be regularly examined for damage to cord,plug enclosure and other parts,and, they must not be used until the damage has been repaired
- 玩具只能连接具有  符号的等级 II 设备
The toy is only to be connected to Class II equipment bearing the symbol 
- 玩具不能连接到多于推荐数量的电源上
The toy is not to be connected to more than recommended number of power supplies
- 非充电电池不能充电
Non-rechargeable batteries are not to be recharged
- 充电电池在充电前应从玩具中取出
Rechargeable batteries are to be removed from the toy before being charged
- 充电电池只能在成人监护下充电
Rechargeable batteries are only to be charged under adult supervision
- 不同类型的电池或新旧电池不能混用
Different types of batteries or new used batteries are not to be mixed
- 电池应以正确的极性放入
Batteries are to be inserted with the correct polarity
- 用尽的电池应从玩具中取出
Exhausted batteries are to be removed from the toy
- 电源端子不得短路
The supply terminals are not to be short-circuited
- 玩具不得供3岁以下儿童使用
The toy is not intended for children under 3 years old
- 玩具只能使用推荐充电器
The toy shall only be used with a charger for toys
- 适用充电器的型号或规格
The model number or specification of a suitable charger for use with the toy
- 充电器不是玩具
The charger is not a toy

如何放入电池 How to insert replaceable batteries

- ① 将电池两个凸点对准控制按钮后的两个孔
Insert the battery into the battery bay
- ② 轻轻按下卡扣出现“咔嗒”声
Press it down until you hear a click
- ③ 完成
Done



名称：氮系列电池卡EN；V1.0

制作要求：
工艺：105g哑粉纸，双面打印，
尺寸：88*125mm

Statements:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Cet appareil est conforme à la section 15 des réglementations de la FCC. Le fonctionnement de l'appareil est sujet aux deux conditions suivantes :
(1) cet appareil ne doit pas provoquer d'interférences néfastes, et
(2) cet appareil doit tolérer les interférences reçues, y compris celles qui risquent de provoquer un fonctionnement indésirable.

Note: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.