



 
MULTIMEDIA NAVIGATION

Punta Del Este 960



*Enjoy it.*

Operating and installation instruction

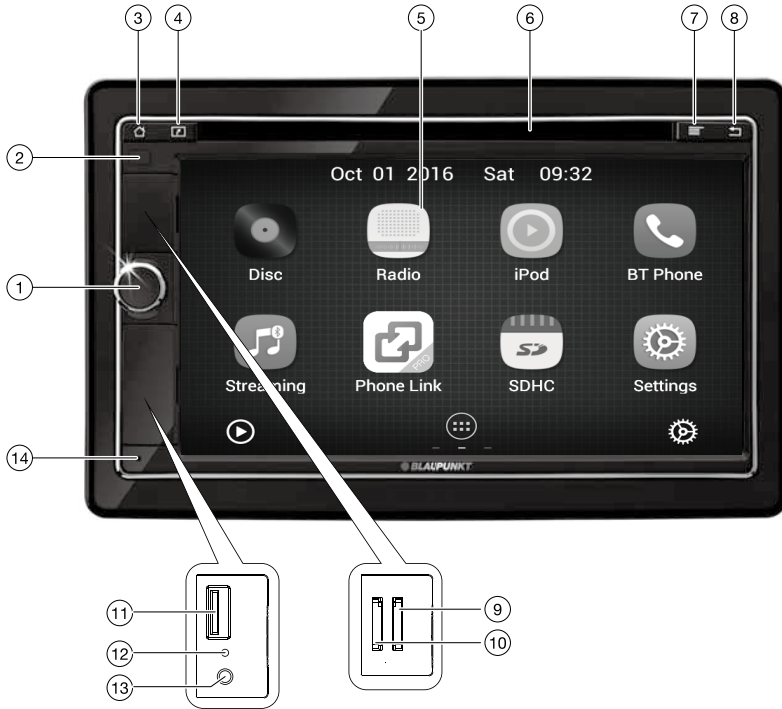






- 1 Rotary/pushbutton  
Switching on the device  
In operation:  
Short press: Mutes audio source  
Long press: Switches off device  
Turn: Adjusts volume
- 2 Infrared receiver for remote control
- 3 button (Home)  
Short press: Calls up the main menu  
Long press: Displays active apps
- 4 button (Navigation/Eject)  
Short press: Start navigation or switch between navigation and current audio source  
Long press: Ejects a DVD/CD
- 5 Touchscreen user interface
- 6 DVD/CD drive
- 7 button  
Short press in main menu: Shortcut for background settings and calls up *Settings* menu  
Short press in active app: Calls up options
- 8 button (back)  
Short press: Returns to previous screen  
Long press: Calls up brightness settings for display
- 9 microSD card reader for media (under the cover)  
: microSD card reader for navigation data (under the cover)  
; USB-1 socket (under the cover)  
< Reset button (under the cover)  
Restoring factory settings  
**Note:**  
All personal settings will be deleted!  
= AUX-IN-1 socket (under the cover)  
> Internal microphone
- 11
- 12
- 13
- 14



- 15 **SRC** button  
Switching between radio, navigation and available media sources
- 16 **▲ / EJECT** button  
Ejecting a DVD/CD
- 17 **INFO** button  
For DVD playback: Displays track/chapter number as well as shows/hides current playing time
- 18 **MENU** button  
For DVD playback: Opens DVD menu/returns to playback
- 19 **ZOOM** button  
For DVD playback: Selects zoom level 1-3, deactivates zoom
- 20 **PIC** button  
Opening display brightness setting
- 21 **▶▶** button  
For DVD playback: Starts slow motion

- 22 **■** button  
For DVD playback: Ends playback
- 23 **☰** button  
Short press in main menu: Shortcut for background settings and opens Settings menu  
Short press in active app: Opens options  
Long press: Function for current Android app (if available)
- 24 **🏠** button  
Short press: Opens main menu  
Long press: Displays active apps
- 25 **▶||** button  
Pausing/continuing media playback
- 26 **⚙️** button  
Open Settings menu
- 27 **📞** button  
Answering a call
- 28 **📞** button  
Ending/rejecting a phone call
- 29 **Number buttons 0 - 9**  
On keyboard: Number input  
Number "0" for media playback: Sets repeat title (not for Bluetooth® streaming)
- 30 **# / 📞** button  
For media playback: Sets random track playback (not for Bluetooth® streaming)  
On phone keypad: Enters "#" character
- 31 **\* / 🔍** button  
Short press:  
Radio: Scans stored stations  
DAB: Scans stations  
Media: Scans tracks  
On phone keypad: Enters "\*" character  
Long press:  
Radio: Scans stations of current waveband
- 32 **🔊 -** button  
Decreasing the volume
- 33 **OK** button  
Confirming a selection
- 34 **🔊 +** button  
Increasing the volume
- 35 **▲ / ▼**: buttons  
In main menu: Toggles between app lines  
In settings menus: Selects menu entry  
In displays: Toggles between display areas  
◀ / ▶ buttons:  
In main menu: Selects an app button  
In settings menus: Changes setting  
In displays: Selects button
- Note:**  
Confirm a selection with **OK** (32) in each case.
- 36 **🔇** button  
Muting the device/cancelling mute

<p>37  button  <u>Short press:</u>                      Radio: Changes frequency in increments                      DAB: Selects previous/next station                      Media: Selects previous/next track  <u>Long press:</u>                      Fast searching</p> <p>38  button  <u>Short press:</u> Returns to previous screen  <u>Long press:</u> Calls up brightness settings for display</p> <p>39  button                      Deletes last keyboard entry</p> <p>40  A-B button  <u>For DVD playback:</u> Repeats individual section</p> <p>41 <b>GOTO</b> button  <u>For radio playback:</u> Selects frequency  <u>For media/DVD playback:</u> Selects track/chapter number</p> <p>42 <b>ANGLE</b> button  <u>For DVD playback:</u> Selects camera viewing angle                      (if alternative camera viewing angle is available)</p> <p>43 <b>SUBTITLE</b> button  <u>For DVD playback:</u> Selects subtitle language</p> <p>44 <b>AUDIO</b> button  <u>For DVD playback:</u> Selects playback language</p> <p>45  / <b>POWER</b> button                      Switching the device on/off</p>	<p><b>Safety notes</b> ..... 5</p> <p><b>Cleaning notes</b> ..... 6</p> <p><b>Disposal notes</b>..... 6</p> <p><b>Placing the device in operation</b>..... 7</p> <p>Switching on/off ..... 7</p> <p>Volume ..... 7</p> <p><b>Operation</b> ..... 7</p> <p>Touchscreen ..... 7</p> <p>Main Menu ..... 8</p> <p>Applications Menu ..... 8</p> <p><b>Radio mode</b> ..... 8</p> <p>Start radio mode..... 8</p> <p>Select memory bank ..... 9</p> <p>Tuning into a station ..... 9</p> <p>Storing stations manually ..... 9</p> <p>Storing stations automatically (Travelstore) .... 9</p> <p>Auto Store ..... 9</p> <p><b>DVD/CD/USB/microSDHC media playback10</b></p> <p>Inserting a DVD/CD ..... 10</p> <p>Ejecting a DVD/CD ..... 10</p> <p>USB data carrier..... 10</p> <p>MicroSDHC cards..... 10</p> <p>DVD movie playback..... 10</p> <p>Audio playback from DVD/CD, USB or microSDHC                      ..... 11</p> <p>Video playback from DVD/CD, USB or microSDHC                      ..... 11</p> <p>Image playback from DVD/CD, USB or audioSDHC                      ..... 12</p> <p><b>Bluetooth mode</b>..... 13</p> <p>Starting Bluetooth mode..... 13</p> <p>Registering Bluetooth devices..... 13</p> <p>Telephone mode - Bluetooth ..... 13</p> <p>Making a Call ..... 13</p> <p>Call History..... 14</p> <p>Bluetooth Settings ..... 14</p> <p><b>PhoneLink</b> ..... 15</p> <p>Overview of PhoneLink..... 15</p> <p>Connect with Android phone ..... 15</p> <p>Connect with iPhone ..... 15</p>
---	--

**iPod/iPhone Operations..... 16**  
 Accessing iPod mode..... 16  
 Pausing play ..... 16  
 Selecting a track..... 16  
 Repeat play ..... 16  
 Random play ..... 16  
 Search function ..... 16  
**Sound settings..... 17**  
**Navigation Operations..... 17**  
**AUX Operations ..... 17**  
**Steering Wheel Control ..... 17**  
**Basic Settings..... 18**  
**Connection diagram..... 19**  
**Appendix..... 20**

**Safety notes**

The car sound system was manufactured according to the state of the art and established safety guidelines. Even so, dangers may occur if you do not observe the safety notes in these instructions.

These instructions are intended to familiarise you with the most important functions. Detailed information can be found on the Internet under [www.blaupunkt.com](http://www.blaupunkt.com).

- Read these instructions carefully and completely before using the car sound system.
- Keep the instructions at a location so that they are always accessible to all users.
- Always pass on the car sound system to third parties together with these instructions.

In addition, observe the instructions of the devices used in conjunction with this car sound system.

**Symbols used**

These instructions employ the following symbols:



**DANGER!**

Warns about injuries



**CAUTION!**

Warns about damages to the DVD/CD drive



**DANGER!**

Warns about high volume



The CE mark confirms the compliance with EU directives.

➤ Identifies a sequencing step

- Identifies a listing

**Road safety**

Observe the following notes about road safety:



**DANGER!**

**Risk of road safety by using the device while driving.**

The use of device functions while driving may divert your attention from the traffic situation and lead to serious accidents!

Particularly the use of the following functions significantly impacts your attention as the operator of the vehicle:

- Navigation (making settings, such as address entry)
- Video playback
- Internet use (e.g. via the "Browser" app)
- Use of a connected smartphone via mirror mode

Refrain from these functions and all additional functions that will divert your attention from the traffic situation and from operating the vehicle while driving.

To use these functions, stop at a suitable location and operate your device while the vehicle is standing.

- **Use your device in such a way that you can always safely control your vehicle.** In case of doubt, stop at a suitable location and operate your device while the vehicle is standing. As the driver, you may not use the applications that will distract you from traffic (depending on the scope of functions of the device, e.g. viewing videos, entering a destination).
- **Follow the driving recommendations during the route guidance only if you are not violating any traffic regulations!** Traffic signs and traffic regulations have always priority over driving recommendations.
- **Always listen at a moderate volume** to protect your hearing and to be able to hear acoustic warning signals (e.g. police sirens). During mute phases (e.g. when changing the audio source), changing the volume is not audible. Do not increase the volume during this mute phase.

### General safety notes

Observe the following note to protect yourself against injuries:

**Do not modify or open the device.** The device contains a Class 1 laser that can cause injuries to your eyes.

### Use as directed

This car sound system is intended for installation and operation in a vehicle with 12 V vehicle system voltage and must be installed in a DIN slot. Observe the output limits of the device. Repairs and installation, if necessary, should be performed by a specialist.

### Installation instructions

You may only install the car sound system yourself if you are experienced in installing car sound systems and are very familiar with the electrical system of the vehicle. For this purpose, observe the connection diagram at the end of these instructions.

### Declaration of conformity

The Blaupunkt Technology GmbH declares that the device complies with the basic requirements and the other relevant regulations of the directive 1999/5/EC.


The declaration of conformity can be found on the Internet under [www.blaupunkt.com](http://www.blaupunkt.com).

### Cleaning notes

Solvents, cleaning and scouring agents as well as dashboard spray and plastics care product may contain ingredients that will damage the surface of the car sound system.

Use only a dry or slightly moistened cloth for cleaning the car sound system.

### Disposal notes

 Do not dispose of your old unit in the household trash!

Use the return and collection systems available to dispose of the old device, the remote control and exhausted batteries.

## Placing the device in operation

### Caution!

#### Transport securing screws

Ensure that the transport securing screws at the top side of the device are removed before the startup of the device.

## Switching on/off

### Switching on/off with the rotary/pushbutton

- For switch-on, press the rotary/pushbutton ①.
- For switch-off, hold the rotary/pushbutton ① pressed for more than 2 seconds.

### Switching on/off via vehicle ignition

If the car sound system is connected with the vehicle ignition and it was switched off with the rotary/pushbutton ①, it is switched on or off with the ignition.

## Volume

### Adjusting the volume

You can adjust the volume in increments from 0 (off) to 40(maximum).

- Turn the rotary/pushbutton ① to change the volume.

### Muting the car sound system (Mute)

- Briefly press the rotary/pushbutton ① to mute the device or to reactivate the previous volume.

## Operation

### Touchscreen

#### Important note:

Do not use any pointed or hard objects, such as ball point pens or fountain pens, to operate the touchscreen.

The device features a capacitive touchscreen that provides a remote control and device buttons (see the section "Controls" at the beginning of these instructions) and allows operating the device.

#### Tapping

To activate a control, e.g. a button, a slight touching of the display surface is sufficient. You do not have to exert any pressure on the display surface.

- Short tap:  
A short tap on the display surface is sufficient for activating most of the controls.
- Long tap:  
Some functions require a long tap. Rest your fingertip on the display surface for approximately 1 second.

#### Swiping/scrolling

Some functions require swiping across the display surface, e.g.

- scrolling in lists,
- adjusting sliders.


Tap on the display surface and rest your finger on the surface. Next, move your finger over the surface.

 
#### Zooming

When displaying maps (navigation) and images, you can enlarge or reduce the view (zoom):

Tap on the area of the map display with two fingers and rest your fingers on the surface. Move your two fingers closer together (zoom out/reduce) or further apart (zoom in/enlarge).


## Main Menu


Touch the [  ] button to enter main source menu.

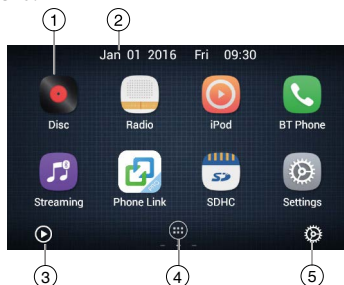

1. Car AV system source bar:  
Touch and hold the center of the bar and drag left/right to show more icons.  
Touch desired icon to enter corresponding mode.
2. Clock.
3. Current audio/video source.
4. Show applications list.
5. Enter setting mode.

## Applications Menu

 Touch [  ] to enter applications menu.

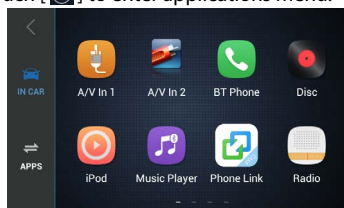


1. IN-CAR  
Show the Car AV applications.
2. APPS  
Show the Android applications installed.  
In the list menu, drag left/right to scroll.  
Touch and hold an icon for more than 2 seconds to add shortcut to the desktop. To delete the shortcut, hold it and drag to the [X] on the top, and release after it turns red.


## Radio mode
 
### Start radio mode

In the main menu, press the [ **Radio** ] button. The radio playback menu is displayed.

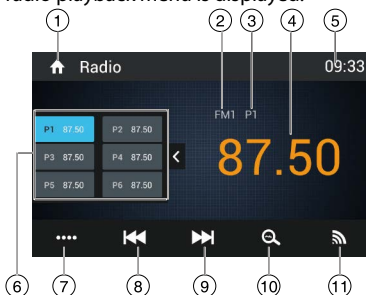

 1. Return to home menu
2. Current radio band
3. Current preset radio station
4. Current frequency
5. Clock
6. Broadcaster information stored at the preset
7. Touch to view more on-screen buttons
8. Auto tune backward.  
Tune backward (long press)
9. Auto tune forward.  
Tune forward (long press)
10. Search stations automatically
11. Band switch

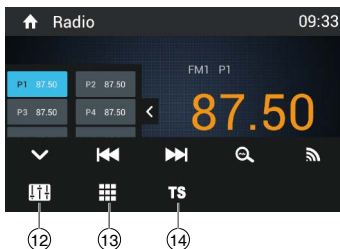


12. Touch for quick access to Equalizer level settings
13. Enter frequency directly
14. Storing stations automatically



## Select memory bank


 
Different memory banks and wavebands are available. Up to 6 stations can be stored in each memory bank.

- Press the [  ] button repeatedly until the desired memory bank is displayed.  
FM1 → FM2 → FM3 → AM1 → AM2 → FM1

## Tuning into a station



### Tuning into stations manually

During manual tuning, the frequency will be changed in steps.


 
- Press the [  ] or [  ] button for approx. 2 seconds to tune in a higher / lower station.

### Enter broadcast frequency directly


If the frequency of the desired stations is known, it can be entered directly via the touchscreen.

- Press the [  ] button to display additional operating options.
- Press the [  ] button.  
A numeric keypad is displayed for the frequency input.
- Enter the frequency of the desired station with the numeric keypad.
- Press the [ **OK** ] button.  
The radio playback menu is displayed, the station of the frequency entered is played back.

### Starting station seek tuning

 
- Briefly Press the [  ] or [  ] icon on the user interface to seek a higher / lower station.  
To stop searching, repeat the operation above or press other keys having radio functions.

## Storing stations manually

- Select the desired memory bank with the [  ] button.
- Set the desired station.
- Press one of the memory buttons [ **P1** ] - [ **P6** ] for approx. 2 seconds to store the current station at the button.  
The station is stored.

## Storing stations automatically (Travelstore)

With Travelstore, you can automatically search for and store the 6 FM stations offering the strongest reception in the region in the current memory bank. Any previously stored stations in this memory bank are deleted in the process.

- Select a memory bank.
- Press the [  ] button to display additional operating options.
- Press the [ **TS** ] button.


The tuner starts the automatic station seek tuning. After the storing is completed, the radio plays the station at memory location 1 of the previously selected memory bank.

### Note:

For the reception area Europe: With switched-on priority for traffic information, only traffic information stations are stored.

## Auto Store

Only stations with sufficient signal strength will be detected and stored in the memory.

To start automatic station search, touch the [  ] button on the operation bar.

To stop auto store, repeat the operation above or press other buttons having radio functions.

### Note:

After auto store, the previous stored stations will be overwritten.

## DVD/CD mode

### Inserting a DVD/CD

#### Risk of severe damage to the DVD/CD drive!

Noncircular contoured DVDs/CDs and DVDs/CDs with a diameter of 8 cm (mini DVDs/CDs) must not be used.

We accept no responsibility for any damage to the drive that may occur as a result of the use of unsuitable DVDs/CDs.

➤ Insert the DVD/CD with its printed side up into the DVD/CD tray (Ⓢ in the section "Controls") until you feel a slight resistance.

The DVD/CD is automatically drawn in and playback starts.

#### Note:

You must not hinder or assist the drive as it automatically draws in the DVD/CD.

### Ejecting a DVD/CD

➤ Long press of the button (Ⓢ in the section "Con-trols") to eject an inserted DVD/CD.

#### Note:

You must not hinder or assist the drive as it ejects the DVD/CD.

## USB data carrier

### This device features four USB ports:

- \* USB1 port under the cover at the front of the device
- \* USB2 and USB3 port at the rear of the device

### Connecting a USB data carrier to the front of the device

➤ Open the cover underneath the rotary/pushbutton.

➤ Insert the USB data carrier in the USB socket (Ⓢ in the section "Controls").

The device automatically switches to USB mode. The data are read, the playback starts with the first media file recognized by the device.

### Removing a USB data carrier

- Turn off the car sound system.
- Disconnect the USB data carrier.

## MicroSDHC cards

This device features a microSDHC card reader under the cover at the front of the device (Ⓢ in the section "Controls").

### Inserting a microSDHC card

- Open the cover underneath the rotary/pushbutton.
- Insert the microSDHC card with its labelled side to the right (contacts to the left) and its contacts first into the card reader until it clicks into place.

The device automatically switches to microSDHC mode. The data are read, the playback starts with the first media file recognized by the device.

### Removing a microSDHC card

 
- If necessary, open the cover .
- Push on the microSDHC card until it disengages.
- Pull the microSDHC card out of the card reader.

## DVD movie playback



The car sound system can play video DVDs and VCDs. After inserting the DVD, the playback starts automatically. The DVD menu is displayed.

You can navigate in the DVD menu by touching the corresponding buttons in the DVD menu on the touchscreen. After starting the movie via the menu of the DVD, the movie is displayed. The playback menu for DVDs is hidden.



- Briefly touch the touchscreen once to display the playback menu again
- The playback menu is shown.



  1. Return to home menu
2. Show additional operating options
3. Progress bar
4. Previous chapter
5. Play/Pause
6. Next chapter
7. Show DVD menu

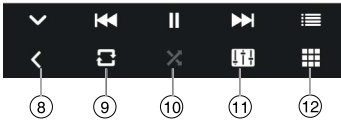

  8. Hide additional operating options
9. Repeat play
10. Sequential play
11. Touch to access Equalizer settings menu
12. To enter search menu

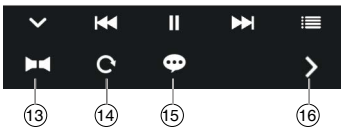

13. Select audio channel
14. Select viewing angle
15. Select subtitle language
16. Hide additional operating options

### Audio playback from DVD/CD, USB or microSDHC

The principles of audio playback (MP3/WMA) from data carriers are identical for all sources.

 
➤ Select the desired source via the main menu. The device changes to the desired source and the playback starts.

If the playback does not start with the audio playback,

➤ Press the [ ≡ ] button to change to the folder/file list.


➤ Press the [ 📁 ] button to display all the folders and files of the data carrier.  
- Or -

➤ Press the [ 🎵 ] button to display all the audio files of the data carrier.

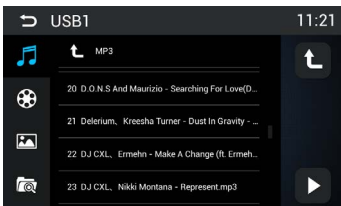


[ ⬆ ] Change to next higher folder level.  
[ ▶ ] start titles.

 After starting a title, the playback menu is displayed.

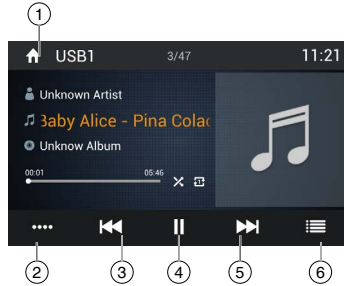

1. Return to home menu
2. Show additional operating options
3. Title selection
4. Interrupt playback and continue playback
5. Title selection
6. Display the folder/file list

 ➤ Tap on [ ⋮ ] to display additional operating options of the playback menu.

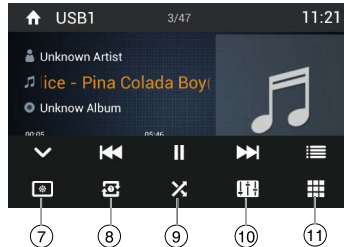





7. Choose wallpaper
8. Start and end REPEAT function. The REPEAT mode changes each time the [ 🔄 ] button is pressed.
  - [ 🔄 ] Repeat single: Play the current single repeatedly.
  - [ 📁 ] Repeat folder: Play the current folder repeatedly.
  - [ 🛑 ] Repeat off: Cancel repeat play.
9. Random play
10. Touch to access Equalizer settings menu
11. Display keypad to directly enter the number of the desired title.

### Video playback from DVD/CD, USB or microSDHC

 ➤ Select the desired source via the main menu. The device changes to the desired source and the playback starts.

If the playback does not start with the video playback,

 - Press the [  ] button to change to the folder/file list.
- Press the [  ] button to display all the folders and files of the data carrier.  
- Or -
- Press the [  ] button to display all the video files of the data carrier.

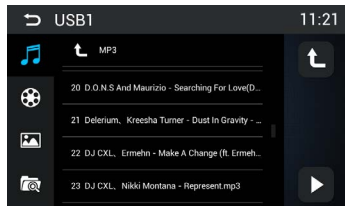

### Note:

Folders and videos are selected and started as described under audio playback.

If you selected a movie, the playback is started. During the movie playback, the playback menu is hidden.

- Briefly touch the touchscreen once to display the playback menu again.  
The playback menu is shown.






1. Return to home menu
2. Show additional operating options
3. Select previous movie.
4. Interrupt playback and continue playback
5. Select next movie.
6. Call up keypad for direct selection of movie or playing time.
7. Display equalizer

 
## Image playback from DVD/CD, USB or audioSDHC

- Select the desired source via the main menu.  
The device changes to the desired source and the playback starts.

If the playback does not start with the image playback,

- Press the [  ] button to change to the folder/file list.

- Press the [  ] button to display all the folders and files of the data carrier.  
- Or -
- Press the [  ] button to display all the images of the data carrier.

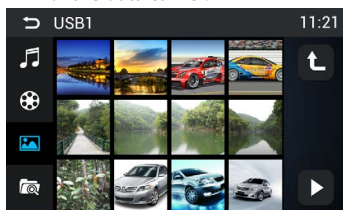

### Note:

Folders and images are selected and started as described under audio playback.

## Bluetooth mode

 
The Bluetooth allows you to utilize your car's built-in audio system for handsfree wireless mobile phone or music communication. Some Bluetooth mobile phones have the audio features, and some portable audio players support Bluetooth feature. This system can play audio data stored in a Bluetooth audio device. The car stereo with Bluetooth will be able to retrieve phonebook contacts, received calls, dialed calls, missed calls, incoming calls, outgoing call and listen to music.

### Note:

- This system will not operate or may operate improperly with some Bluetooth audio players.
- The unit cannot guarantee the compatibility of all mobile phones together with the unit.
- Audio playback will be set to the same volume level as set during telephone call. This can cause problems, if extreme volume level is set during the telephone call.

## Starting Bluetooth mode

- Touch [BT Phone] on the main menu to enter Bluetooth Phone mode.

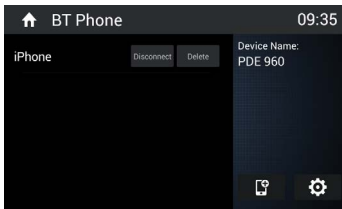

[☰] Add new Bluetooth® device.

[⚙️] Display options menu.

- Press the [Connect] button of the Bluetooth® device with which you want to establish a connection.

When the device is in range, the connection is established and the menu for the device is displayed.

- Press the [Delete] button if you want to delete the Bluetooth® device from the list.

## Registering Bluetooth devices

If you want to register a device with the car sound system for the first time, proceed as follows:

- Ensure that Bluetooth® is activated at the car sound system and at your Bluetooth® device.
- In the options menu of the Bluetooth® mode, enter a pairing code (see Bluetooth® settings).
- Search for new devices/connections on your Bluetooth® device.
- The car sound system appears as "PDE 960" in

 
the list of Bluetooth® devices.

- Establish the connection; you may have to enter the pairing code that was previously entered on the car sound system.

The connection is being established and the menu for the registered device is displayed.


## Telephone mode - Bluetooth

If you connected a phone with the car sound system via Bluetooth®, the following menu appears.

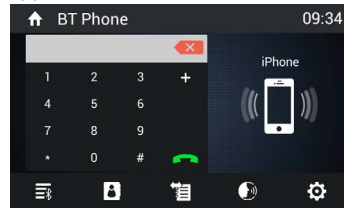

## Making a Call

 - **Dial Number**
- Input numbers by digit-keys on the screen.
- Touch [✖️] to clear the digits.
- Touch [📞] button to dial out.

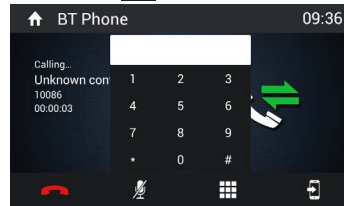

[📞] Hang up the call

 
[🔇] Mute the microphone

[☰] Show the key pad

[📞] Transfer the call to your mobile phone.

- **Voice dial**

- Touch [🗣️] button to Voice dial.

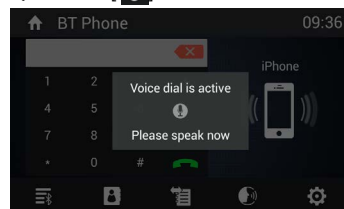

- **Answering a call**

You can answer an incoming call by pressing the [📞] button.

Touch [📞] button to reject an incoming call.



### Call History

Access Call History by touching [Call Log] button.

 


Then select a number from Dialed/Missed/Received calls.

### Audio playback - Bluetooth

If an audio streaming device is connected with the car sound system via Bluetooth®, you can play back the music via the car sound system and control the playback.

Touch [Streaming] on the main menu.

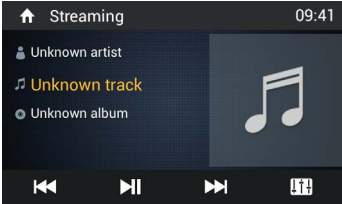


- [Previous] Previous track
- [Play/Pause] Interrupt playback and continue playback
- [Next] Next track
- [Equalizer] Display equalizer.

### Bluetooth Settings

 In the options menu for Bluetooth®, you can make the basic settings for the Bluetooth® mode.

In Bluetooth menu, touch [Settings].

The option menu is displayed.

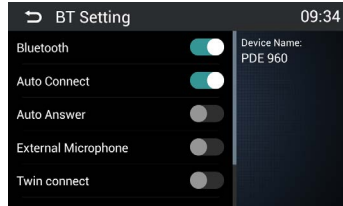

Touch on the selected option to change the setting.

- **Bluetooth** - Bluetooth® can be switched on or off.
- **Auto connect** - If "Auto Connect" is activated, the device automatically connects with known Bluetooth® devices as soon as they are in range.
- **Auto answer** - If "Auto Answer" is activated, incoming phone calls are automatically answered.
- **External Microphone** - External Microphone can be switched on or off.
- **Twin connect** -
- **Pair Password** - To set pairing code.
- **Phone Book sync** - To synchronize phone book, touch [Download] on the sub-menu popped out.

Phonebook sync may take several minutes to load on initial setup.

Press [Back] to exit the options menu.


## Overview of PhoneLink

 The system of the car device is Android version, which supports the connection between the car device and Smart phone.

And you can also control your phone by the car device, such as receiving calls, dialing calls, listening to the music and watching movies or pictures from your phone, as well using navigation from the Smart phone to the screen of the car device.

### Note:

You can't control your iPhone by the unit. (iPhone mirrors display on screen)

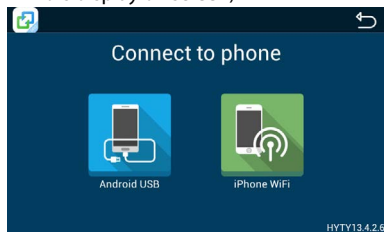

## Connect with Android phone

➤ Select "Easyconnected Fun Full" in the APPS menu and select "Android USB" on the screen.

➤ Start Android phone [USB debugging].

The operations of Android phone's entering [Setting] are as follows (since the Android phone versions are not the same, it roughly has two conditions):

- 1) Existence of [Developer options]: Click [Additional settings]-Click [Developer options]-click to open [Start developer options]-click to open [USB debugging]-determine to allow.
- 2) Inexistence of [Developer options]: Click system version number (interior version number) for 8 times, then back to setting and click [Developer options]-click to open "Start developer options"-click to open [USB debugging]-determine to allow.

➤ Bluetooth connection.

Scan for Bluetooth devices and select this system for connection.

➤ Correctly connect USB wire.

➤ Auto install APP.

For the first connection with SmartLink, if the Android phone is not installed with interconnection APP, the Smartlink will ask for installing the App to the Android phone.

➤ Finish connection.

(If it is not connected successfully, please replace USB cable or vehicle USB interface, or re-insert USB wire or restart Android phone and retry).

➤ After connection, operate according to the screen software.

### Tip:

- For your driving safety, please do not use the function during driving.
- For normal use, **Android 4.0 version** is recommended. Since Android 2.3X and below version system lacks relevant support, when using the version system to connect the product, some functions (such as: mobile video play, etc.) may not display normally.
- According to the different mobile phone "Media library" and "Video" program support formats, it is not all the video files copied to mobile phone can be identified and played. According to the different equipment function, not all video files of all formats can be played in vehicle terminal smoothly.
- Since the mobile phone data cable performance difference in the market, it is strongly recommended using the **original USB data** line to connect so as to guarantee the connection stability.
- Due to the difference of mobile phone performance, when using different mobile phones to connect, the performance may be different.

## Connect with iPhone

➤ Select "Easyconnected Fun Full" in the APPS menu and select "iPhone WiFi" on the screen.

➤ Turn on the WiFi and Personal Hotspot on the settings menu of your iPhone.

➤ Select the hotspot name of your iPhone on the list of the screen and enter the password.

➤ Open the control center of your iPhone and touch [AirPlay].

➤ Select [**EC-Mirror**], and turn on the "**Mirroring**" function.

➤ After connecting successfully, the desktop of your iPhone will display on the screen of the unit.

(If it is not connected successfully, please restart the WiFi of your iPhone, and refresh the hotspot list on the unit.

## iPod/iPhone Operations

### This unit supports only the following iPod/iPhone models:

- iPhone 6s Plus
- iPhone 6s
- iPhone 6 Plus
- iPhone 6
- iPhone 5s
- iPhone 5c
- iPhone 5
- iPod touch (6th generation)



“Made for iPod,” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

iPhone and iPod are trademarks of Apple Inc., registered in the U.S. and other countries.

### Accessing iPod mode

Connect an iPod or iPhone to the USB connector via an iPod cable.

Touch [iPod] on the IN CAR menu to enter iPod menu.

### Pausing play

1. Touch the [⏸] button on the bottom of the screen to pause play.  
“PAUSE” appears in the display, and [⏸] button becomes [▶].
2. Touch [▶] button to resume play.

### Selecting a track

#### Track-up

Touch the [⏮] button to move to the beginning of the next track.

#### Track-down

1. Touch the [⏮] button to move back to the beginning of the current track.
2. Touch the [⏮] button twice to move back to the beginning of the previous track.

### Repeat play

This function allows you to play the track repeatedly.

Touch the [ Repeat ] button to select Repeat one or Repeat all.

### Random play

This function allows you to play all tracks recorded in a random order.

Touch the [ Sequential ] button to perform random play.

### Search function

1. Touch the [ GoTo ] button to enter search menu.
2. Input number by touching buttons on the screen, then touch [ OK ] to begin searching.  
Touch [ ✕ ] button to delete inputted number.

 


## Sound settings

You can adjust the equalizer for all sources.


- On the control bar of the current audio source, press the [EQ] button.

The equalizer menu is displayed.

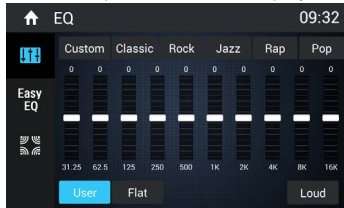

[Loud]: When listening to music at low volumes, this feature will selectively boost certain bass and treble frequencies.

 - Touch [Speaker] to enter Fader/Balance/Subwoofer setting menu.
- Adjust fader and balance with [▲]/[▼] or [◀]/[▶].

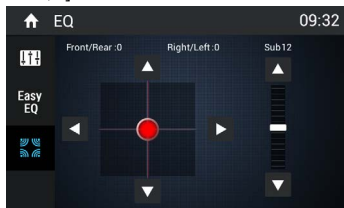

### Sub Woofer

Sub woofer Level: Touch [▲] or [▼] to adjust subwoofer Level.

## Navigation Operations

To navigate by the unit, simply select the desired navigation application on the main menu. Then navigate by the touch screen.

## AUX Operations

Select [A/V In 1]/[A/V In 2] on the main menu to visit auxiliary device.

## Steering Wheel Control

Select [SWC] on the main menu to enter SWC setting menu.

- Touch number button to select a SWC button.



 
- Select a function.
- Press each individual steering wheel control button for each corresponding function.
- Touch [Study] to program.
- Once the final steering wheel control button is programmed, the functions are saved and the programming will end.
- Touch [Reset] to reset the programming.

### Basic Settings

In the settings menu, you can adjust the basic settings for the different functions of the device to your requirements.

➤ In the main menu, press the [ **Settings** ] button.

The settings menu is displayed, the **General** sub-menu is activated.

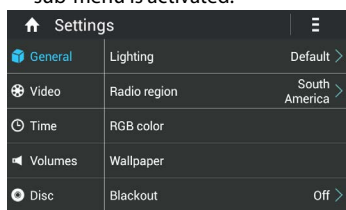

Settings		☰
General	Lighting	Default >
Video	Radio region	South America >
Time	RGB color	
Volumes	Wallpaper	
Disc	Blackout	Off >

### General

The following setting are possible:

Lighting - You can select the key color.

Radio region - Select the reception region for the radio reception.

RGB color

Wallpaper - You can select the wall paper

Blackout - Choose screen blackout off, 15s or 30s.

Beep - Switch confirmation beep on/off.

Quick gesture operations definition.

### Video

If "Parking" is activated, video/pictures will not be displayed during driving. Please set according to local laws.

### Time

To setup Date & time.

### Volumes

You can adjust the volume ratio for all audio sources in the volume menu.

### Disc

Audio - Select DVD audio language. Options available depending on DVD disc.

Subtitle - Select DVD subtitle language. Options available depending on DVD disc.

Disk Menu - Select DVD menu language. Options available depending on DVD disc.

AgeControl - KID SAF/G/PG/PG13/PGR/R/NC17/ADULT

Parental - Set password to restrict the play of discs.

### Networks

To setup the wireless configuration, such as Wi-Fi.

### Personal

To setup Location access, Security, Language & input, Factory data reset, All data erase, Accounts, etc.

### Device

To setup Brightness, Storage, Apps.

### System settings

 
#### Accessibility

To setup accessibility related applications.

You need download a screen reader and establish an account.

### Software version

To view software version information.

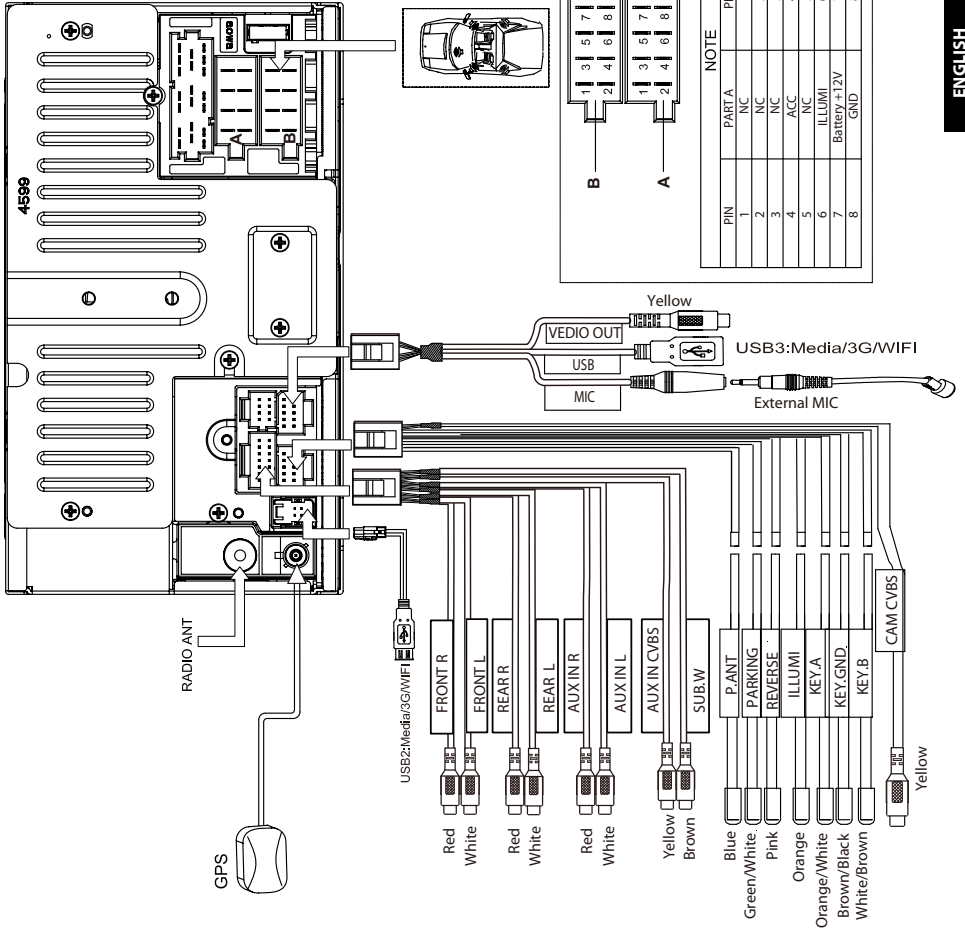

### FCC Statement

1. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 centimeters between the radiator and your body.

**Blaupunkt Technology Americas S.A.**  
**Zona America Ruta 8 km**  
**Costa Park, Montevideo, Uruguay**