 


SILVERCREST®



BLUETOOTH® HEADPHONES / XXX SBKP 1 A1

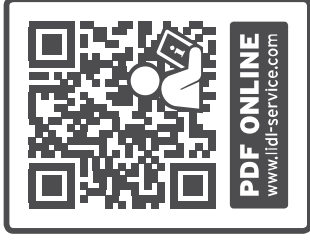

BLUETOOTH® HEADPHONES

Operation and safety notes

Distributed by / Distribuido por:

Lidl US LLC., Arlington, VA 22202

Model No. / Modelo Núm.:

HG04 125A-US / HG04 125B-US

Version / Versión: **06 / 2018**

FCC-ID: 2A190-HG4125

Made in / Hecho en: China

Last Information Update: **05 / 2018**

Ident.-No.: **HG04125A-US / B-US 052018-9**



US

Description of signal words	Page 4
Customer service	Page 4
Introduction	Page 4
Intended use	Page 5
Trademark notices	Page 5
Scope of delivery	Page 6
Parts description	Page 6
Technical data	Page 8
Important safety notes	Page 8
Safety instructions for batteries/rechargeable batteries	Page 11
Before use	Page 12
Charging the battery	Page 12
Using the headphones	Page 13
Connecting the headphones to a second Bluetooth® device	Page 14
Clearing paired devices	Page 14
Connecting the headphones through audio cable	Page 14
Putting on the headphones	Page 15
Headphones button functions for music playback	Page 15
Headphones button functions as a hands-free device	Page 16
Cleaning	Page 17
Storage when not in use	Page 17
Troubleshooting	Page 18
Disposal	Page 19
Three year limited warranty	Page 19

⚠ WARNING

⚠ CAUTION

CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE



Call customer service at **1 (844) 543-5872**



Visit the Website Customer Service Platform at
www.lidl.com/contact-us

Visit a LIDL store for further assistance.

IAN 306656 Please have your IAN number ready.

Bluetooth® Headphones SBKP 1 A1

● Introduction



Congratulations on your purchase. You have selected a quality product. The instructions for use are a part of the product. They contain important information about the safety, use and disposal of the product. Before using the product, please learn about all the safety information and usage instructions. Only use the product as described and for the specified applications. If you lend the product to someone else, please also give all the instructions.

● Intended use

This Bluetooth® Headphones (hereinafter referred to as “product”) a consumer electronic, is intended to render audio transmitted from a smartphone, computer, or similar playback devices via Bluetooth connection. The product is also suitable as a hands-free device for mobiles; the mobile or the computer must support Bluetooth® 4.0 standard to do so.

The buttons built into the product allows you to select the piece of music from the playlist selected on the playback device. They are further used to adjust the volume of the product.

The headphones may be paired with two different devices (e.g. mobile and computer) at the same time to e.g. use both the telephone features of the mobile and the audio features of the computer. The built-in rechargeable battery allows for cordless operation.

This product was designed for personal use.

It must not be used for commercial purposes. Any other use is considered improper. Any claims resulting from improper use or due to unauthorised modification of the product will be considered unwarranted. Any such use is at your own risk.

● Trademark notices

- USB® is a registered trademark of USB Implementers Forum, Inc.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by OWIM GmbH & Co. KG is under license.
- The SilverCrest trademark and trade name is the property of their respective owners.

Any other names and products may be trademarks or registered trademarks of their respective owners.







● Scope of delivery

NOTE: Take the product and the instruction for use out of the box and remove all packing materials.

 
1 Bluetooth® Headphones
1 Charging cable

1 Audio cable 0.14 inch (3.5 mm)
1 Instructions for use

● Parts description

 Control panel
 Microphone
 Volume up/down
 Power
 Micro-USB charging socket
 Speakers with ear pads

 Band
 0.14 inch (3.5 mm) socket
 Microphone
 Micro-USB plug
 USB plug
 0.14 inch (3.5 mm) audio cable
 Set of instructions for use

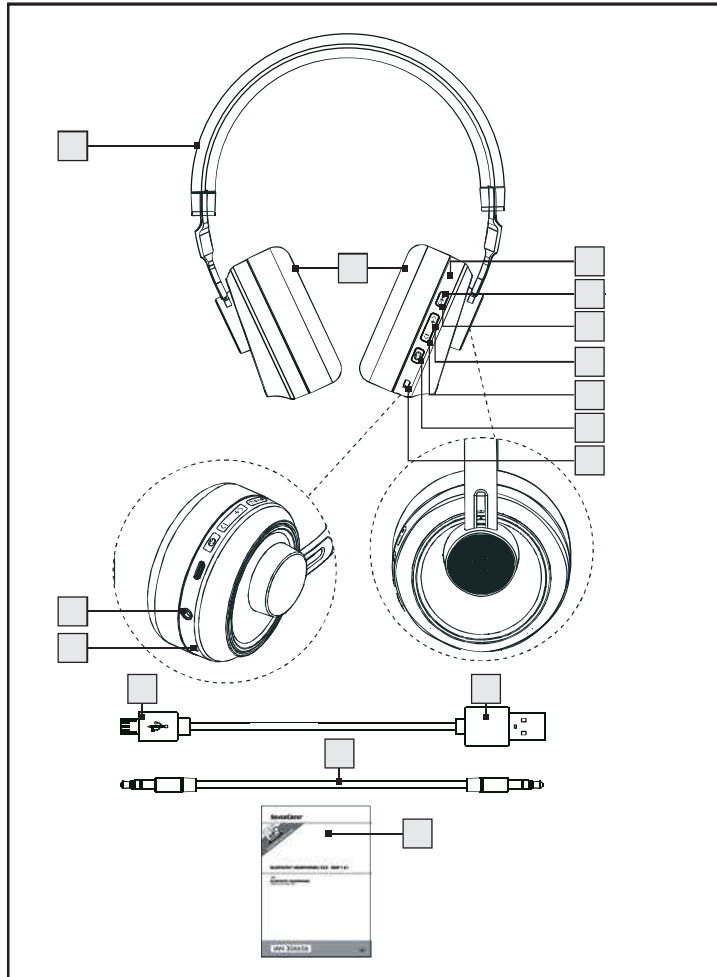

Technical data

Operating voltage:	Direct current via USB charging socket
Built-in rechargeable battery:	3,7V rechargeable lithium-ion battery, 430 mAh
Charging time:	2.5 hours
Operating time (music & phone):	16 hours (at medium volume)
Wireless standard:	Bluetooth® 4.0
Supported profile:	A2DP, AVRCP, HSP, HFP
Range:	32.8 ft (10 m)
Dimensions:	7.16 in x 6.22 in x 2.95 in (182 mm x 158 mm x 75 mm) (w x h x d)
Weight:	0.47 lb (215 g)
Operating temperature:	+41°F - +95°F (5 °C - 35 °C)
Humidity (no condensation):	10% - 70%
Storage temperature:	+32°F - +104°F (0 °C - 40 °C)
Frequency band:	2402 MHz - 2480 MHz



IMPORTANT SAFETY NOTES

READ ALL INSTRUCTIONS. KEEP FOR FUTURE REFERENCE. INCLUDE ALL DOCUMENTATION WHEN PASSING THIS PRODUCT ON TO OTHERS.

⚠ WARNING



■ **RISK OF FATAL INJURY OR ACCIDENT FOR INFANTS AND CHILDREN!**

- **Suffocation hazard!** Never leave children unsupervised with the packaging material. The packaging material poses a suffocation hazard. Children frequently underestimate the dangers. The packaging material is not a toy.
- This product may be used by children 8 years and older and individuals with physical, sensory or mental impairments or lacking experience and / or knowledge when instructed on safe product use and they understand the associated risks. Do not allow children to play with the product. Never allow children to clean or maintain the product unsupervised. The product is not a toy.



- Remember that excessive sound pressure or volumes from headphones or earphones can cause hearing damage. Always adjust the volume to a pleasant level which is not too high. If you have adjusted the volume of the headphones too high and use them at this level for an extended period, the user's hearing can be damaged.
- Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.
Note: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this product causes harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try and correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the product and receiver.
 - Connect the product into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.
- This product complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.

- **Wireless interface**

Turn the device off on airplanes, in hospitals, service rooms or near medical electronic systems. The wireless signals transmitted could impact the functionality of sensitive electronics. Keep the device at least 7.874 in (20 cm) from pacemakers or implantable cardioverter defibrillators, as the electromagnetic radiation may impair the functionality of pacemakers. The radio waves transmitted could cause interference in hearing aids. Do not place the device near flammable gasses or potentially explosives areas (e.g. paint shops) with the wireless components on, as the radio waves emitted can cause explosions and fire. The range of the radio waves varies by environmental conditions. In the event of wireless data transmission, unauthorized third parties receiving the data cannot be excluded. Lidl US LLC is not responsible for interference with radios or televisions due to unauthorized modification of the device. Lidl US LLC further assumes no liability for using or replacing cables and devices not distributed by Lidl US LLC. The user of the device is fully responsible for correcting interference caused by such unauthorized modification of the device, as well as replacement of such devices. The RF Exposure Compliance distance is 5 mm.

NOTICE


- This product has no parts which can be serviced by the user. The rechargeable battery is not replaceable.
- Keep the product away from moisture, dripping and splash water!
- Do not place burning candles or other open fire on or next to the product.
- Check the product before every use! Discontinue use if any damage to the product or the charging cable is detected!
- If you notice smoke or unusual noise or odor, switch the product off immediately and remove the USB cable.

- Sudden temperature changes may cause condensation inside the product. In this case, allow the product to acclimate for some time before using it again to prevent short circuits!
- Do not operate the product near heat sources, e.g. radiators or other devices emitting heat!
- Do not throw the product into fire and do not expose to high temperatures.
- Do not try to open the product! It has no internal parts requiring maintenance.
- Do not cover the product during use or charging.
- Only charge the battery in dry areas, since the product is not splash-proof.



Safety instructions for batteries / rechargeable batteries

⚠ WARNING

- **DANGER TO LIFE!** Keep batteries / rechargeable batteries out of reach of children. If accidentally swallowed seek immediate medical attention.
-  **DANGER OF EXPLOSION!** Never recharge disposable batteries. Do not short-circuit batteries/rechargeable batteries and /or open them. Overheating, fire or bursting can be the result.
- Never throw batteries / rechargeable batteries into fire or water.
- Do not exert mechanical loads to batteries / rechargeable batteries.

Risk of battery leakage

⚠ CAUTION

Failure to observe the following warnings can result in injuries or property damage.

- Avoid extreme environmental conditions and temperatures which could affect batteries / rechargeable batteries, e.g. radiators / direct sunlight.

- Avoid contact with the skin, eyes and mucous membranes. In the event of contact with battery acid, thoroughly flush the affected area with plenty of clean water and seek immediate medical attention.







- This product contains an integrated battery which cannot be replaced by the user. The battery may only be removed or replaced by the manufacturer or his customer service or by a similarly qualified person in order to avoid hazards.

SAVE THESE INSTRUCTIONS





● Before use

- Before use, verify the package contents are complete and undamaged!

● Charging the battery




- The battery must be charged prior to first use.
- The LED  will flash red and headphones sound acoustic signal when the battery is drained. The battery should then be charged as soon as possible.
- Plug the micro-USB plug  on the charging cable into the micro-USB charging socket  on the headphones! Plug the USB plug  on the charging cable into the USB port on a PC or a USB adapter (not included).
Note: The LED will remain red whilst charging. Once the battery is fully charged, the LED will remain blue.
- Once charging has completed, remove the micro-USB plug from the headphones.

● Using the headphones








- Connect the headphones with a communication device.
- Place the headphones near a switched on communication device (e.g. mobile or computer).
- Pairing with a new Bluetooth® device: Hold the  or 6 seconds until the LED  flashes red and blue and acoustic signal sounds. This indicates the headphones are now in pairing mode, which remains active for 5 minutes. The headphones will switch off if they do not detect a Bluetooth® device to connect to and sound 4 beeps.
- Now connect your communication device (mobile phone or computer) via Bluetooth® with the headphones. Please refer to the notes in the instructions for your communication device. Select the entry "SBKP 1 A1" from the list of devices detected by your computer or mobile.
- Once the connection has been established, the LED will briefly flash blue twice every 3 seconds.
- Please note, your communication device must support Bluetooth® Standard 4.0 to use all options.
- If you come into range of the paired device with the headphones switched on, a Bluetooth® connection will automatically be established.
- You may need to approve the connection on the communication device. Please refer to the instructions for use of the communication device on this topic!
- If you leave the range of your communication device with your headphones, the LED will flash blue once every 2 seconds. If the connection is not restored within 5 minutes, the headphones will switch off.
- The headphones may be manually switched off by holding the   for 3 seconds until acoustic signal sounds and the LED goes out.

● Connecting the headphones to a second Bluetooth® device



The headphones may be connected to two Bluetooth® communication devices at the same time. If the headphones are already connected to a device, follow the steps below to connect to the second device:

- Press and hold  for 3 seconds. Acoustic signal sounds. The first communication device (mobile phone or computer) is disconnected.
- Now connect to the second communication device via Bluetooth® with the headphones. Please refer to the notes in the instructions for your communication device. Select the entry "SBKP 1 A1" from the list of devices detected by your computer or mobile. the second communication device is connected.
- Briefly press   and acoustic signal sounds. the first communication device is connected again. Now, both communication devices are connected to the headphones simultaneously.

● Clearing paired devices

- In paired mode (the LED will briefly flash blue twice every 3 seconds), press and hold   for 3 seconds and acoustic signal sounds.
- The headphones is now in pairing mode. The LED  flashes red and blue.
- Simultaneously pressing and holding   and   for approx. 2 seconds and two beeps sound.
- The memory in the headphones is cleared and it will not auto-connected to the previous paired communication device.




● Connecting the headphones through audio cable

- Insert the 0.14 inch (3.5 mm) plug at one end of audio cable  to 0.14 inch (3.5 mm) socket .
- Insert the 0.14 inch (3.5 mm) plug at other end of audio cable  to 0.14 inch (3.5 mm) socket of your playback device.



The headphone will be auto power off if it has been power on before and the LED  light off.



- Start a playlist on your playback device. You can only adjust the music volume on the playback device.



Putting on the headphones

The headphones can be adjusted to your head size, if necessary: the speakers  are secured to the band  with a metal rail for this purpose. Adjust these to ensure optimal comfort. Please follow the marking "L" (= left) and "R" (= right). Put on the headphones so the control panel  is on the right.

● Headphones button functions for music playback











- Start a playlist on your playback device and set the volume to minimum first. After putting the headphones on select a pleasant volume. You can adjust the headphones volume with the control panel . Music is played back through the speakers .
- The control panel has 4 buttons. These control the following functions:





Button	Function
	<ul style="list-style-type: none">- Press and hold to switch the device on/off.- Press once to play / stop music playback.
	<ul style="list-style-type: none">- Press once to increase the volume by one level. One signal tones will sound when the maximum volume has been reached.- Press and hold 2 seconds to skip to the next track.

Button	Function
	<ul style="list-style-type: none"> - Press once to reduce the volume by one level. - One signal tone will sound when the minimum volume has been reached. - During playback, press and hold 2 seconds to jump to the <u>previous track</u>.
	<ul style="list-style-type: none"> - In paired mode (LED flash blue twice every 3 seconds), press and hold for 3 seconds and acoustic signal sounds to change to pairing mode to allow another communication device for connection. - In pairing mode (LED flash red and blue), briefly press and long acoustic signal sounds to connect to the previous paired communication device again.

● Headphones button functions as a hands-free device

You may also use the headphones for telephone calls when used with a communication device which supports this function. If your communication device supports the Bluetooth® standard 4.0, you will be able to use the following functions:

Answer/end call	Briefly press the  
Ignore call	Hold the   2 seconds until two beep sounds
Redial	Briefly press the   twice
Increase volume	Briefly Press   (one signal tone will sound when the maximum volume has been reached)
Reduce volume	Briefly Press   (one signal tone will sound when the minimum volume has been reached)

Send the call from the headphones to the mobile	Press and hold the  <input type="checkbox"/>
Send the call from the mobile to the headphones	Press and hold the  <input type="checkbox"/>
End the current call and answer call waiting*	Briefly press the  <input type="checkbox"/>
Switch between two calls (toggle)*	Briefly press  <input type="checkbox"/> twice until it beeps

* These functions must be supported by your mobile service provider.

- When there is incoming call, the LED will briefly flash blue four time per second.
- The ringer and the caller's voice are rendered through the speakers
- Music playback is automatically paused when a call is received.
- The microphone records your voice.
- Music continues after the call has been ended.

● **Cleaning**

NOTICE

- Switch the product off and remove all plugs before cleaning!
- Be sure moisture does not enter the product during cleaning to prevent damage to the product and related repairs.
- Only clean the product with a slightly dampened cloth and a mild spray!

● **Storage when not in use**

- Store the product in a dry environment, protected from dust and direct sunlight.
- To prevent battery deterioration, at longer storage the rechargeable battery has to be charged regularly.

● **Troubleshooting**

● = **Fault**

⊙ = Possible cause



● **No functions**

⊙ Battery drained.



● **No Bluetooth connection**

⊙ Error operating the headphones.



⊙ Communication device error.



⊙ Bluetooth® connection error.



● **No sound**

⊙ The headphones volume is set to Minimum.



⊕ to increase the volume.

⊙ Error operating the communication device.



⊙ Bluetooth® connection error.



● **Unable to use all functions**

⊙ Communication device error.



● **Disposal**

Dispose of the packaging through your local recycling facilities and in compliance with all federal, state and local regulations.



Please note the package markings regarding waste separation, indicated by abbreviations (a) and numbers (b), meaning: 1-7: plastics / 20-22: paper and cardboard / 80-98: composite materials.



Contact your local waste management authority for additional information on how to dispose of the used product.

To help protect the environment, please dispose of the product properly when it has reached the end of its useful life, do not throw in the garbage. Information on collection sites and their opening hours is available from your local authority.

● **Three year limited warranty**

What does this warranty cover?

The warranty covers:

- Damage, breakage or inoperability due to defect.
- Damage not caused by normal wear and tear or failure to follow the safety and maintenance instructions provided in the user manual.

What is not covered by the warranty?

The warranty does not cover damage caused by:

- Normal wear and tear of the product, including fragile parts (such as switches, glass, etc.);
- Improper use or transport;
- Disregarding safety and maintenance instructions;
- Accidents or acts of nature (e.g. lightning, fire, water, etc.);
- Tampering with the product (such as removing cover, unscrewing screws etc.).

Consequential and incidental damages are also not covered under this warranty. However, some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

What is the period of coverage and warranty resolution?

The warranty is for 3 years from the date of purchase. At our discretion, product will either be refunded or replaced.

What will we not do?

We will not:

- Start a new warranty period upon product exchange;
- Repair product.

How to process the warranty?

To initiate, please:

- Call customer service at 1 (844) 543-5072
- Visit the Website Customer Service Platform at www.lidl.com/contact-us or
- Visit a LIDL store for further assistance

To ensure the quickest warranty return process, please have the following available:

 
- The original sales receipt that includes the date purchased;
- The product and manual in the original package;
- A statement of the problem.

What must you do to keep the warranty in effect?

- Retain the original receipt;
- Follow all product instructions;
- Do not repair or modify the product.

How does state law relate to this warranty?

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. All implied warranties are limited by the duration and terms of this warranty. Some states do not allow limitations on



how long an implied warranty lasts, so the above limitation may not apply to you.