

<b>Description of signal words</b> .....	Page 5
<b>Customer service</b> .....	Page 5
<b>Warnings and symbols used</b> .....	Page 5
<b>Introduction</b> .....	Page 7
Intended use.....	Page 7
Trademark notices.....	Page 8
Scope of delivery.....	Page 8
Technical data.....	Page 9
Parts description.....	Page 10
<b>Important safety notes</b> .....	Page 12
Safety notes for batteries / rechargeable batteries.....	Page 15
<b>Before use</b> .....	Page 16
Charging the battery.....	Page 17
<b>Using the headphones</b> .....	Page 17
Connecting the headphones to a second Bluetooth® device.....	Page 18
Clearing paired devices.....	Page 19
Putting on the headphones.....	Page 19
Headphones button functions for music playback.....	Page 20
Headphones button functions as a headset.....	Page 21
Connecting the headphones through AUX cable.....	Page 22
<b>Cleaning</b> .....	Page 22

<b>Storage when not in use</b> .....	Page 23
<b>Troubleshooting</b> .....	Page 23
<b>Disposal</b> .....	Page 24
<b>Three year limited warranty</b> .....	Page 25

## DESCRIPTION OF SIGNAL WORDS



### **WARNING**

WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.



### **CAUTION**

CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

### **NOTICE**

NOTICE indicates information considered important, but not hazard related (e.g. messages related to property damage).

## CUSTOMER SERVICE



Call customer service at **1 (844) 543-5872**



Visit the Website Customer Service Platform at  
**[www.lidl.com/contact-us](http://www.lidl.com/contact-us)**

Visit a LIDL store for further assistance.

**IAN 330138\_1904**

Please have your IAN number ready.

### **Warnings and symbols used**











These instructions for use contain the following warnings:



**DANGER!** This symbol, in combination with the signal word "Danger", indicates a life-threatening situation which, if disregarded, could result in deadly injuries.

## Warnings and symbols used

These instructions for use contain the following warnings:

	<b>WARNING!</b> This symbol, in combination with the signal word "Warning", indicates a dangerous situation which, if disregarded, may cause serious injuries.
	<b>CAUTION!</b> This symbol, in combination with the signal word "Caution", indicates a hazard with a low level of risk, which, if disregarded, could result in minor or moderate injuries.
	<b>ATTENTION!</b> This symbol with the signal word "Attention" indicates possible damage to property.
	<b>NOTE:</b> This symbol with the signal word "Note" provides further useful information.
	<b>WARNING! EXPLOSION HAZARD!</b> A warning with this symbol and the words "WARNING! EXPLOSION HAZARD!" indicates a possible risk of explosion. Failure to follow such a warning can result in serious injuries or death and possible property damage. Follow the instructions in this warning to avoid danger to life, serious injury or property damage.
	This mandatory sign indicates to wear suitable protective gloves! Follow the instructions of this warning to avoid hand injuries caused by objects or contact with hot or chemical materials.
	Take care when using headphones. Listening at high volume for prolonged periods of time can damage your hearing. Before using the headphones, set the volume to the lowest level.
	Direct current
	CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS
	MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device .

# **Bluetooth® Headphones**

## ● **Introduction**



Congratulations on your purchase. You have selected a quality product. The instructions for use are a part of the product. They contain important information about the safety, use and disposal of the product. Before using the product, please learn about all the safety information and usage instructions. Only use the product as described and for the specified applications. If you lend the product to someone else, please also give all the instructions.

## ● **Intended use**

This Bluetooth® Headphones (hereinafter referred to as “product”) a consumer electronic, is intended to render audio transmitted from a smart-phone, computer, or similar playback devices via Bluetooth connection. The product is also suitable as a headset for mobiles; the mobile or the computer must support Bluetooth® 5.0 standard to do so.

The buttons built into the product allows you to select the piece of music from the playlist selected on the playback device. They are further used to adjust the volume of the product.

The headphones may be paired with two different devices (e.g. mobile and computer) at the same time to e.g. use both the telephone features of the mobile and the audio features of the computer. The built-in rechargeable battery allows for cordless operation.

This product was designed for personal use.

It must not be used for commercial purposes. Any other use is considered improper. Any claims resulting from improper use or due to unauthorised

modification of the product will be considered unwarranted. Any such use is at your own risk.



A warning with this sign indicates to prevent possible hearing damage, do not listen at high volume level for long period.

### **i NOTE**

- A note provides additional information to improve product use.

### **● Trademark notices**

- USB® is a registered trademark of USB Implementers Forum, Inc.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by LIDL US, LLC is under license.
- The SilverCrest trademark and trade name is the property of their respective owners.

Any other names and products may be trademarks or registered trademarks of their respective owners.

### **● Scope of delivery**

- i NOTE:** Remove all packaging material and check the contents of the packaging for completeness. Please contact the dealer if parts are missing or damaged.




 
1 Bluetooth® Headphones  
1 Charging cable  
1 Instructions for use

1 AUX cable (0.14 in / 3.5 mm  
jack plug)  
1 Quick start guide


## ● Technical data

Operating voltage:	5 V $\overline{=}$ (direct current) Direct current via USB charging socket
Built-in rechargeable battery:	3.7V rechargeable lithium polymer battery, 300 mAh, 1.11 Wh
Charging time:	2.5 hours
Operating time (music & phone):	15 hours (at medium volume)
Standby time:	380 hours
Wireless standard:	Bluetooth® 5.0
Supported profile:	A2DP, AVRCP, HSP, HFP
Range:	32.8 ft / 10 m
Dimensions:	6.1 in x 7 in x 2.7 in (155 mm x 180 mm x 70 mm) (w x h x d)
Weight:	4.9 oz / 140 g
Operating temperature:	41 °F - 95 °F / 5 °C - 35 °C
Humidity (no condensation):	10% - 70%
Storage temperature:	32 °F - 104 °F / 0 °C - 40 °C
Frequency band:	2402 MHz - 2480 MHz
Max. transmitted power:	< 20 mW
Wideband characteristic voltage (WBCV):	130 mV +/- 10%

## ● Parts description

- |   |  |    |                             |
|---|--|----|-----------------------------|
| 1 | Speakers with ear pads   | 9  | AUX IN                      |
| 2 |  Button | 10 | USB type A plug             |
| 3 | Micro-USB charging socket  | 11 | Micro-USB plug              |
| 4 |  Button | 12 | AUX cable                   |
| 5 |  Button | 13 | Quick start guide           |
| 6 |  Button | 14 | Set of instructions for use |
| 7 | LED  |    |                             |
| 8 | Microphone   |    |                             |



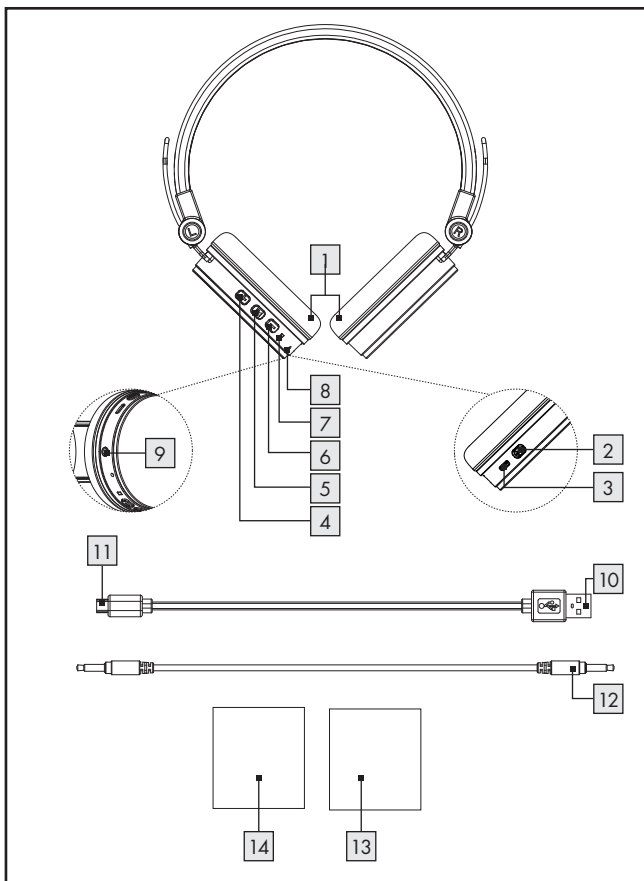




# IMPORTANT SAFETY NOTES

READ ALL INSTRUCTIONS. KEEP FOR FUTURE REFERENCE. INCLUDE ALL DOCUMENTATION WHEN PASSING THIS PRODUCT ON TO OTHERS.

## **⚠ WARNING**

**Failure to observe the following warnings can result in death or serious injuries.**

-  **DANGER TO LIFE AND RISK OF ACCIDENT FOR INFANTS AND CHILDREN!**
- **Suffocation hazard!** Never leave children unsupervised with the packaging material. The packaging material poses a suffocation hazard. Children frequently underestimate the dangers. The packaging material is not a toy.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
- Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

**Note:** This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

- However, there is no guarantee that interference will not occur in a particular installation. If this product causes harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try and correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the product and receiver.
  - Connect the product with an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- This product complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.

■ **Wireless interface**

Turn the device off on airplanes, in hospitals, service rooms or near medical electronic systems. The wireless signals transmitted could impact the functionality of sensitive electronics. Keep the device at least 7.874 in (20 cm) from pacemakers or implantable cardioverter

defibrillators, as the electromagnetic radiation may impair the functionality of pacemakers. The radio waves transmitted could cause interference in hearing aids. Do not place the device near flammable gasses or potentially explosives areas (e.g. paint shops) with the wireless components on, as the radio waves emitted can cause explosions and fire. The range of the radio waves varies by environmental conditions. In the event of wireless data transmission, unauthorized third parties receiving the data cannot be excluded. Lidl US LLC is not responsible for interference with radios or televisions due to unauthorized modification of the device. Lidl US LLC further assumes no liability for using or replacing cables and devices not distributed by Lidl US LLC. The user of the device is fully responsible for correcting interference caused by such unauthorized modification of the device, as well as replacement of such devices. The RF Exposure Compliance distance is 5 mm.

### **NOTICE**

- This product does not contain any parts which can be serviced by the user. The rechargeable battery cannot be replaced.

### **⚠ WARNING Failure to observe the following warnings may result in death or serious injuries.**

- Do not place burning candles or other open fire on or next to the product.
- If you notice smoke or unusual noise or odor, switch the product off immediately and remove the USB cable.
- Do not throw the product into fire or expose it to high temperatures.
- Do not cover the product during use or charging.
- Only charge the battery in dry environments, since the product is not splash-proof.

## NOTICE


- Check the product before every use! Discontinue use if any damage to the product or the charging cable is detected!
- Sudden temperature changes may cause condensation inside the product. In this case, allow the product to acclimate for some time before using it again to prevent short circuits!
- Do not operate the product near heat sources, e.g. radiators or other devices emitting heat!
- Do not try to open the product! It has no internal parts requiring maintenance.



## Safety notes for batteries / rechargeable batteries

### ⚠ WARNING

**Failure to observe the following warnings may result in fatal or serious injuries.**

- **DANGER TO LIFE!** Keep batteries / rechargeable batteries out of reach of children. If accidentally swallowed, seek immediate medical attention.
-  **DANGER OF EXPLOSION!** Never recharge disposable batteries. Do not short-circuit batteries / rechargeable batteries and / or open them. They may overheat, ignite or explode.
- Never throw batteries / rechargeable batteries into fire or water.
- Do not exert mechanical loads to batteries / rechargeable batteries.
- Batteries should not be disassembled, crushed, punctured, opened or otherwise mutilated.

## Risk of battery leakage

### **⚠ CAUTION**

Failure to observe the following warnings can result in injuries or property damage.

- Avoid extreme environmental conditions and temperatures which could affect batteries / rechargeable batteries, e.g. radiators / direct sunlight.
- Avoid contact with the skin, eyes and mucous membranes. In the event of contact with battery acid, thoroughly flush the affected area with plenty of clean water and seek immediate medical attention.
-  **WEAR SAFETY GLOVES!** Leaked or damaged batteries / rechargeable batteries can cause burns on contact with the skin. Always wear suitable safety gloves when handling leaking batteries.
- This product contains an integrated battery which cannot be replaced by the user. The battery may only be removed or replaced by the manufacturer or his customer service or by a similarly qualified person in order to avoid hazards.

# SAVE THESE INSTRUCTIONS

## ● Before use

- Before use, verify the package contents are complete and undamaged!

## ● Charging the battery

- The battery must be charged prior to first use.
- The LED **7** will flash white and headphones sound acoustic signal when the battery is drained. The battery should then be charged as soon as possible.
- Plug the micro-USB plug **11** on the charging cable into the micro-USB charging socket **3** on the headphones! Plug the USB type A plug **10** on the charging cable into the USB port on a PC or a USB adapter (not included).






**Note:** The LED **7** will remain white whilst charging. Once the battery is fully charged, the LED **7** will turn off.

- Once charging has completed, remove the micro-USB plug **11** from the headphones.

## ● Using the headphones


 
- Connect the headphones with a communication device.
- Place the headphones near a switched on communication device (e.g. mobile or computer).
- Pairing with a new Bluetooth® device: Hold the **▶|||** button **5** for 3 seconds to turn on the product until the LED **7** flashes blue and white and acoustic signal sounds. This indicates the headphones are now in pairing mode, which remains active for 5 minutes. The headphones will switch off if they do not detect a Bluetooth® device to connect to and acoustic signal sounds.
- Now connect your communication device (mobile phone or computer) via Bluetooth® with the headphones. Please refer to the notes in the instructions for your communication device. Select the

entry "SBKP 4 A1" from the list of devices detected by your computer or mobile.

- Once the connection has been established, the LED  will briefly flash blue twice every 5 seconds.
- Please note, your communication device must support Bluetooth® Standard 5.0 to use all options.
- If you come into range of the paired device with the headphones switched on, a Bluetooth® connection will automatically be established.
- You may need to approve the connection on the communication device. Please refer to the instructions for use of the communication device on this topic!
- If you leave the range of your communication device with your headphones, the LED  flashes blue and white. If the connection is not restored within 5 minutes, the headphones will switch off.
- The headphones may be manually switched off by holding the  button  for 3 seconds until acoustic signal sounds and the LED  goes out.



## ● Connecting the headphones to a second Bluetooth® device

The headphones may be connected to two Bluetooth® communication devices at the same time. If the headphones are already connected to a device, follow the steps below to connect to the second device:







- Activate multipoint mode by pressing and holding  button  for 3 seconds. Acoustic signal sounds. The first communication device (mobile phone or computer) is disconnected.
- Now connect to the second communication device via Bluetooth® with the headphones. Please refer to the notes in the instructions




for your communication device. Select the entry "SBKP 4 A1" from the list of devices detected by your computer or mobile. The second communication device is connected.

- Briefly press  button  and acoustic signal sounds. The first communication device is connected again. Now, both communication devices are connected to the headphones simultaneously.

### ● **Clearing paired devices**

- In paired mode (the LED  will briefly flash blue twice every 5 seconds), press and hold  button  for 3 seconds and acoustic signal sounds.
- The headphones is now in pairing mode. The LED  flashes blue and white.
- Press and hold  button  for 3 seconds and two beeps sound.
- The memory in the headphones is cleared. After clearing the paired memory, it will not automatically connect the device you used before, need to pair again manually.





### ● **Putting on the headphones**

The headphones can be adjusted to your head size, if necessary: the speakers  are secured to the band with a rail for this purpose. Adjust these to ensure optimal comfort.

Please note the marking "L" (= left) and "R" (= right) on the inside of the band immediately above the speakers. Put on the headphones so the control buttons are on the left.

## ● Headphones button functions for music playback

- Start a playlist on your playback device. First turn the volume of the playback device to minimum, then put on the headphones. You can adjust the headphones volume with the control buttons. Music is played back through the speakers **1**.
- There are 4 control buttons. These control the following functions:

Button	Function
	<ul style="list-style-type: none"><li>- Press and hold to switch the product on/off.</li><li>- Press once to play / stop music playback.</li></ul>
	<ul style="list-style-type: none"><li>- Press once to increase the volume by one level. One signal tones will sound when the maximum volume has been reached.</li><li>- Press and hold 2 seconds to skip to the next track.</li></ul>
	<ul style="list-style-type: none"><li>- Press once to reduce the volume by one level.</li><li>- One signal tone will sound when the minimum volume has been reached.</li><li>- Press and hold 2 seconds to jump to the previous track.</li></ul>
	<ul style="list-style-type: none"><li>- In paired mode (LED <b>7</b> flash blue twice every 5 seconds), press and hold for 3 seconds and acoustic signal sounds to change to pairing mode to allow another communication device for connection.</li><li>- In pairing mode (LED <b>7</b> flash blue and white), briefly press and acoustic signal sounds to connect to the previous paired communication device again.</li></ul>

## ● Headphones button functions as a headset

You may also use the headphones for telephone calls when used with a communication device which supports this function. If your communication device supports the Bluetooth® standard 5.0, you will be able to use the following functions:

Function	Action
Answer/end call	Briefly press the ▷ button <b>5</b>
Ignore call	Hold the ▷ button <b>5</b> 2 seconds until two beep sounds
Redial	Briefly press the ▷ button <b>5</b> twice
Increase volume	Briefly Press $\uparrow$ button <b>4</b> (one signal tone will sound when the maximum volume has been reached)
Reduce volume	Briefly Press $\downarrow$ button <b>6</b> (one signal tone will sound when the minimum volume has been reached)
Send the call from the headphones to the mobile	Briefly press the ▷ button <b>5</b> twice
Send the call from the mobile to the headphones	Briefly press the ▷ button <b>5</b> twice
End the current call and answer call waiting*	Briefly press the ▷ button <b>5</b>
Switch between two calls (toggle)*	Hold the ▷ button <b>5</b> 2 seconds until it beeps.

\*These functions must be supported by your mobile service provider.

- When there is incoming call, the LED **7** will briefly flash blue two times per second.
- The ringer and the caller's voice are rendered through the speakers **1**.
- Music playback is automatically paused when a call is received.
- The microphone **8** records your voice.
- Music continues after the call has been ended.

**Note:** No headset function while using AUX cable **12**.

## ● Connecting the headphones through AUX cable

- Insert the AUX cable 0.14 in (3.5 mm) **12** into the AUX IN **9** and other 0.14 in (3.5 mm) jack plug in to the 0.14 in (3.5 mm) jack connection socket of your playback device.
- Start a playlist on your playback device. You can only adjust the music volume on the playback device.

**Note:** Music playback via AUX cable takes priority over music playback via Bluetooth®. Music playback from a Bluetooth® source is therefore interrupted once the AUX cable **12** is plugged into the AUX IN **9**.

## ● Cleaning

### ATTENTION

#### Potential damage to the product!

- Switch the product off and remove all plugs before cleaning!
- Be sure moisture does not enter the product during cleaning to prevent damage to the product and related repairs.
- Only clean the product with a slightly dampened cloth and a mild spray!

## ● **Storage when not in use**

- Store the product in a dry environment, protected from dust and direct sunlight.
- To prevent battery deterioration, at longer storage the rechargeable battery has to be charged regularly.

## ● **Troubleshooting**

● = **Fault**

⊙ = Possible cause

○ = Action


### ● **No functions**

- ⊙ Battery drained.
- Recharge the battery as described in "Charging the battery".

### ● **No Bluetooth connection**

- ⊙ Error operating the headphones.
- Switch the headphones off and on again.
- ⊙ Communication device error.
- Separate the connection to the headphones and connect again.
- Check if other devices using Bluetooth standard 5.0 work with the communication devices.
- ⊙ Bluetooth® connection error.
- Move closer to the devices connected via Bluetooth®.
- Remove the AUX cable [12](#) from the headphones.

## ● **No sound**

- ⦿ The headphones volume is set to Minimum.
- Press the  button 4 to increase the volume.
- ⦿ Error operating the communication device.
- Increase the volume on the playback device.
- ⦿ Bluetooth® connection error.
- Move closer to the devices connected via Bluetooth®.
- Disconnect Bluetooth® and reconnect.

## ● **Unable to use all functions**

- ⦿ Communication device error.
- Verify your communication device supports all functions.

## ● **Disposal**

Dispose of the packaging through your local recycling facilities and in compliance with all federal, state and local regulations.



Please note the package markings regarding waste separation, indicated by abbreviations (a) and numbers (b), meaning: 1-7: plastics / 20-22: paper and cardboard / 80-98: composite materials.



Contact your local waste management authority for additional information on how to dispose of the used product.

To help protect the environment, please dispose of the product properly when it has reached the end of its useful life, do not throw in the garbage.

Information on collection sites and their opening hours is available from your local authority.



### **Improper disposal of rechargeable batteries can damage the environment!**

Never throw rechargeable batteries in the garbage. They may contain toxic heavy metals and must be handled as special waste. The chemical symbols of heavy metals are: Cd = cadmium, Hg = mercury, Pb = lead. Used rechargeable batteries should therefore be disposed of through a local collection point.

## **● Three year limited warranty**

### **What does this warranty cover?**

The warranty covers:

- Damage, breakage or inoperability due to defect.
- Damage not caused by normal wear and tear or failure to follow the safety and maintenance instructions provided in the user manual.

### **What is not covered by the warranty?**

The warranty does not cover damage caused by:

- Normal wear and tear of the product, including fragile parts (such as switches, glass, etc.);
- Improper use or transport;
- Disregarding safety and maintenance instructions;
- Accidents or acts of nature (e.g. lightning, fire, water, etc.);
- Tampering with the product (such as removing cover, unscrewing screws etc.).

Consequential and incidental damages are also not covered under this warranty. However, some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

### **What is the period of coverage and warranty resolution?**

The warranty is for 3 years from the date of purchase. At our discretion, product will either be refunded or replaced.

### **What will we not do?**

We will not:

- Start a new warranty period upon product exchange;
- Repair product.

### **How to process the warranty?**

To initiate, please:

- Call customer service at 1 (844) 543-5872
- Visit the Website Customer Service Platform at [www.lidl.com/contact-us](http://www.lidl.com/contact-us)  
or
- Visit a LIDL store for further assistance

To ensure the quickest warranty return process, please have the following available:

- The original sales receipt that includes the date purchased;
- The product and manual in the original package;
- A statement of the problem.



### **What must you do to keep the warranty in effect?**

- Retain the original receipt;
- Follow all product instructions;
- Do not repair or modify the product.

### **How does state law relate to this warranty?**

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. All implied warranties are limited by the duration and terms of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

