



**Distributed by / Distribuido por:**

LIDL US, LLC, Arlington, VA 22202

**Model No. / Modelo Núm.:** HG06610A-US, HG06610B-US

**FCC ID :** 2AJ90-HG661

**Version / Versión:** 08/2020

Made in / Hecho en: China

**SILVERCREST®**

**BLUETOOTH® SPEAKER/**

**XXX**

**SBL TW3 A1**

US-EN

**BLUETOOTH® SPEAKER**

Operation and Safety Notes

US-ES

**XXXXXXXXXXXXXXXX**

Instrucciones de utilización y de seguridad

IAN 352435\_2001



IAN 352435\_2001

US

US-EN

Operation and Safety Notes

Page 3

---

US-ES

Instrucciones de utilización y de seguridad

Página XX

---

<b>Description of signal words</b> . . .	Page	5
<b>Customer service</b> . . . . .	Page	6
<b>Warnings and symbols used</b> .	Page	7
<b>Introduction</b> . . . . .	Page	9
Intended use. . . . .	Page	9
Trademark notices . . . . .	Page	10
Scope of delivery. . . . .	Page	11
Parts description. . . . .	Page	12
Technical data . . . . .	Page	14
<b>Important safety notes</b> . . . . .	Page	16
Safety instructions for built-in rechargeable batteries. . . . .	Page	23
<b>Before use.</b> . . . . .	Page	26
Charging . . . . .	Page	27

<b>Using the product</b> . . . . .	Page	28
Establishing a Bluetooth® connection . . . . .	Page	29
Functions of the buttons . . . . .	Page	30
Connecting via the AUX-in jack . . .	Page	34
Switching between AUX-in and Bluetooth® connections . . . . .	Page	35
TWS pairing . . . . .	Page	35
<b>Cleaning</b> . . . . .	Page	37
<b>Storage during non-use</b> . . . . .	Page	37
<b>Troubleshooting</b> . . . . .	Page	38
<b>Disposal</b> . . . . .	Page	40
<b>Three year limited warranty</b> . . . . .	Page	42

## DESCRIPTION OF SIGNAL WORDS

### **WARNING**

WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.

### **CAUTION**

CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

### **NOTICE**

NOTICE indicates information considered important, but not hazard related (e.g. messages related to property damage).

## CUSTOMER SERVICE



Call customer service at  
**1 (844) 543-5872**



Visit the Website Customer Service  
Platform at  
**[www.lidl.com/contact-us](http://www.lidl.com/contact-us)**

Visit a LIDL store for further assistance.  
Please have your IAN number ready.

**IAN 352435\_2001**

## Warnings and symbols used

These instructions for use contain the following symbols and warnings:



**DANGER!** This symbol with the signal word “DANGER” indicates a hazard with a high level of risk which, if not avoided, will result in serious injury or death.



**WARNING!** This symbol with the signal word “WARNING” indicates a hazard with a medium level of risk which, if not avoided, could result in serious injury.



**CAUTION!** This symbol with the signal word “CAUTION” indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.



**ATTENTION!** This symbol with the signal word “ATTENTION” indicates possible property damage.



**NOTE:** This symbol with the signal word “NOTE” provides additional useful information.



This mandatory sign indicates to wear suitable protective gloves! Follow the instructions of this warning to avoid hand injuries caused by objects or contact with hot or chemical materials.



This symbol means that the operating instructions must be observed before using the product.



# BLUETOOTH® SPEAKER

## ● Introduction

Congratulations on your purchase. You have selected a quality product. The instructions for use are a part of the product. They contain important information about the safety, use and disposal of the product. Before using the product, please learn about all the safety information and usage instructions. Only use the product as described and for the specified applications. If you lend the product to someone else, please also give all the instructions.

## ● **Intended use**

This Bluetooth® Speaker (hereinafter referred to as “product”) is a consumer electronic intended to render audio transmitted via Bluetooth® or a jack lead connection.

The built-in rechargeable battery allows for cordless operation. The product is designed for private use, must not be used for commercial purposes. Any other use is considered improper. Any claims resulting from improper use or due to unauthorised modification of the speaker will be considered unwarranted. Any such use is at your own risk.

## ● Trademark notices

- USB<sup>®</sup> is a registered trademark of USB Implementers Forum, Inc.
- The Bluetooth<sup>®</sup> word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by LIDL US, LLC is under license.
- The Silvercrest trademark and trade name is the property of their respective owners.

- Any other names and products are trademarks or registered trademarks of their respective owners.

## ● **Scope of delivery**

- Remove all packaging material and check the contents of the packaging for completeness. Please contact the dealer if parts are missing or damaged.

1 Bluetooth® Speaker






1 Charging cable (Micro USB / USB type A)

 
 
 
 
1 AUX cable (3.5 mm jack plug)

1 Instructions for use

1 Quick start guide

## ● Parts description

- 1 AUX-in jack
- 2 LED (AUX-in indicator)
- 3 LED (battery changing indicator)
- 4 Micro-USB charging socket
- 5 LED (Bluetooth®/TWS indicator)
- 6  Button
- 7  button (decrease volume / skip backwards /beginning of title)
- 8  button (play / pause)
- 9  button (increase volume / skip key forwards)
- 10  TWS button
- 11 Speaker
- 12 Charging cable (Micro USB / USB type A)
- 13 3.5 mm AUX cable

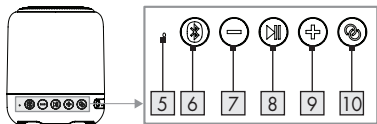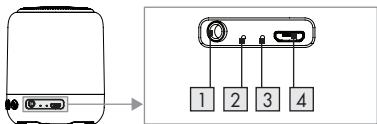

14 Quick start guide

15 Instruction for use

## ● Technical data

Micro USB socket

power supply: 5 V , 500 mAh

Battery power supply: 1 x 3.7 V rechargeable  
lithium-ion battery with  
1200 mAh (Battery is not  
replaceable.)

Music output: max. 3 W RMS

Wireless standard: Bluetooth® 5.0

Frequency band: 2400 MHz–2483.5 MHz

Max. transmitted

power: 1 mW

Charging socket: micro-USB

AUX-in jack: 3.5 mm jack plug

Dimensions H x dia.: 3.5 in x 2.9 in  
(90mm x 75 mm)

Weight: 8.8 Oz (250 g)  
Operating conditions: 50°F - 104°F  
(10 °C-40 °C),  
40 % -85 % rel. humidity  
Storage temperature: -4°F- 140 °F  
(-20 °C-+60 °C)  
Operation times: 19 hours  
                          playback music  
Charging time: 3 hours  
Bluetooth® protocols: AVRCP (remotely controls  
                                  key audio functions  
                                  via mobile phone),  
                                  A2DP (wireless audio  
                                  transmission)

# IMPORTANT SAFETY NOTES

READ ALL INSTRUCTIONS. KEEP FOR FUTURE REFERENCE. INCLUDE ALL DOCUMENTATION WHEN PASSING THIS PRODUCT ON TO OTHERS.

## **WARNING**

**Failure to observe the following warnings can result in death or serious injuries.**



**DANGER TO LIFE AND RISK OF ACCIDENT FOR INFANTS AND CHILDREN!**



- **Suffocation hazard!** Never leave children unsupervised with the packaging material. The packaging material poses a suffocation hazard. Children frequently underestimate the dangers. The packaging material is not a toy.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
- Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

# NOTICE

This product has been tested and complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product causes harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the equipment to an outlet on a different circuit than the one the receiver is connected to.
- Consult the dealer or an experienced radio / TV technician for help.
- This product complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This product may not cause harmful interference, and
  - (2) this product must accept any interference received, including interference that may cause undesired operation.
- **Wireless interference**  
Turn the device off on airplanes, in hospitals, service rooms or near medical electronic systems. The wireless signals transmitted

could impact the functionality of sensitive electronics. Keep the device at least 7.874 in (20 cm) from pacemakers or implantable cardioverter defibrillators, as the electromagnetic radiation may impair the functionality of pacemakers. The radio waves transmitted could cause interference in hearing aids. Do not place the device near flammable gasses or potentially explosives areas (e.g. paint shops) with the wireless components on, as the radio waves emitted can cause explosions and fire. The range of the radio waves varies by environmental conditions. In the event of wireless data transmission, unauthorized third parties receiving the data cannot be excluded. Lidl US LLC is not responsible for interference with radios or televisions due to unauthorized modification of the device. Lidl US LLC further assumes no liability for using or replacing

cables and devices not distributed by Lidl US LLC. The user of the device is fully responsible for correcting interference caused by such unauthorized modification of the device, as well as replacement of such devices. The RF Exposure Compliance distance is 5 mm.

## **NOTICE**

- This product does not contain any parts which can be serviced by the user. The rechargeable battery cannot be replaced.

## **WARNING**

**Failure to observe the following warnings may result in death or serious injuries.**

- Do not place burning candles or other open fire on or next to the product.
- If you notice smoke or unusual noise or odor, switch the product off immediately and remove the USB cable.
- Do not throw the product into fire or expose it to high temperatures.
- Do not cover the product during use or charging.
- Only charge the battery in dry environments, since the product is not splash-proof.

## **NOTICE**

- Check the product before every use!  
Discontinue use if any damage to the product or the charging cable is detected!
- Sudden temperature changes may cause condensation inside the product. In this case,

allow the product to acclimate for some time before using it again to prevent short circuits!

- Do not operate the product near heat sources, e.g. radiators or other devices emitting heat!
- Do not try to open the product! It has no internal parts requiring maintenance.



## Safety instructions for built-in rechargeable batteries



# WARNING

**Failure to observe the following warnings may result in fatal or serious injuries.**

- **DANGER TO LIFE!** Keep batteries / rechargeable batteries out of reach of

children. If accidentally swallowed, seek immediate medical attention.



### **DANGER OF EXPLOSION!**

Never recharge disposable batteries. Do not short-circuit batteries / rechargeable batteries and / or open them. They may overheat, ignite or explode.

- Never throw batteries / rechargeable batteries into fire or water.
- Do not exert mechanical loads to batteries / rechargeable batteries.
- Batteries should not be disassembled, crushed, punctured, opened or otherwise mutilated.

### **Risk of battery leakage**



# **CAUTION**



## **Failure to observe the following warnings can result in injuries or property damage.**

- Avoid extreme environmental conditions and temperatures which could affect batteries / rechargeable batteries, e.g. radiators / direct sunlight.
- Avoid contact with the skin, eyes and mucous membranes. In the event of contact with battery acid, thoroughly flush the affected area with plenty of clean water and seek immediate medical attention.



### **WEAR PROTECTIVE GLOVES!**

Leaked or damaged batteries / rechargeable batteries can cause burns on contact with the skin. Wear suitable protective gloves at all times if such an event occurs.

- This product contains an integrated battery which cannot be replaced by the user. The battery may only be removed or replaced by the manufacturer or his customer service or by a similarly qualified person in order to avoid hazards.

# SAVE THESE INSTRUCTIONS

## ● **Before use**

- Before use, verify the package contents are complete and undamaged!
- Place the product on a level, even surface for operation.

## ● Charging

- The integrated rechargeable battery must be charged prior to first use.

**i** **NOTE:** This product may not be charged via the USB port of notebooks etc.

- When the integrated rechargeable battery is drained, there will be a notification sound signal every 2 minutes and the LED **3** will blink red. The integrated rechargeable battery should then be charged as soon as possible.
- Depending on the volume and the age of the battery, the operating time of the product is 19 hours of music playback when fully charged.
- Insert the micro-USB plug of the charging cable **12** into the micro-USB charging socket **4** of the product. Insert the USB plug of


the charging cable **12** into the USB port on a USB adapter (not included in scope of delivery).

**i NOTE:** The LED **3** will light up red whilst charging and change to green once charging is complete. The charging time for a drained battery is 3 hours.

**i NOTE:** The product may be used whilst charging. However, doing so will at a minimum double the charging time.


- Once charging is complete, remove the micro-USB plug of the charging cable **12** from the product.

## ● Using the product

- Press and hold the  button **8** until the signal LED **5** flashes white and a signal tone sequence sounds. The product will now

attempt to connect to the playback device (e.g. smartphone or computer).

## ● **Establishing a Bluetooth® connection:**



- Remove all plugs from the AUX-in jack **1** before you attempt to establish a Bluetooth® connection.
- Switch on the playback device and make sure its Bluetooth® mode is on.
- On the product press and hold the  button **6** for 2 seconds until the LED **5** flashes white and a signal tone sequence sounds. The product will now attempt to connect to the playback device (e.g. smartphone or computer).
- The product identification on the playback device will be „SBL TW3 A1“. On the playback device „ACCEPT“ the connection.



Please note the requirements of the software on the playback device.

- Once the connection is made the LED **5** will light up white and a signal tone sequence sounds.
- The maximum range of the connection is 39.37 in /10 m, but this may be reduced due to the geometry of the space (obstructing furniture, walls, etc.).
- The playback device must support Bluetooth® standard 5.0 otherwise you may not be able to use all the functions.

## ● **Functions of the buttons**

- Start a playlist on your playback device.
- The product has 5 buttons and these control the following functions:

<b>Button</b>	<b>Function</b>
	<ul style="list-style-type: none"><li>- Press and hold for 2 seconds to switch the product on or off.</li><li>- Press briefly during playback to pause or continue playback.</li></ul>
	<ul style="list-style-type: none"><li>- Press and hold for 2 seconds to enable / disable the Bluetooth® connection.</li></ul>

<b>Button</b>	<b>Function</b>
	<ul style="list-style-type: none"><li>- Briefly press to pair two units before they connect to an external Bluetooth® playback device. A signal tone will be heard if pairing has been carried out successfully.</li><li>- Briefly press again to break the current TWS connection, a signal tone will be heard.</li></ul>
	<ul style="list-style-type: none"><li>- Press briefly during playback to increase the volume, one beep will sound when the maximum volume has been reached.</li><li>- Press and hold during playback to skip forwards to the next song in the playlist.</li></ul>




Button	Function
—	<ul style="list-style-type: none"><li>- Press briefly during playback to decrease the volume, one beep will sound when the minimum volume has been reached.</li><li>- Press and hold during playback to skip backwards to the previous song in the playlist.</li></ul>

**i NOTE:** When you change the volume on the product the volume on the playback device will also so change. This volume synchronisation function depends on the operating system and the brand of your playback device.

## ● Connecting via the AUX-in jack

**i** **NOTE:** Music playback via the AUX-in jack **1** has a higher priority over a Bluetooth® connection.

- Once the AUX cable **13** is plugged into the AUX-in jack **1**, the Bluetooth® wireless connection will be disconnected. Music playback is now switched to AUX-in only and the LED **2** lights up green.
- If the product is off, press and hold the  button **8** until the signal LED **2** lights up green and a signal tone sequence sounds.
- Switch the playback device on and start playback.
- Adjust the volume on the playback device to the highest possible volume then adjust the volume on the product using the **+** **9** and

— **7** buttons.








## ● **Switching between AUX-in and Bluetooth® connections**



- To resume music playback via Bluetooth® connection unplug the AUX cable **13** from the AUX-in jack **1**. The product will then search for the previously paired playback device (if any) and re-establish the Bluetooth® connection automatically.

## ● **TWS pairing**

**i NOTE:** This function is only available if two of these products have been purchased and both have the same model number.

- Turn on both products and make sure they are both not connected to another device via Bluetooth®.

- Press the  button  on one of the products which will then by default set it as the „master“ unit. A beep will sound. When pairing between both products has been carried out successfully, the LED  of the connected „slave“ unit stops flashing and a sequence of beeps will sound.
- The „master“ unit LED  will still be flashing waiting to pair with the playback device. Once the „master unit“ has successfully paired with the playback device both the „master“ and „slave“ units can be played and controlled synchronously during Bluetooth® playback mode.
- Press the  button  again to break the TWS pairing connection, the LED  on the connected „slave“ unit flashes and a signal tone sequence sounds.

**i** **NOTE:** The product which had its  button  pressed first will become the „master“ unit (in the left audio channel), and the other unit will then by default become the „slave“ unit (in the right audio channel).

## ● Cleaning

- Switch the product off and remove all cables before cleaning.
- Only clean the outside of the product using a soft, dry cloth!

## ● Storage during non use

- Store the product in a dry environment when not in use. Protect it from dust and direct sunlight. The rechargeable battery needs to be charged regularly.

## ● Troubleshooting

● = **Fault**

⦿ = Possible cause

○ = Action

● = **No functions**

⦿ = Battery drained.

○ = Recharge the battery as described in the “Charging” section of these instructions.


● **No Bluetooth® connection**

⦿ Error operating the product.

○ If necessary, unplug the AUX cable **13** from the AUX-in jack **1**.

○ Switch the product off and on again and increase the volume.

⦿ Playback device error.

- Check to see if the product was detected by the playback device.
- Check to see if the playback device has detected and connected to any other devices with Bluetooth® Standard 5.0.
- No music playback via Bluetooth®**
  - Error operating the product.
  - Check to see if the AUX cable **13** is still inserted into the AUX-in jack **1**, if it is remove it.
  - If the product is switched on, turn it off and on again.
  - Press and hold the  button **6** to start a new connection to the playback device.
  - Increase the volume on the playback device.

## ● **No music playback via AUX-in connection**

- Error connecting the AUX cable 13
- Reconnect the AUX cable 13 to the playback device.
- The volume at the playback device or at the product is too low and has to be increased.

## ● **Disposal**

Dispose of the packaging through your local recycling facilities and in compliance with all federal, state and local regulations.



Please note the package markings regarding waste separation, indicated by abbreviations (a) and numbers (b), meaning: 1-7: plastics / 20-22: paper and cardboard / 80-98: composite materials.





Contact your local waste management authority for additional information on how to dispose of the used product.

To help protect the environment, please dispose of the product properly when it has reached the end of its useful life, do not throw in the garbage. Information on collection sites and their opening hours is available from your local authority.



Dispose of the packaging through their opening hours is available from your local authority.

## **Improper disposal of batteries can damage the environment!**

Never throw batteries in the garbage. They may contain toxic heavy metals and must be handled as special waste. The chemical symbols of heavy metals are: Cd = cadmium, Hg = mercury,

Pb = lead. Used batteries should therefore be disposed of through a local collection point.

## ● **Three year limited warranty**

### **What does this warranty cover?**

The warranty covers:

- Damage, breakage or inoperability due to defect.
- Damage not caused by normal wear and tear or failure to follow the safety and maintenance instructions provided in the user manual.

### **What is not covered by the warranty?**

The warranty does not cover damage caused by:

- Normal wear and tear of the product, including fragile parts (such as switches, glass, etc.);
- Improper use or transport;

- Disregarding safety and maintenance instructions;
- Accidents or acts of nature (e.g. lightning, fire, water, etc.);
- Tampering with the product (such as removing cover, unscrewing screws etc.)

Consequential and incidental damages are also not covered under this warranty. However, some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

### **What is the period of coverage and warranty resolution?**

The warranty is for 3 years from the date of purchase. At our discretion, product will either be refunded or replaced.

## **What will we not do?**

We will not:

- Start a new warranty period upon product exchange;
- Repair product.

## **How to process the warranty?**

To initiate, please:

- Call customer service at 1 (844) 543-5872
- Visit the Website Customer Service Platform at [www.lidl.com/contact-us](http://www.lidl.com/contact-us)

or

- Visit a LIDL store for further assistance

To ensure the quickest warranty return process, please have the following available:

- The original sales receipt that includes the date purchased;

- The product and manual in the original package;
- A statement of the problem.

### **What must you do to keep the warranty in effect?**

- Retain the original receipt;
- Follow all product instructions;
- Do not repair or modify the product.

### **How does state law relate to this warranty?**

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. All implied warranties are limited by the duration and terms of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.