

## 80 mm

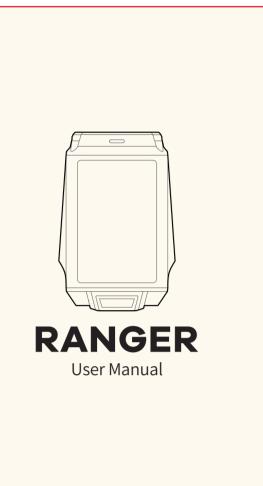

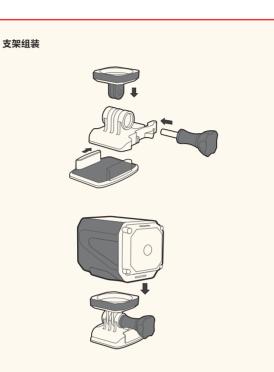



【从右到左滑动】进入数据界面











1. 过高摔落或受到过大外力碰撞可能会使 Ranger 损坏,导致工作异常。 2. 确保镜头保护玻璃清洁,异物可能划伤镜头保护玻璃导致画质受损。建议 3. 镜头保护玻璃如意外破损,请小心处理避免受伤。 4. 使用 Ranger 的过程中请注意防尘及防沙。若机身拾音孔等被沙尘等异物

6. 请勿将 Ranger 置于极冷或极热的环境中。低温或高温条件可能会缩短电池的使用时间,或者导致暂时不能正常工作。 7. 雷雨天气请勿使用 Ranger。 8. 请勿自行拆解和维修 Ranger。 9. 请勿在温泉、腐蚀性液体中使用 Ranger。不建议在极端水环境、不明液体 2 非保修条例 12. 低电量请及时充电,长期(超过4个月)低电量放置会影响电池使用寿命。 13. 超过 10 天不使用 Ranger,请将电池充电或放电至 40%-60% 电量存放, 2. 已超过三包有效期。


和国产品质量法》实行售后三包服务,服务内容如下: 1. 自签收次日起7日内,本产品出现《产品性能故障表》所列性能故障的情况, 经由盯盯拍售后服务中心检测确认,可免费享受退货或换货服务。 2. 自签收次日起15日内,本产品出现《产品性能故障表》所列性能故障的情况, 经由盯盯拍售后服务中心检测确认,可免费享受换货或维修服务。 3. 自签收次日起12个月内,本产品出现《产品性能故障表》所列性能故障的情 况,经由盯盯拍售后服务中心检测确认,可免费享受维修服务。 1. 未经授权的维修、使用不当(如坠落、挤压、浸液、碰撞电击等人为原因)而造成 5. 因人为原因导致本产品及其配件产生《产品性能故障表》所列性能故障。 


 1. 设备不通电
 2. 喇叭异常/无声
 3. 无WiFi信号


 4. 电源键失控
 5. 图像颜色异常


多溴联苯 (PBB) 各部件的环保年限:电路板组件10年,电源线10年,电容5年。 本产品所标识环保年限指在本用户手册规定的使用条件下使用产 不发生有毒有害物质泄露的安全年限。 ) :表示该有毒有害物质在该部件所有均质材料中的含量均 GB/T26572-2011标准规定的限量要求以下。 🗙 :表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 GB/T26572-2011标准规定的限量要求。 备注:表中标记"X"的部分中的少量特殊用途的贴片电子元器件(如高压电阻 陶瓷电阻、二极管等)中的铅含量可能≥0.1%。螺钉、数据线中的线芯因采用 性能较优的合金,其铅含量也可能≥0.1%,这些器件均符合欧盟RoHS指令要 求的豁免条款,现阶段由于全球技术发展水平的限制无任何可替代的技术和

制 造 商: 盯盯拍(深圳)技术股份有限公司 客服热线: 400-897-3088 服务时间: 周一至周日9:00~18:30 (国家法定节假日除外)

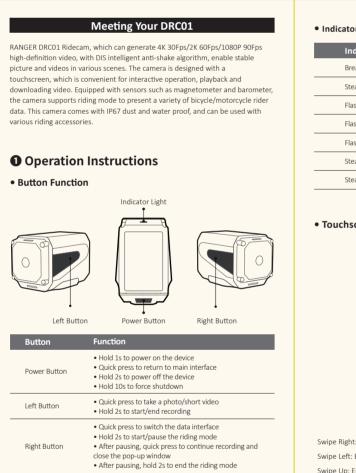

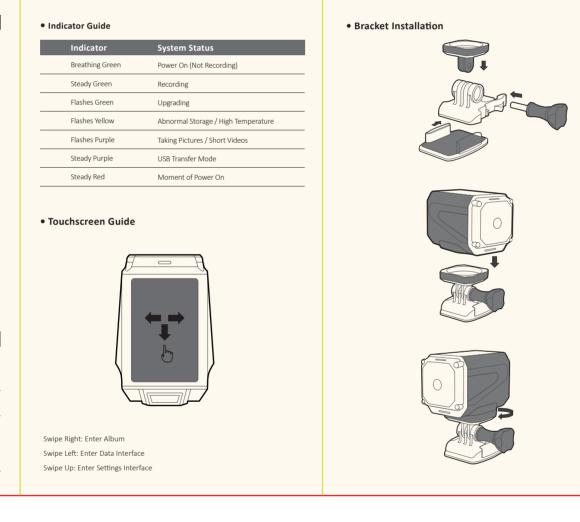

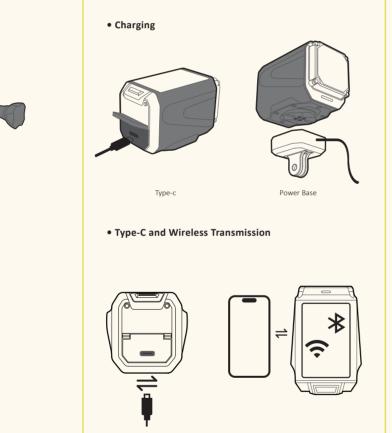

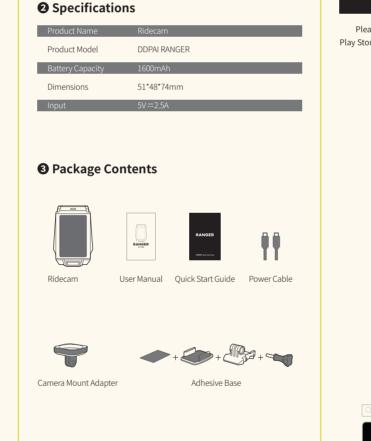



temperature limit is reached in the power-on state, and it is recommended to charge in the power-off state. When there are foreign objects on the lens protection cover, it is recommended 8. Do not disassemble the product in any way. If the battery is pierced during disassembly, the electrolyte inside the battery will leak, and even cause fire and cloths to clean it. Make sure the camera is dry when replacing the protective lens explosion. Do not mechanically strike, crush or throw the product. Do not place heavy objects on the product. 9.Do not heat the product. Do not place the product in microwave or pressure lens cover during disassembly and assembly, which will affect the shooting quality. 2. When there are foreign objects on the lens, use lens pen, lens air blower, lens and to place the product in a car on a hot day. Do not store the product at temperatures above 60°C. 3. If there are foreign objects in the cover of the data power supply, please clean 11.Do not store the battery for a long time after it has been fully discharged to them with a dry, soft cloth or paper or air blower. avoid battery damage caused by over-discharge. Otherwise, the device will no

1. Falling from a high place or being subjected to excessive external impact may 1. The device contains strong magnetism. To avoid the effect of magnetization, damage the device and cause abnormal operation. please keep away from magnetic cards, IC cards, implanted medical devices (such as

2. Make sure the lens protection glass is clean. Foreign matter may scratch the pacemakers), hard drives, AM chips and other vulnerable devices. lens protection glass and cause image quality damage. It is recommended to clean the device with a soft dry cloth. 2. The built-in waterproof membrane of the sound pickup hole and the air pressure balance hole of the device is specially designed for waterproofing. Do not remove

3. If the lens protection glass is accidentally damaged, please handle it carefully to protection will be lost. After using in water, please use a soft clean cloth to clean the

4. When using the device, please keep it away from dust and sand. If the sound moisture and foreign matter on the device in time. 3. When there is water or dirt on the surface of the extension interface of the please wash it with water. 5. Do not use sharp objects to poke the USB-C interface, pickup holes, and other operations. Otherwise it will stop working or cause corrosion. and the built-in breathable membrane will rupture and water will enter. conditions may shorten battery life or cause temporary malfunction. 5. If the product catches fire, please immediately use water, spray, sand, fire 7. Do not use the device in thunderstorm weather. 8. Do not disassemble and repair the device by yourself. 9. Do not use the device in hot springs, corrosive liquids. It is not recommended to 6. Please use the product in an environment where the temperature is between use the device in extreme water environment, or unknown liquid environment. 10. When the device is fixed outside the vehicle, if the speed of the vehicle is too

11. Do not use the device underwater. 12. If the battery is low, please charge it in time. Long-term (more than 4 13. If the device is not used for more than 10 days, please charge or discharge the battery to 40%-60% for storage, which can prolong the service life of the 14. The use distance of the human body is more than 15mm.

may cause undesired operation.

FCC ID:2AJFX-RANGER

1. 切勿将电池彻底放完电后长时间存储,以避免电池进入过放状态而造成电

energy and, if not installed and used in accordance with the instructions, may -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference.

2. This device must accept any interference received, including interference that Manufacturer: DDPAI (Shenzhen) Technology Co., Ltd. Changes or modifications not expressly approved by the party responsible for Website: www.ddpai.com Address: 28F, Building 8A, International Innovation Valley, Nanshan District, Shenzhen City, Guangdong Province

3. 因不可抗力造成的损坏。

❸ 产品性能故障表

4. 不符合《产品性能故障表》所列故障情况。

6. 产品使用过程中正常的老化、磨损、脱色等。



设计人员:徐小云 包装类型:说明书 材质:80g圣经纸 工艺:骑马钉 颜色:材料浅黄色 归档人员:徐小云 项目经理:黄念念 比例尺寸:1:1 尺寸:80\*132mm 公差: ±0.5mm

## 包装变更履历

| 修改对象              | 版本   | 修改时间     | 修改内容               | 修改原因          |
|-------------------|------|----------|--------------------|---------------|
| 说明书料号:70401000135 | V0.0 | 20230706 | 初始版                | 初始版           |
| 说明书料号:70401000135 | V0.1 | 20230807 | 变更文案               | 产品需求          |
| 说明书料号:70401000135 | V0.2 | 20230810 | 变更文案               | 产品需求          |
| 说明书料号:70401000135 | V0.3 | 20230812 | 变更文案               | 会议需求          |
| 说明书料号:70401000135 | V0.4 | 20230816 | 变更文案               | 售后、认证需求       |
| 说明书料号:70401000135 | V0.5 | 20230817 | 变更文案               | 售后、认证、产品、测试需求 |
| 说明书料号:70401000135 | V0.6 | 20230818 | 变更规格               | 售后需求          |
| 说明书料号:70401000135 | V1.0 | 20230908 | 增加英文版              | 产品需求          |
| 说明书料号:70401000135 | V1.1 | 20230912 | 更变细节               | 文档工程师纠错       |
| 说明书料号:70401000135 | V1.2 | 20230919 | 包装清单增加两爪转接头        | 项目需求          |
| 说明书料号:70401000177 | V1.3 | 20231011 | 海外官网改成中英文统一,折页改骑马钉 | 项目需求          |
| 说明书料号:70401000177 | V1.4 | 20231011 | 变更文案细节             | 文档工程师纠错       |
| 说明书料号:70401000177 | V1.5 | 20231011 | 变更文案细节             | 海外销售纠错        |
| 说明书料号:70401000177 | V1.6 | 20231013 | 变更文案细节,修改产品名称      | 海外销售纠错、项目需求   |