




Crumb tray

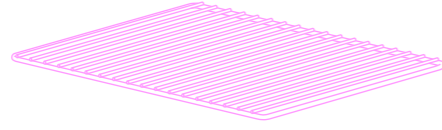


Wire rack

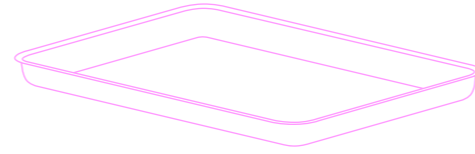


Pan

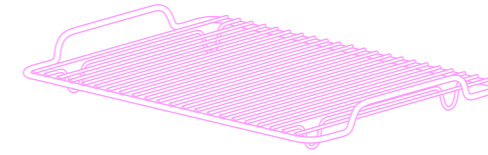


Roasting rack

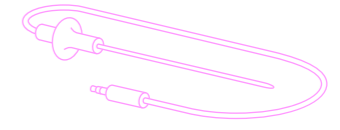


Food thermometer

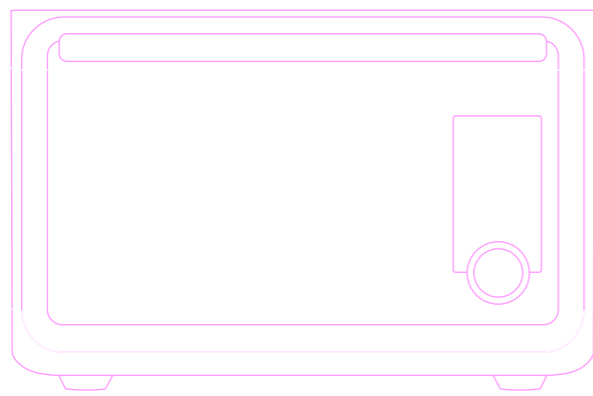


Peel the plastic film off the oven door and top of the oven and remove the cardboard from the back. Remove all packaging from oven accessories.

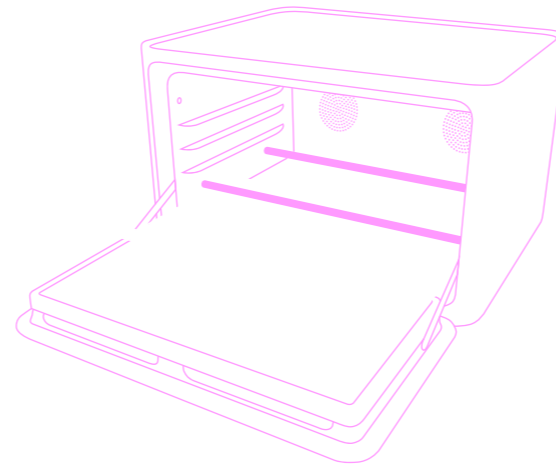


Insert the crumb tray on the floor of the oven, beneath the bottom heating elements.

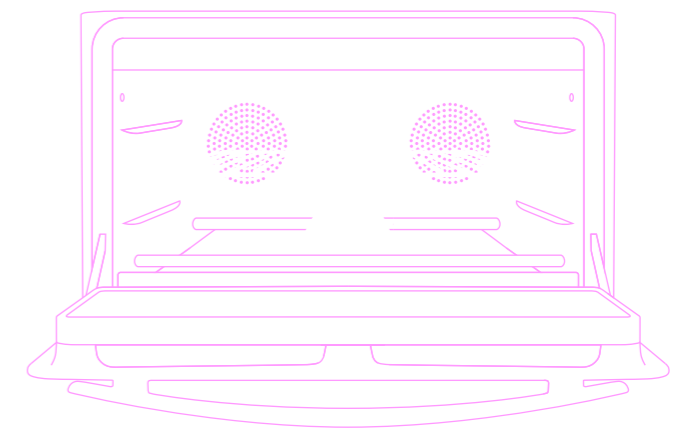


Insert the wire rack in the middle rack position. The rack's raised cross bars should be on top.

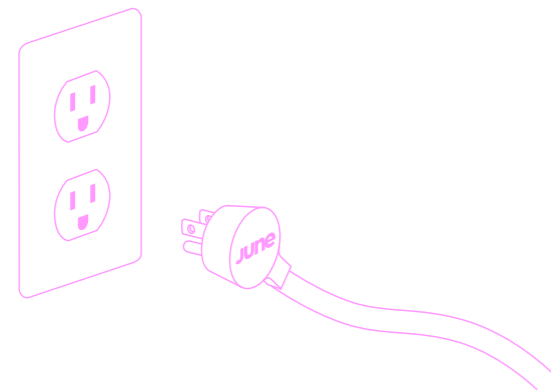

The touch-screen display will turn on. Make sure your oven is plugged directly into a wall socket—don't use an extension cord or adapter, which could pose risk of fire.

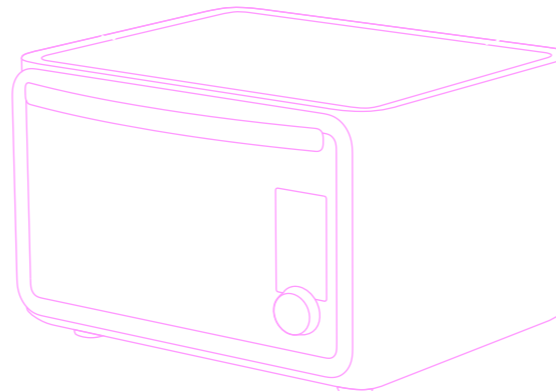

Oven needs 2 inches of space on each side and at least 4 inches above for proper air circulation. A plastic bumper keeps the back from touching any wall. Make sure all perforated vents are clear.

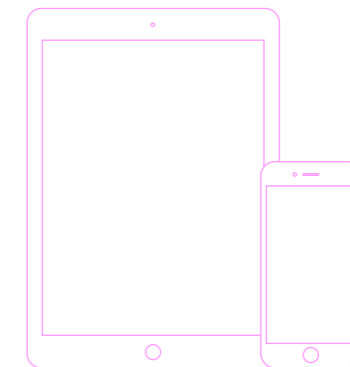

Use the app to set up your oven and control it from your device. Search 'June oven' in the Apple App Store or go to www.juneoven.com/app.