

BAOFENG®

User's Manual

BF-88A FRS

CONGRATULATIONS!

You have purchased one of the smartest and smallest devices with a unique kid walkie talkie. The lightweight and compact kid walkie talkie style device can be operated conveniently. Its ideal to stay connected with family or friends in parks, shopping malls, sporting events, concerts-virtually any indoor or outdoor activities.

A. LED INDICATOR_The LED indicator lights continuously red when transmitting. And lights green when in reception condition.

B. CHANNEL SWITCH_Rotate it to select the channel. No.16 channel is scanning channel.

C. POWER SWITCH/VOLUME CONTROL_Turn clockwise to switch ON the transceiver.

Turn counterclockwise fully to switch OFF the transceiver.

Rotate to adjust the volume.

D. PTT (PUSH-TO-TALK) BUTTON_Press this button, then speak into the microphone to call a station.

Release to receive a call.

E. MONITOR BUTTON_Press and hold (Squelch OFF) to hear the background noise; Release to return to normal operation.

F. FUNCTION KEY_Just press to activate the torch function.


G. SPEAKER/MICROPHONE JACKS

Key features about this device:

- FRS Radio
- 0.5W
- Multi Channels
- 38 CTCSS, 83 DCS sub-channel
- Up to 3KM Range
- Power off resume
- Low battery checking
- Auto Squelch
- Auto Battery Saving
- Channel Scan
- Internal VOX (5 adjustable voice volume)

Read this Owner' s Manual carefully and you' ll get the most out of your two-way kid walkie talkie

COMMUNICATOR

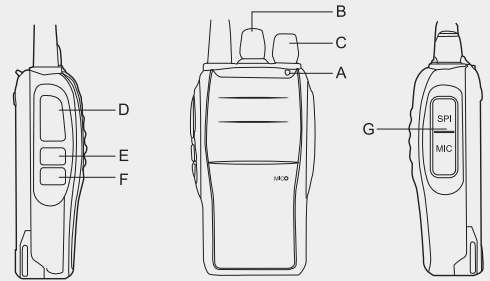

This device complies with telecommunication management standard. Operation is subject to the following conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may require undesired action.

Important: Changes or modifications to this unit not approved by manufacturer/ Communication Authority could void your right to operate this unit. Your communicator is set up to transmit a regulated Signal on an assigned frequency. It is against the law to alter or adjust the settings inside the communicator to exceed those limitations. Any adjustment to your communicator must be made by qualified technicians.

TO BE SAFE AND SURE

•Never open the case of your device. No user serviceable parts inside.

•Never change or replace anything in your device.

Your device may interfere with TVs or radios, even when operating properly. To determine whether your communicator is causing interference, simply turn it off. If the interference ends, your device is causing it. Try to eliminate interference by moving your communicator away from the receiver. If you cannot eliminate interference completely, please stop using this device.

SPECIFICATIONS

Frequency Range	462MHz-467MHz
RF Rated Power	≅ 0.5W
Channel Capacity	16S
Operated Voltage	3.7V
Dimensions	170mm×55mm×30mm
Weight	140g

IV

Why can I hear the voices clearly from other group, sometimes, my voice is intermittent.

Please check whether the MIC is blocked by something. If so, Please return the radio to your authorized dealer for maintenance. Sometimes, your frequency is same as the frequency of other groups.

Can't turn on the radio and even it is turned on, it often shuts off automatically.

Please check the battery contacts on the radio. If it is broken or twisted, please return the radio to your authorized dealer for maintenance

VI

TROUBLESHOOTING GUIDE

No Power

•Check battery installation and/or replace batteries.
Voltage Capacity Quickly Go Out.
The battery life is over, replace new one.

Couldn't I communicate with other group members.

First, please verify that the channel frequency and the CTCSS you are using are the same as those of your group members. If the channel frequency and the CTCSS are the same, please verify that your group members are within the radio coverage

Hear the voice from other groups.

Please change your CTCSS for the channel. At the same time, you also need to the CTCSS for all the radios in your group. If you don't like this, you may apply another channel frequency.

V

WARRANTY CARD

Model:	Serial NO.:
Dealer:	User name:
Address:	Purchase Date:
Tel. NO.:	Fax NO.:
Zip Code:	Warranty Remarks:

1. The consumer keeps the warranty card as the proof for repairing.
2. The card is of validity with the stamp and date.
3. The card mustn't be altered. Please confirm that the card NO. and the machine NO. must be same, or else it is not valid.
4. The accessories, such as charger, battery, earphone, antenna, and program cable are not covered. ZICOM will repair or replace any defective parts during one year limited warranty period.
5. The consumer can send the machine to the purchase site or our maintenance sites for repairing.

The information listed above provides the user with information needed to make him or her aware of a RF exposure, and what to do to assure that this radio operates within the FCC exposure limits of this radio. The device complies with RF specifications when the device used at 25mm from your front face and 0mm from your body and must operate with a duty factor not exceeding 50%. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Maximun SAR Value (1g):0.457W/Kg.