## ATTENTION

Pofung F19 is a multi-task FRS transceiver. Combining the latest technology in radio communication along with a sturdy mechanical frame, F19 is the ideal and effective solution for the professionals who need to stay in touch with the working team (in construction sites, buildings, shows, trade fairs or hotels) or for leisure users that just want to keep up with friends and family.

To help you ward off bodily injury or property loss that may arise from improper operation, please read all the information carefully before using our products.

# FCC RF EXPOSURE

**WARNING!** It is up to the user to properly operate this radio transmitter to insure safe operation. Please adhere to the following:

Do not use the radio with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result.

Please contact your local dealer for a replacement antenna.

Device operation up to maximum duty cycle 50% and compliance with the public environment RF Exposure. This EUT is compliance with SAR for controlled exposure limits in IC RSS-102 at operating duty factors of up to 50% and had been tested in accordance with the measurement methods and procedures specified in IEEE 1528 and IEC 62209. This equipment should be installed and operated with a minimum distance of 2.5 cm must be maintained when held-to-face, and body-worn operations are restricted to the approved original accessories (belt clip), a minimum distance of 0 cm. Cet EUT est conforme au SAR pour les limites d'exposition contrôlées dans IC RSS-102 à des facteurs de service allant jusqu'à 50% et a été testé conformément aux méthodes et procédures de mesure spécifiées dans IEEE 1528 et IEC 62209. Cet équipment doit être installé et utilisé avec une distance minimale de 2,5 cm doit être maintenu lorsqu'il est tenu face à face, et les opérations portées sur le corps sont limitées aux accessoires d'origine approuvés (clip de ceinture), une distance minimale de 0 cm.

Hand-Held Operation (Held-to-Face)

This device was evaluated for typical hand-held (held-to-face) operations with a 1 inch spacing from the front of the radio. For hand-held operation, the radio should be held 1 inch from the user's face in order to comply with FCC RF exposure requirements.

Body-Worn Operation

This device was evaluated for body-worn operations with the supplied belt-clip accessory. (All necessary accessories are included in the package; any additional or optional accessories are not required for compliance with the guidelines.) Third party accessories (unless approved by the manufacturer) should be avoided as these might not comply with FCC RF exposure guidelines.

For body worn operation, this device has been tested and meets the Industry Canada RF exposure guidelines when used with Pofung accessories supplied or designated for this product. Use of other accessories may not ensure compliance with Industry Canada RF exposure guidelines.

Fonctionnement de l'appareil, lorsque porté sur le corps. Cet appareil a été testé et s'est avéré conforme aux normes d'Industrie Canada et approuvé pour le port sur le corps à l'aide des accessoires Pofung inclus et conçus pour cet appareil. L'utilisation d'accessoires ne respectant pas les exigences d'exposition RF d'Industrie Canada doit être évitée.

# FCC PART15 /IC COMPLIANCE

### ■ FCC PART 15 COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Avis de conformité à la FCC : Ce dispositif a été testé et s'avère conforme à l'article 15 des règlements de la Commission fédérale des communications (FCC). Ce dispositif est soumis aux conditions suivantes: 1) Ce dispositif ne doit pas causer d'interférences nuisibles et; 2) Il doit pouvoir supporter les parasites qu'il reçoit, incluant les parasites pouvant nuire à son fonctionnement.

Tout changement ou modification non approuvé expressément par la partie responsable pourrait annuler le droit à l'utilisateur de faire fonctionner cet équipement.

### ■ IC COMPLIANCE

This device complies with Industry Canada license-exempt RSS standard(s).Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Cet appareil est conforme aux normes RSS exemptes de licences d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférences nuisibles et (2), il doit pouvoir accepter les interférences, incluant celles pouvant nuire à son fonctionnement normal.

Tout changement ou modification non approuvé expressément par la partie responsable pourrait annuler le droit à l'utilisateur de faire fonctionner cet équipement.

# PRECAUTIONS FOR BATTERIES

## Charging Prohibitions

To protect you against any property loss, bodily injury or even death, be sure to observe the following safety instructions:

- 1. Do not charge or replace your battery in a location containing fuels, chemicals, explosive atmospheres and other flammable or explosive materials.
- 2. Do not charge your battery that is wet. Please dry it with a soft and clean cloth prior to charge.
- 3. Do not charge your battery suffering deformation, leakage and overheat.
- 4. Do not charge your battery with an unauthorized charger.
- 5. Do not charge your battery in a location where strong radiation is present.
- 6. Overcharge shall always be prohibited for it may shorten the life of your battery.

### Maintenance Instructions

To help your battery work normally or prolong its life, be sure to observe the following instructions:

- 1. Accumulated dust on charging connector may affect normal charging. Please use a clean and dry cloth to wipe it on a regular basis.
- It is recommended to charge the battery under 5℃~40℃. Violation of the said limit may cause battery life reduction or even battery leakage.
- 3. To charge a battery attached to the product, turn it off to ensure a full charge.
- 4. Do not remove the battery or unplug the power cord during charging to ensure a smooth charging process.
- 5. Do not dispose of the battery in fire.
- 6. Do not expose the battery to direct sunlight for a long time nor place it close to other heating sources.
- 7. Do not squeeze and penetrate the battery, nor remove its housing.

#### Transportation Instructions

- 1. Damaged batteries must not be transported.
- 2. To avoid short circuit, separate the battery from metal pars or from each other if two or more batteries are transported in one packaging.
- 3. The radio must be switched off and secured against switch-on, if the battery is attached.

The content of the shipment must be declared in the shipping documents and by a Battery Shipping Label on the packaging. Contact your hauler for the local regulations and further information.

#### Precautions for Disposal

Once the service life of our products (including but not limited to radios and batteries) has ended, they shall not be disposed as household garbage. Their recycling and disposal shall satisfy your local regulations.

## MAINTENANCE

To be safe and sure:

- Never open your radio's case.
- Never change or replace anything in your radio except the batteries.

### ■ Care and Safety

Your F19 was designed to fulfill any warranty obligations and to enjoy this product for many years.

As for all the electronically devices, we recommend you to follow this few suggestions:

- Do not attempt to open the unit. Non-expert handling of the unit may damage it and/or annul the warranty.
- When using regulated power supply, take notice of power voltage that must be 5V to avoid damages.
- High temperatures can shorten the life of electronic devices, and warp or melt certain plastics. Do not store the radio in dusty or dirty areas.
- Keep the Radio dry. Rainwater or damp will corrode electronic circuits.
- If it appears that the Radio diffuses peculiar smell or smoke, please shut off its power immediately and take off the charger or battery from the Radio.
- Do not transmit without antenna.
- To clean the radio, use a soft cloth dampened with water. Do not use cleaners or solvents because they can harm the body of the unit and leak inside, causing permanent damage.
- Use a dry, lint-free cloth to clean the battery contacts.

#### Hazardous Environments

Do not operate the radio in hazardous environments. Explosion or fire may result. Do not operate the radio near unshielded electrical blasting caps.

Under certain conditions, radios can interfere with blasting operations and may cause an explosion. Turn your radio OFF to prevent accidental transmission when in a blasting area or in areas posted: "Turn off two-way radio." Construction crews often use remote control RF devices to set off explosives.

**WARNING!** Read this information before using the radio. In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters.

Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of the radio complies with the FCC guidelines and these international standards.

Never allow children to operate the radio without adult supervision and the knowledge of the following guidelines.

## PACKAGE CONTENTS

- 2 F19 transceiver
- 2 1500mAh Li-ion rechargeable battery pack
- 1 User manual

Note: The number of the above materials may be depending on the number of packages.

## MAIN FEATURES

- FRS transceiver (No license required)
- •22 Modifiable FRS channels
- Channel spacing: 12.5 KHz
- Vocal tuning
- Battery low alert
- LED flashlight
- 260 Privacy Codes (50 CTCSS Codes & 210 DCS codes)
- Micro USB connector for charging
- Battery Life: up to 18 hours (under typical use conditions)

- Output power: max 2W
- Channel monitor
- Channel scan
- Battery save
- TOT (Time out timer)
- 2pin Kenwood accessory jack
- Li-Ion 1500mAh battery pack
- Up to 8 km range\*

Note: \*Range may vary depending on environmental and/or topographical conditions.

#### Programming software (optional)

Thanks to Pofung Programming software CPS-F11-FRS, it is possible to increase the performance of your radio or to reduce its functionality by disabling some of the default features (CTCSS, DCS, TOT, VOX...)

For further information, please consult the Programming software manual.

Any attempt to change frequencies or output power of the radio invalidates the approval.

- 2 Belt clip
- 2 USB cable
- 2 Wrist-strap

## **BATTERY RECHAGRE**

Your radios include a charging cradle and battery packs. Follow these instructions to recharge your radios.


Make sure to turn the radio OFF before placing the radio in the charging cradle.

- a. The USB plug of the charging stand can be connected to the USB port of the mobile phone adapter, mobile power supply, personal computer, and car cigarette lighter.
- b. Set the charging cradle on the desk or tabletop and place the radio in the charging cradle with the keypad facing forward.
- c. Make sure that the LED illuminates. Charge the battery pack for 6 hours and remove the radio from the charging cradle after charging.

Note:

- Use only the supplied battery and AC adapter or approved accessories from pofung.
- Charge time may vary depending on the battery life remaining.
- The battery must be installed for the unit to operate, even if the unit is also connected to external power.
- If battery power is low, you cannot operate the radio even using external power. Allow the battery to charge before using. If you try to transmit while power is low, the radio will automatically turn off.
- For fastest charging, turn off the radio before charging.

# RADIO OVER VIEW

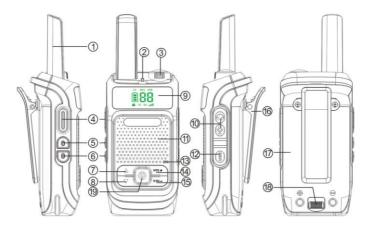

- 1. Antenna
- 2. Led indicator: RED: TX; GREEN: RX.
- 3. Flashlight
- 4. PTT key: push this key to transmit, release it to receive.
- 5. Monitor key: Press and hold to enter MONITOR mode.
- 6. Lamp key: Short press the flashlight to turn on or off. Long press to lock or unlock function keys.
- 7. CH+ key: Channel Up, Short press this key to select the desired channel upwardly.
- 8. CH- key: Channel Down, Press the key down to select the desired channel.

9. LED digital display

10. External Speaker/Microphone Jack- allows the connection with external devices such as headsets, microphones.

11. Speaker

- 12. Micro-USB Charging Port: DC5V USB input
- 13. Built-in microphone
- 14. Volume Up
- 15. Volume Down
- 16. Belt clip
- 17. Battery pack
- 18. Battery release latch
- 19. Power key: Turn the radio on and off

## **OPERATIONS**

#### Turning the Radio On and Adjusting the Volume

Press and hold [Power 0] to turn the radio on. Increase the speaker volume by pressing [VOL +]. To decrease the volume, press [VOL -].

Press and hold [Power 0] again to turn the radio off.

#### **Choosing a Channel**

Your radio has 22 channels and 260 Privacy codes you can use to talk to others. In order to speak to someone, each of you must be set to the same channel and Privacy code.

With the radio in "Normal" operating mode, press the [CH+]/[CH-] keys to increase or decrease the channel number displayed.

#### Transmission

To communicate, all radios in your group must be set to the same channel. Briefly press [Monitor] key to enable the Monitor feature in order to make sure that the frequency is not busy, and then press the [PTT] key. Release the [PTT] key to receive. Only one user at a time can talk during radio communications. Therefore, it is important not to transmit when you are receiving a communication and use the transmission mode sparingly to allow other users to talk. Transmission consumes a significant amount of energy and should therefore be used sparingly to prolong the battery life. If you are unable to contact a station that you have no problems in receiving, the station may be using CTCSS tones or DCS codes.

#### Monitor

The Monitor feature is for excluding (opening) the Squelch, in order to listen to signals that are too weak to keep the Squelch permanently opened. Hold down the [Monitor] key to enable such function.

#### Scan

This function can only be activated by programming software. To enable the scan function, all 22 channels must be programmed. When the radio is turned on, press and hold the **[CH+]** and **[CH-**]keys at the same time, and scanning will start automatically. Whenever any signal is detected, the scan stops on a busy channel. If you press and hold PTT, you will send on the latest busy channel. Press any function key to exit the scanning state.

#### Flashlight

With F19 turned on, shortly press the [LAMP] key to turn on/off the flashlight at the top side of the radio.

### VOX

The VOX feature enables hands free conversations without using PTT: just speak in the direction of the microphone and the communication will be automatically activated. The VOX sensitivity can be adjusted in 5 different levels (1...5) through the programming software:

Level 2 is set by default and has the lowest VOX sensitivity, 5 is the lowest one.

With the programming software you can enable/disable the VOX feature and select the sensitivity levels.

#### CPS programming path: Edit > VOX > VOX Level

#### Squelch

The Squelch function suppresses noises on free channels and allows receiving even weak signals. F19 has 10 different Squelch levels that can be set by programming software: 0 means that the Squelch is turned off; from level 1 to level 9 you will have different levels of noise reduction. The higher is the level, the louder will be the Squelch. By default, the Squelch level of F19 is set on level 4. Make sure you do not set an excessively high squelch level because in this case you may not be able to receive weaker signals. On the other hand an excessively low Squelch value could enable the Squelch even when no signals are present. Squelch must always be adjusted when no signals are present. The Time Out timer is settable from 30 sec to 270 sec. only through the programming software. This feature is disabled by default.

#### **CTCSS/DCS** tones

CTCSS and DCS tones are similar to access codes and enable the radio to communicate only with the users that are tuned on the same channel and have set the same code. For each channel, you can set up to 50 CTCSS tones and 210 DCS codes. The CTCSS/DCS tones are a sort of "access codes" and enable the radio to communicate only with the other users set on the same frequency and on the same CTCSS/DCS tone. Undesired signals coming from other stations set on the same frequency but with different CTCSS/DCS tones won't be received.

## **ON-LINE SERVICE AND SUPPORT**

The Pofung website provides additional information about obtaining service or support for the Pofung line of two-way radios and accessories. Visit: www.pofungshop.com Mail: service@pofungshop.com

CH.No	CH.Freq.(MHz)	CH.No	CH.Freq. (MHz)
1	462.5625	12	467.6625
2	462.5875	13	467.6875
3	462.6125	14	467.7125
4	462.6375	15	462.5500
5	462.6625	16	462.5750
6	462.6875	17	462.6000
7	462.7125	18	462.6250
8	467.5625	19	462.6500
9	467.5875	20	462.6750
10	467.6125	21	462.7000
11	467.6375	22	462.7250

### Appendix A. – FRS Channels and Frequencies

## Appendix B. – Technical Specifications

General Part	
Frequency Range	FRS
Working temperature	-10°C to +40°C
Operation Voltage	DC 3.7 V ±10%
Operation Mode	Simplex
Dimensions	154mm×56mm×32mm (with Antenna)
Weight	139g (Battery pack included)
Antenna Impedance	50ohm
Duty cycle	5/5/90%
Transmitter Part	
RF Output Power	2W (FRS)
FM Modulation	11K0F3E@12.5KHz
Adjacent Channel Power	60dB @ 12.5KHz
Transmission current	≤1000mA
Receiver Part	
Receive Sensitivity	0.25µV (12dB SINAD)
Adjacent Channel Selectivity	≥55dB@12.5KHz
Inter Modulation and Rejection	≥55dB@12.5KHz
Conducted Spurious Emission	≤-57dB@12.5KHz
Rated Audio Power Output	1W @8 ohms
Rated Audio Distortion	≤5%
NOTE All successive and successive and	and the standard state is standard and a state of the latter of

NOTE: All specifications may be modified without prior notice or liability.

## Appendix C. – Trouble shooting guide

Phenomena	Analysis	Solution
You cannot turn on the radio.	The battery may be installed improperly.	Remove and reattach the battery.
	The battery power may run out.	Recharge or replace the battery.
	The battery may suffer from poor contact caused	Clean the battery contacts or replace the
	by dirty or damaged battery contacts.	battery.
During receiving, the voice is weak or intermittent.	The battery voltage maybe low.	Recharge or replace the battery.
	The volume level may be low.	Increase the volume.
	The antenna maybe loose or maybe installed	Turnoff the radio, and then remove and
	incorrectly.	reattach the antenna.
	The speaker maybe blocked.	Clean the surface of the speaker.
You cannot communicate with other group members.	The frequency or signaling type maybe	Verify that your TX/RX frequency and
	inconsistent with that of other members.	signaling type are correct.
other group members.	You may be too far away from other members.	Move towards other members.
You hear unknown voices or noise.	You may be interrupted by radios using the same	Change the frequency, or adjust the
	frequency.	squelch level.
	The radio in analog mode maybe set with no	Request your dealer to set signaling for
	signaling.	the current channel to avoid interference
You are unable to hear anyone because of too much noise and hiss.	You may be too far away from other members.	Move towards other members.
	You may be in an unfavorable position. For	Move to an open and flat area, restart the
	example, your communication may be blocked by	radio, and try again.
	high buildings or blocked in an underground area.	
	It may be the result of external disturbance (such	Stay away from equipment that may cause
	as electromagnetic interference).	interference.
The radio keeps transmitting.	VOX may be turned on or the headset is not	Turn off the VOX function. Check that the
The radio keeps transmitting.	installed in place	headphones are in place.

NOTE: If the above solutions cannot fix your problems, or you may have some other queries, please contact your dealer

for more technical support.

#### Disclaimer

The accuracy and completeness of the contents are sought in the process of compilation, but we do not bear any responsibility for the possible errors or omissions. With the continuous development of technology, we reserve the right to change the design and specification of the product without notice. No copy, modification, translation and dissemination of this handbook may be made in any form without the prior written authorization of our department.



#### PO FUNG ELECTRONIC (HK) INTERNATIOANL GROUP COMPANY

Address: 3/F FULOK BLDG 131-133 WING LOK ST SHEUNG WAN, Hong Kong

Telephone: +86-595-86752889

Fax: +86-595-86754889

E-mail: sales@pofungshop.com

Http://www.pofungshop.com