



UV-6R_EN.V10



DUAL-BAND TRANSCEIVER USER'S MANUAL

Model : UV-6R , UV-6RA

CONTENT

1. SAFETY INFORMATION:.....	01	12. ADVANCED OPERATION:.....	18
2. FEATURES AND FUNCTIONS:.....	02	12.1. SET MENU DESCRIPTION:.....	18
3. UNPACKING AND CHECKING EQUIPMENTS:..	03	12.2. SHORTCUT MENU OPERATION:.....	20
4. OPTIONAL ACCESSORIES:.....	04	12.3. "SQL"(SQUELCH):.....	21
5. NSTALLATION OF ACCESSORIES:.....	04	12.4. FUNCTION "VOX" (VOICE OPERATED TRANSMISSION):.....	21
5.1. NSTALLING THE ANTENNA:.....	04	12.5. SELECT WIDEBAND OR NARROW BAND"W/N":	21
5.2. INSTALLING THE BELT CLIP:.....	04	12.6. TDR (DUAL WATCH/DUAL RECEPTION):.....	21
5.3. MICRO-HEADSET INSTALLATION OF EXTERNAL:.....	05	12.7. TOT(TRANSMISSION TIMER):.....	21
5.4. BATTERY INSTALLATION:.....	05	12.8. CTCSS/DCS:	21
6. BATTERY CHARGING:.....	06	12.9. ANI	22
7. BATTERY INFORMATION:.....	07	12.10. DTMFST (DTMF TONE OF TRANSMITTING CODE):.....	22
7.1. NITIAL USE:.....	07	12.11. SC-REV(SCAN RESUME METHOD):.....	22
7.2. BATTERY TIPS:.....	07	12.12.PTT-D(PTT OR RELEASE PTT TO TRANSMIT THE SIGNAL CODE):..	23
7.3. PROLONG BATTERY LIFE:.....	07	12.13. BCL(BUSY CHANNEL LOCKOUT):.....	23
7.4. BATTERY STORAGE:.....	08	12.14. SFT-D(DIRECTION OF FREQUENCY SHIFT):.....	23
8. RADIO OVERVIEW:.....	09	12.15. OFFSET(FREQUENCY SHIFT):	23
8.1.-RADIO OVERVIEW:.....	09	12.16. STE (TAIL TONE ELIMINATION):.....	24
8.2. COMMAND/KEY DEFINITION:.....	10	13. RESET(Restore To Default Setting).....	24
9. 'LCD' DISPLAY:.....	12	14. COPYING	24
10. 1750 Hz TONE FOR ACCESS TO REPEATERS:.....	13	15. CTCSS TABLE:.....	25
11. BASIC OPERATION:.....	13	16. DCS TABLE:.....	25
11.1. RADIO ON-OFF/VOLUME CONTROL	13	17. TECHNICAL SPECIFICATION:.....	27
11.2. Transmit and Receive.....	13	17.1 RECEIVER	27
11.3. FUNCTION "VOX" (VOICE OPERATED TRANSMISSION):..	13	17.2 GENERAL	28
11.4. AUTOLK (keypad Locked Automatically).....	14	18. TROUBLESHOOTING:.....	29
11.5. VFO/Channel mode.....	14	19. WARRANTY: (Better buy the radios from local dealer)......	31
11.6. SELECTING A FREQUENCY OR CHANNEL.....	15		
11.7. TDR (Dual Watch/ Dual Reception).....	15		
11.8. DEL-CH (Delete Channel).....	15		
11.9. MEM-CH (Stored In Memory Channel).....	16		

1. SAFETY INFORMATION:

The following safety precautions shall always be observed during operation, service and repair of this equipment.

- This equipment shall be serviced by qualified technicians only.
- Do not modify the radio for any reason.
- Do not use any portable radio that has a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn can result.
- Turn off your radio prior to entering any area with explosive and flammable materials.
- Do not charge your battery in a location with explosive and flammable materials.
- To avoid electromagnetic interference and/or compatibility conflicts, turn off your radio in any area where posted notices instruct you to do so.
- Turn off your radio before boarding an aircraft. Any use of a radio must be in accordance with airline regulations or crew instructions.
- Turn off your radio before entering a blasting area.
- For vehicles with an air bag, do not place a radio in the area over an air bag or in the air bag deployment area.
- Do not expose the radio to direct sunlight over a long time, nor place it close to heating source.
- When transmitting with a portable radio, hold the radio in a vertical position with the microphone 3 to 4 centimeters away from your lips. Keep antenna at least 2.5 centimeters away from your body when transmitting.



WARNING:


If you wear a radio on your body, ensure the radio and its antenna are at least 2.5 centimeters away from your body when transmitting.

2. FEATURES AND FUNCTIONS:

- Dual-band handheld transceiver with display function menu on the display "LCD"
- Incorporates 105 codes "DCS" and 50 privacy codes "CTCSS" programmable
- Function "VOX" (voice operated transmission)
- Alarm function
- Up to 128 memory channels
- Broadband (Wide) / Narrowband (Narrow), selectable
- High power / low (5 W/1 W) selectable
- Display illumination and programmable keyboard
- Function "beep" on the keyboard
- Dual Watch/dual reception
- Selectable Frequency Step 2.5/5/6.25/10/12.5/25 kHz
- Function "OFFSET" (frequency offset for repeater access)
- Battery saving function "SAVE"
- Timer transmission "TOT" programmable
- Selecting the Scan Mode
- Function Busy Channel Lock "BCL"
- Built-in RX CTCSS/DCS scan
- Built-in LED flashlight
- Programmable by PC
- Level Threshold "Squelch" adjustable from 0 to 9
- Cross band reception/transmission
- Tone end of transmission
- Built-in key lock


3. UNPACKING AND CHECKING EQUIPMENTS:

Carefully unpack the transceiver. We recommend that you identify the items listed in the following before discarding the packing material. If any items are missing or have been damaged during shipment, please contact your dealers immediately.

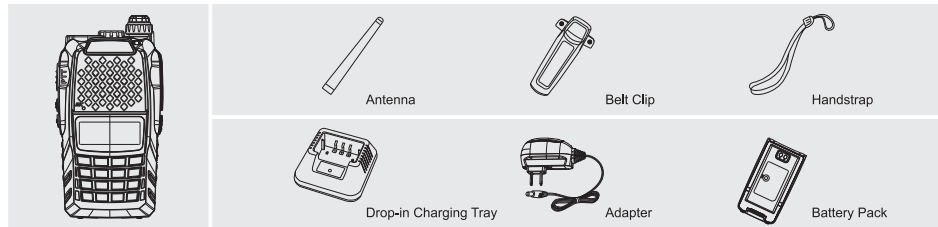

Note:
Items included in the package, may differ from those listed in the table above depending on the country of purchase. For more information, consult your dealer or vendor.

 4. OPTIONAL ACCESSORIES:




Note:
Consult the dealer or retailer for information about options available.

5. INSTALLATION OF ACCESSORIES:

5.1. INSTALLING THE ANTENNA:

Install the antenna as shown in the figure below and turn it clockwise until it stops.


- Note:**
- When installing the antenna, don't rotate it by its top, holding it by its base and turn.
 - If you use an external antenna, make sure the 'SWR' is about 1.5:1 or less, to avoid damage to the transceiver's final transistors.
 - Do not hold the antenna with your hand or wrap the outside of it to avoid bad operation of the transceiver.
 - Never transmit without an antenna.

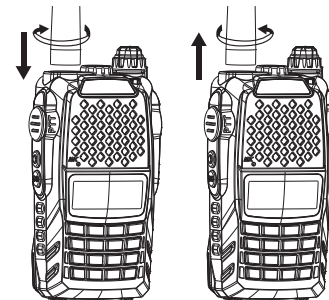

5.2. INSTALLING THE BELT CLIP:


If necessary, install the belt clip at the rear of the battery compartment cover as shown in the figure below.

- Note:**
- Do not use any kind of glue to fix the screw on the belt clip. The solvents Glue may damage the battery casing.

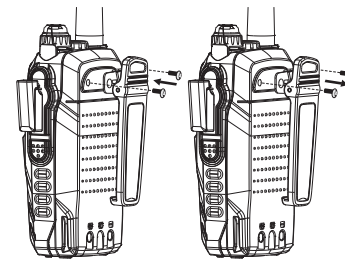

5.3. MICRO-HEADSET INSTALLATION OF EXTERNAL:

Plug the external micro-headset connector into the jack of 'SP. & MIC' of the transceiver as shown in the figure below.

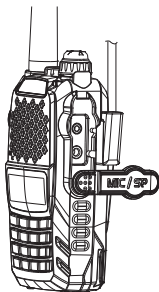


5.4. BATTERY INSTALLATION:

- When attaching the battery, make sure the battery is in parallel and in good contact with the aluminum chassis. The battery bottom is about 1 to 2 centimeters below the bottom of the radio's body.
- Align the battery with the guide rails on the aluminum chassis and slide it upwards until a 'click' is heard.
- The battery latch at the bottom locks the battery.




 
- Turn off the radio before removing the battery.
- Slide the battery latch, at the bottom of the radio's body, in the direction indicated by the arrow.
- Slide down the battery for about 1 to 2 centimeters, and then remove the battery from the radio's body.



6. BATTERY CHARGING:

Use only the charger specified by the manufacturer. The charger's LED indicates the charging progress.

CHARGING STATUS	LED INDICATION
Standby (no-load)	Red LED flashes, while Green LED glows
Charging	Red LED solidly glows
Fully Charged	Green LED solidly glows
Error	Red LED flashes, while Green LED glows

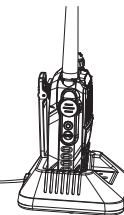 

Please follow these steps:

- Plug the power cord into the adapter.
- Plug the AC connector of the adapter into the AC outlet socket.
- Plug the DC connector of the adapter into the DC socket on the back of the charger.
- Place the radio with the battery attached, or the battery alone, in the charger.
- Make sure the battery is in good contact with the charging terminals. The charging process initiates when the red LED lights.
- The green LED lights about 4 hours later indicating the battery is fully charged. Then remove the radio with the battery attached or the battery alone from the charger.

7. BATTERY INFORMATION:

7.1. INITIAL USE:

New batteries are shipped uncharged fully from the factory. Charge a new battery for 5 hours before initial use. The maximum battery capacity and performance is achieved after three full charge/discharge cycles. If you notice the battery power runs low, please recharge the battery.

WARNING:



- To reduce the risk of injury, charge only the battery specified by the manufacturer. Other batteries may burst, causing bodily injury and property damage.
- To avoid risk of personal injury, do not dispose of batteries in a fire!
- Dispose of batteries according to local regulations (e.g. recycling). Do not dispose as household waste.
- Never attempt to disassemble the battery.

7.2. BATTERY TIPS:

- When charging your battery, keep it at a temperature among 5°C- 40°C. Temperature out of the limit may cause battery leakage or damage.
- When charging a battery attached to a radio, turn the radio off to ensure a full charge.
- Do not cut off the power supply or remove the battery when charging a battery.
- Never charge a battery that is wet. Please dry it with a soft cloth prior to charge.
- The battery will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal performance, it is time to buy a new battery.

7.3. PROLONG BATTERY LIFE:

- Battery performance will be greatly decreased at a temperature below 0°C. A spare battery is necessary

in cold weather. The cold battery unable to work in this situation may work under room temperature, so keep it for later use.

- The dust on the battery contact may cause the battery cannot work or charge. Please use a clean dry cloth to wipe it before attaching the battery to the radio.

7.4. BATTERY STORAGE:

- Fully charge a battery before you store it for a long time, to avoid battery damage due to over-discharge.
- Recharge a battery after several months' storage(Li-Ion batteries: 6 months), to avoid battery capacity reduction due to over-discharge.
- Store your battery in a cool and dry place under room temperature, to reduce self-discharge.