 


SOUNDBAR SPEAKER

Model - A12C

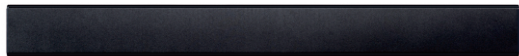

USER MANUAL

Please read this manual carefully before using, and keep it for future reference.

Content:

| | |
|--|----|
| Safety precautions | 2 |
| Introduction | 4 |
| Package Contents | 4 |
| Features | 4 |
| Specifications | 5 |
| Overview of soundbar and remote controller | 6 |
| Connections | 7 |
| Warnings | 10 |
| Trouble shooting | 11 |
| Disclaimer of warranty | 12 |

Safety precautions

- If the cord is damaged, have it repaired by the manufacturer, its service or a similarly qualified person in order to avoid any hazard.
- The cord should always be readily accessible.
- The device is not intended for use by persons (including children) with reduced physical, sensory or mental capacity. Persons who have not read the manual, unless they have received explanations by a person responsible for their safety and supervision should not use this unit.
- Children should be monitored to ensure that they do not play with the device.
- The device should always be readily accessible.
- The device should not be exposed to dripping or splashing water.
- No objects filled with liquids such as vases shall be placed on the device.
- Always leave a minimum distance of 10 cm around the unit to ensure sufficient ventilation.
- Open flame sources, such as candles, should not be placed on top of the device.
- The device is intended for use only in a temperate climate.
- At full volume, prolonged listening to the portable audio device may damage the user's hearing and cause hearing troubles (temporary or permanent deafness, hearing drone, tinnitus, hyperacusis).
So we recommend not to listen to the portable audio device at high audio volume and no more than one hour per day at medium audio volume.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced or not replaced by the same type or equivalent.
- The battery should not be exposed to excessive heat such as sunshine, fire or similar.
- Different types of batteries, new and used batteries should not be mixed.
- The battery must be installed according to the polarity.
- If the battery is worn, it must be removed from the product.
- The battery must be disposed of safely. Always use the collection bins provided (check with your dealer) to protect the environment.
- The battery can't be replaced by the user, but only by the maker of this product, the after sales department or a qualified person.

SWITCH OFF IN RESTRICTED AREAS

Switch the mobile device off where the use of mobile devices is not allowed or where there is a risk of causing interference or danger, for example on board an aircraft, near medical equipment, fuel, chemicals or blasting sites.

ROAD SAFETY COMES FIRST

Check the current laws and regulations regarding the use of mobile devices in the areas where you drive.

- Do not handle the mobile device when driving.
- Concentrate fully on the driving
- Use a hands-free kit whenever possible
- Leave the road and park up before making or receiving a call, if the driving conditions allow.
- Radio signals could affect some of the car's electronic systems such as the audio stereo and alarm systems.
- If the car is equipped with an airbag, do not hinder its deployment with fixed or wireless equipment. This could result in serious injury due to inadequate performance.

INTERFERENCE

All wireless devices are susceptible to interference which may affect their performance.

AUTHORIZED PERSONNEL

Only qualified people are authorized to install or repair this product

ACCESSORIES

Only use batteries, chargers and other accessories which are compatible with this equipment. Do not connect incompatible products.

KEEP THE EQUIPMENT DRY

This equipment is not water proof. Keep it dry.

CHILDREN

Keep your mobile device in a safe place, out of the reach of young children. The mobile device contains small parts that may present a choking hazard

Introduction

Thanks for choosing WOTMIC products. Please read this user's guide before using your new soundbar

Package Contents

| | |
|-------------------|---------------------------|
| Soundbar | DC Adapter |
| Remote Controller | Remote controller battery |
| User's Guide | 3.5mm to RCA cable |
| 3.5mm aux cable | Warranty card |

Features

1. Bluetooth Ultra-thin Soundbar (wall-mountable);
2. Deep bass speaker, high, middle and low three rate technology;
3. Bluetooth/USB/Optical in/3.5mm aux in;
4. Certificate approval;
5. Full function remote control operation;
6. Ideal partner for LED/LCD TVs;
7. Left/Right separately cavity, 2.0 stereo sound;

Specifications

Rated Voltage: DC 12V--- 2A

Sound Power: 30W RMS

Bluetooth version: 2.0

Distance bluetooth stays connected: Less than 10m

Radio frequency: 2.4GHz

Dimensions: 970*65*100mm

Weight: 1.7kg

Frequency Response: 80Hz-16KHz

Speaker Units: 3"Full Range Speaker x 2, 3"bass diaphragm x 2,

Interface: Optical input/3.5mm aux in/USB/Bluetooth

 
 
Distortion Degree: $\leq 1\%$ (1KHz 1W 4 Ω)

S/N Ratio: ≥ 80 db

Isolation Level: ≥ 70 db

Input Sensitivity: 650mV, Max:2000mV

Overview of soundbar and remote controller Buttons:

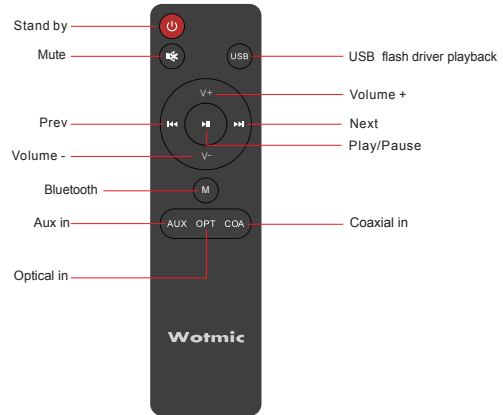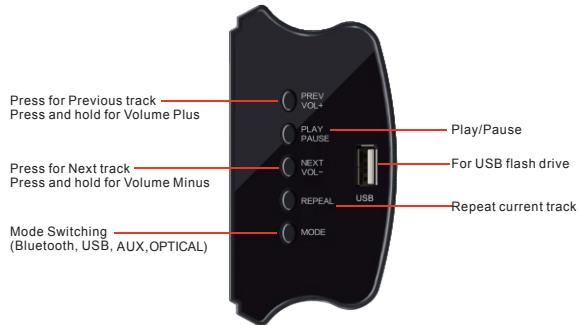

Connections:

Important tips for system connection

When you want to connect soundbar to your TV or other devices, Please choose output port of your devices. Please check the connection carefully before you use our products.


TV Connection

- Three options to connect TV and soundbar, please check your TV audio out jacks available to match soundbar audio jacks

Option 1: Use optical cable to connect TV and soundbar

Option 2: Use 3.5mm to 3.5mm audio cable to connect TV and soundbar

 
Option 3: Use RCA to 3.5mm audio cable to connect TV and soundbar

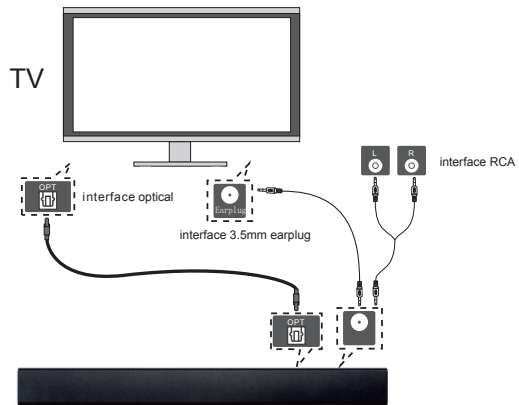

-8-

Subwoofer connection

 
- Please note that our soundbar only support power supplied subwoofer.
Use audio cable to connect soundbar with your subwoofer

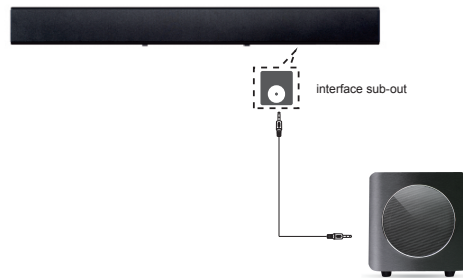

-9-

Bluetooth Connection

 - Press “ M ” button to enter Bluetooth Mode. Then turn on your cellphone’s Bluetooth function, search for “HIFI Speaker” and connect it.

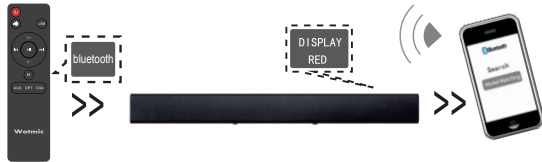

Warnings

- To reduce the risk of electric shock, do not remove cover (or back).
- Do not expose the soundbar to dripping or splashing liquids. Do not place objects filled with liquids (such as vases) on the soundbar.
- Using the soundbar near fluorescent lighting may cause interference with the remote. If the soundbar is behaving erratically, move away from any fluorescent lighting.
- The power source must supply DC 12V --- 2A. Using a non-original adapter could damage the soundbar or adapter.

Trouble Shooting

| PROBLEM | SOLUTION |
|------------------|--|
| No sound | Make sure the AC adapter is plugged into a working outlet and firmly connected to the soundbar. Check the connection of your device to the soundbar. |
| Distorted sound | Check your source device to see if it is causing the distortion. Set the device and soundbar volume to a low level. |
| Unbalanced sound | If the volume remains low even when the soundbar’s volume is turned all the way up, check the source device to make sure it is connected via a variable output. Make sure the output is not turned down too low. |

DISCLAIMER OF WARRANTY

DISCLAIMER OF WARRANTY RELATED TO THE ORIGIN OF DAMAGES

The guarantee does not apply in case of accidental physical damage, it does not cover such damage and failures that resulted:

- improper installation (of a bad installation) or a misuse or poor maintenance of the product.
- Improper use of the material or not complying with the instructions in the user manual.
- lightning, flood, fire, power surge, shock, poor ventilation, a fall, discoloration due to the action of light, burning, humidity, excessive heating without humidifier, or irregular ground or insects.
- Repairs made and / or working on the hardware and / or opening of it by an unauthorized person by the manufacturer.
- Maintenance, repair or replacement of parts due to normal usury or failure to maintain.
- Modification of the construction and original features of the guaranteed product.
- Corrosion, oxidation, a bad connection or an external power supply problem.

EXCLUSION OF WARRANTIES RELATING TO THE NATURE OF DAMAGES (INDIRECTS DAMAGES)

The guarantee covers only the right to repair or replace the guaranteed product. Consequently, the indirect damage resulting from the failure or damage not covered by warranty, including:

- Commissioning costs, adjusting, cleaning;
- Damage of any kind resulting from the unavailability of the product guaranteed during the period between deterioration and failure and repair or replacement of the product guaranteed.

OTHER EXCLUSIONS

- Damage and faults under specific exclusions in the warranty manufacturer guaranteed product, as mentioned in the product instructions for use;
- The aesthetic damage;
- The products guarantee that the customer is not able to return or those who returned without their accessories.
- Warranty : Three months warranty for non-artificial damage.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.