

MUSIC STEREO
Bluetooth Stereo



SOLEMATE MINI


THE MANUAL

SHENZHEN EUROBIRD TECHNOLOGY CO.,LTD

1 HOW TO CONNECT

Connect to a Bluetooth Device

1. Turn off the earphones.
2. Press and hold the power button for 4 seconds until the Bluetooth light indicator flashes between blue and red alternatively. You will also hear a voice message for pairing mode through the earphones.
3. Select "Eurobird HM2040" from the list of Bluetooth devices in your mobile phone.


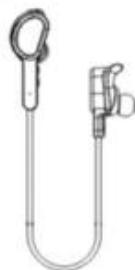


1

2 HOW TO WEAR




2

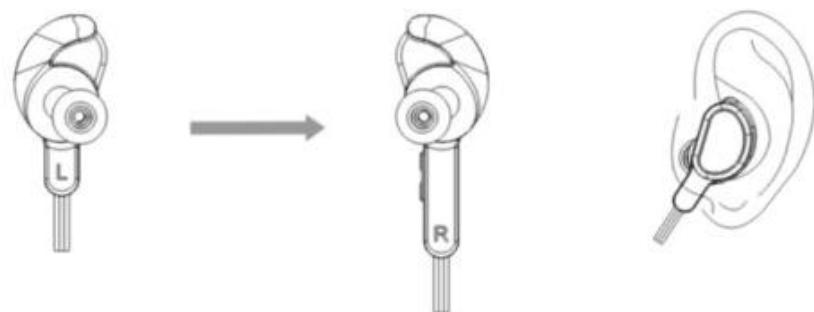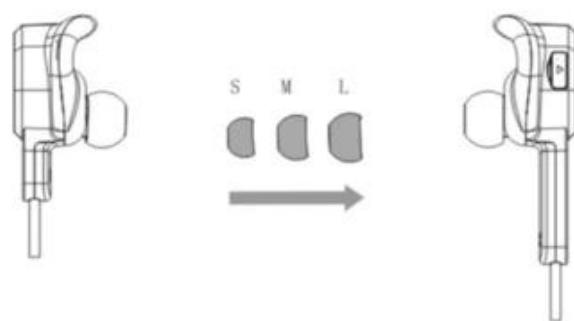

3

3 HOW TO USE

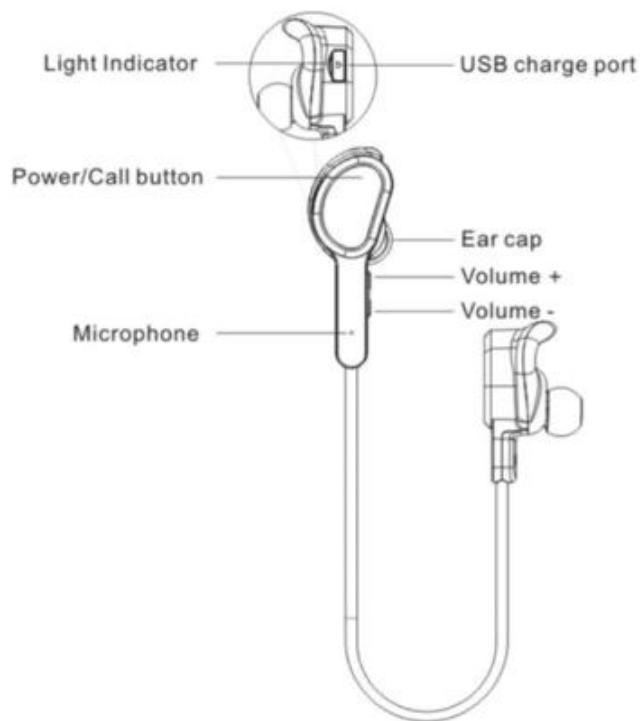

4

Button functions


Button	Function
 Power/Call button	<ul style="list-style-type: none">Press and hold the call button for 3 seconds to turn the earphones on or off.Press the call button to answer or end a call.When there is an incoming call, press and hold the call button until a "beep" sound to reject the call.When in standby, press and hold the call button for 1 – 2 seconds to enable a voice call. Press twice in succession to redial the last call.During music playback, short press to pause or play the music.During no connection after turning on or during pairing mode, press twice in succession to switch between different voice languages.
 volume- volume+	<ul style="list-style-type: none">Short press the buttons to adjust the volume.During music playback, long press to go to the previous or the next song.When in standby, press both of the + and - buttons for 3 – 5 seconds to enter into pairing mode.

5

Charging of earphones

The earphones are equipped with a built-in rechargeable battery which is not removable. When using the device for the first time, ensure that the battery is fully charged.

Connect a charging cable to the charge port of the earphones, and plug the cable into a standard USB 5V outlet. During charging, the light indicator will turn red. When the device is fully charged, the indicator will change from red to blue. Then unplug the travel charging cable from the USB power outlet and the earphones.

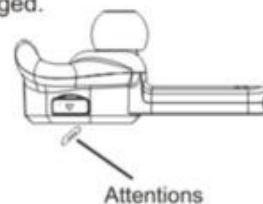

- Use only charging cables approved by Eurobird. Unapproved or non-standard USB 5V outlet may result in damaging the earphones, or explosion under extreme conditions, and will void the product warranty.
- Repeated charging and discharging of the earphones will decrease the battery performance over time. This is normal for any rechargeable battery.
- Do not make or receive calls during charging. To answer a call, always unplug the charging cable first.
- To conserve energy, if not using, unplug the travel charging cable from the earphones. Because the travel charger does not have a power button, please unplug the travel charging cable from the socket before disconnecting from the power source. During usage, the travel charging cable should be kept close to the socket.

When the earphones battery level is low

The headphones will repeat a "battery level low, please recharge" voice message, and at the same time, the light indicator will blink red. If the headphones are out of power during a call, the call is automatically transferred back to the phone.

Taking pictures with earphones

Taking pictures wirelessly

When the Bluetooth earphones are correctly connected to a mobile phone, turn on the phone camera, adjust the lens, and simply press the volume + button on the earphones twice quickly (double click within 0.8 seconds), to manually take a picture on your phone.

Attention

Due to different camera apps may define different shutter buttons, you might need to manually change the app setting to use volume button as its shutter. Some camera models do not come with a camera app pre-installed that support volume button as its shutter, to use the wireless control, install "Camera 360" app.

After turning on, during pairing mode or no connection, long press the call button and volume – button at the same time until a beep, restart the earphones and connect, to switch the earphones to working mode.

1. Use with Bluetooth keyboard functionality (keyboard icon), to take pictures wirelessly. If the input method cannot be used correctly on the phone, please go to settings -> Bluetooth -> list of paired Bluetooth devices, and uncheck input device service. The input will then function normally. When wirelessly taking pictures is needed again, simply re-check the option.

7

2. Use without Bluetooth keyboard functionality (earphone icon), to have better compatibility with phones with outdated operating systems.

Compatibility

Automatically identifying iOS/Android mobile operating systems with free app installations; compatible with mainstream iPhone/Android models. Some older operating systems may not be supported, and please update the operating system of your phone to the newest version. Android 4.1.1 or above, iOS 6.0 or above are recommended. Because android is open-source, some models might not be able to pair with the earphones. It is not a quality issue of this device!

Nota: for Bluetooth earphones with camera control only.



Factory add :The 6th. Floor NO. 113 lixin road,
Danzhutou Community,nanwan street ,
longgang district,shenzhen guangdong
province.

Website :www.szeurobird.com
Domestic free serive hotline :4006 638 861

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.