

30 	35	40 	45 	50 	55 I	60 		6!	5 70 	-	/5
							DATE	NO	CONTENT	SIGN	
						AM					~ 5 ± 0.05 ± 0.10 ± 0.25
											~ 15 ± 0.07 ± 0.20 ± 0.35 ~ 50 ± 0.10 ± 0.30 ± 0.50
	Table of Contents							3			$\sim 150 \pm 0.18 \pm 0.55 \pm 0.90$
	Names of parts 6										
	Power on/off 7										
22	Charging the battery 8										
a of liquid	Cover Open method 9										
1	Inserting printing paper 9										
amble, repair	 Description of LED Status 10 Indicators 										
	Components check 11										
	Zink Smart Sheet 12										
	 Application Connection 13 and Printing APP Connection Android Connection ios Connection Printing (both for Android & iOS) Setting (both for Android & iOS) Product specifications 18 Items to check before 19 reporting a malfunction 										
	 Description of LED Status Indicators 										
	Charge indicator LED Charging Operating Current Details										
	status status status indicator indicator										

Off Turn on the power to print. Wait for print Standby/ On value of print command. Turn off automatically after On On the set time. Charging in The battery is progress being charged. Charging in The battery is fully completed charged. Operating/ Power off, image transmission, image Flashing processing, printing cooling standby No paper, paper jam, Error/ Flashing cancel operation, cover open, low battery, image not supported, update failure, etc.

<Printing (both for Android & iOS)>

1. Execute the HP sprocket App.

2. Select the designed photo on [camera / instargram / facebook / flickr / camera roll] from Main screen. 3. Select the Print button at the bottom line.



Vhite LED flashes nd printed paper loes not come out.	This device requires the prope temperature of (15~32°C) to facilitate smooth printing operation. Thus, a greater warm-up time is required in				
Printed paper omes out too late.	temperatures that are lower than ideal, and cooling times are greater when the temperatu is higher than ideal. Please wai a moment to reach the proper temperature.				
he printed image uality differs reatly from the	The image quality is somewha degraded when editing the ima using Pomini App's Edit menu				
riginal image uality.	Print it again after printing out if Smart Sheet 2 to 3 times. The Smart Sheet within the sam pack with printing paper shoul be used.				
	Check to see if the image has the proper resolution (1280x2448) chigher.				
	The printed image quality cannot be guaranteed in case you use printing paper of other compan Use the original printing paper.				
he above methods o not resolve the roblems.	Turn on the power after pressin the Reset Hole with a pointed object.				

6	5	

									DINT		
								COLOF		CMYK	
								PROCE	SS	Offset Printi	ng
							L	MATER	IAL		
NO	CODE		M	MATERIAL		TREATMENT		Q'TY	MODEL		REMARK
DRAWN	DESIGN	CHECK	APPRO	DATE	2016.08.08		N	ΔMF	MANUAL USER (Japan)		
				TOL	<u>+</u>						
				SCALE		SIZE	אים		GK07X0000100		
				UNIT	m/m	AT	DWG				

DS Global. co., ltd.