MVOICE 1000-B USB/Bluetooth Conference Speakerphone

Welcome!


MVOICE senes speakerphone is specially designed to fulfill the customers' increasing demand for web-conferencing calls, hands-free calls and teleconferencing.

MVOICE 1000-B USB/Bluetooth speakerphone can connect to computer with USB cable for audio and video conference based on internet application, or connect to mobile phone or table twia Bluetooth to realize wireless hands-free teleconference.

- Highlights and features

 Connect to PC via USB.

  Connect to mobile device via Bluetooth.
- Three built-in 360° coverage microphones.
 Hi-Fi sound quality.
 DSP noise and echo cancellation.
 Low power consumption.



Connecting to PC or laptop
Plug and play, simply connect the MVOICE 1000-B to

Connecting to PC or laptop
Plug and play, simply connect the NVOICE 1000-B to
the USB port on your PC with USB cable. Support
Windows XP, Windows Vista, Windows/JR/10 etc.
Attention: NVOICE 1000-B works excellently in
web-conferencing via Skype or other VoIP
software. The PC can automatically recognize the
MOVICE device, but you may need to choose
MEETEASY USB AUDIO in application software. For
example, you would need to choose MEETEASY
USB AUDIO in Skype audio setting section.

Connect to mobile device

Press and hold (2secs) the Bluetooth button
until the light flashes blue. Enable Bluetooth on your mobile device, and select "Meeteasy" from the list of available Bluetooth devices. The light turns solid blue when the connection is established.

Turn off the Bluetooth function
Press and hold (2secs) the Bluetooth button (3) and then the Bluetooth function will be closed.

Answer /Reject a call via Bluetooth
Short press & to answer the incoming call, long press & to reject the incoming call. When in a connected call or dialing, short press this button could hang up the call.

Attention: Press § too long (over 2 secs.) would turn off the Bluetooth function.

Mute the speaker
Press the button 🗣 can mute the speaker, the button
turns orange

Increase the volume
Press the button ◀+ can increase the volume level

Decrease the volume
Press the button 4- can decrease the volume level

ON/OFF button
Turn the button to ON side, the MVOICE 1000-B can
be powered by built-in battery.
ON/OFF state will not affect the USB charging and
USB connectivity to PC.
Attention: Please keep it OFF to save battery
power if the unit is not using.

Separate microphone selection
In normal room conditions, the reception distance can reach to 3 meters. Built-in three microphones provides with 360-degree coverage.

For group meeting, all three microphones open can make proper audio reception of all participants. In a conference room with weak sound absorption and strong acoustic reflection (particularly the glass rooms), and the talker is far from the microphones, the microphones will receive the echo from different directions, which is impossible to eliminate completely. The other side of the conference may hear unclear voice. Speak close to the microphone and use only one microphone pointed to the speaker can receive the voice more clearly. Press (8b) button could turn on one microphone and mute two others in turn. The operating microphone's indicator turns orange.

Charging the speakerphone
The speakerphone is equipped with a 700mAh battery, which would last for over 4 hours of talk

time. When the battery indicator turns orange and flashes, less than 10 minutes talk time remain. Plug the MVOICE 1000-B with USB cable to USB port on PC or charging adapter to charge the battery.

Charging safety
Charging starts once the MVOICE 1000-B is connected to PC.
Attention: If a charging adapter is used, please make sure it is qualified and the output voltage less than SV.

Specification:

System requirements	Windows XP/ Windows Vista Windows7/8/10 etc.
Connections	USB version 2.0
Max volume	83dB
Speaker frequency	30-16KHz
Microphone frequency	30-16KHz
Power voltage	5V DC
Power consumption	300mAh max.
Battery capacity	700mAh
Operating temperature	5°C-40°C
Storage temperature	-30°C-55°C
Accessories	6ft USB cable/ User Guide Protective bag/Gift box
Compliance	RoHS/FCC/CE

For more information, please visit www.meeteasy.com.hk

Meeteasy Technology Limited

Add: 6F Janda Building, Keyuan Road, Sdence and Technology Park, Narshan District, Shenzhen, \$1803, China

Tel: (+8) 755 8884 1683

Fax: (+8) 755 2690 5650

E-mail: info@meeteasy.com.hk



MVOICE 1000-B

USB/Bluetooth Conference Speakerphone User Guide



08

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.
- Note 2: 1. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- 2. The minimum separation generally be used is at least 20 cm.