

***Richmat* 豪江**


Product function manual

Smart home
HJSR04 Ble

一、Remote control button map



二. System configuration diagram

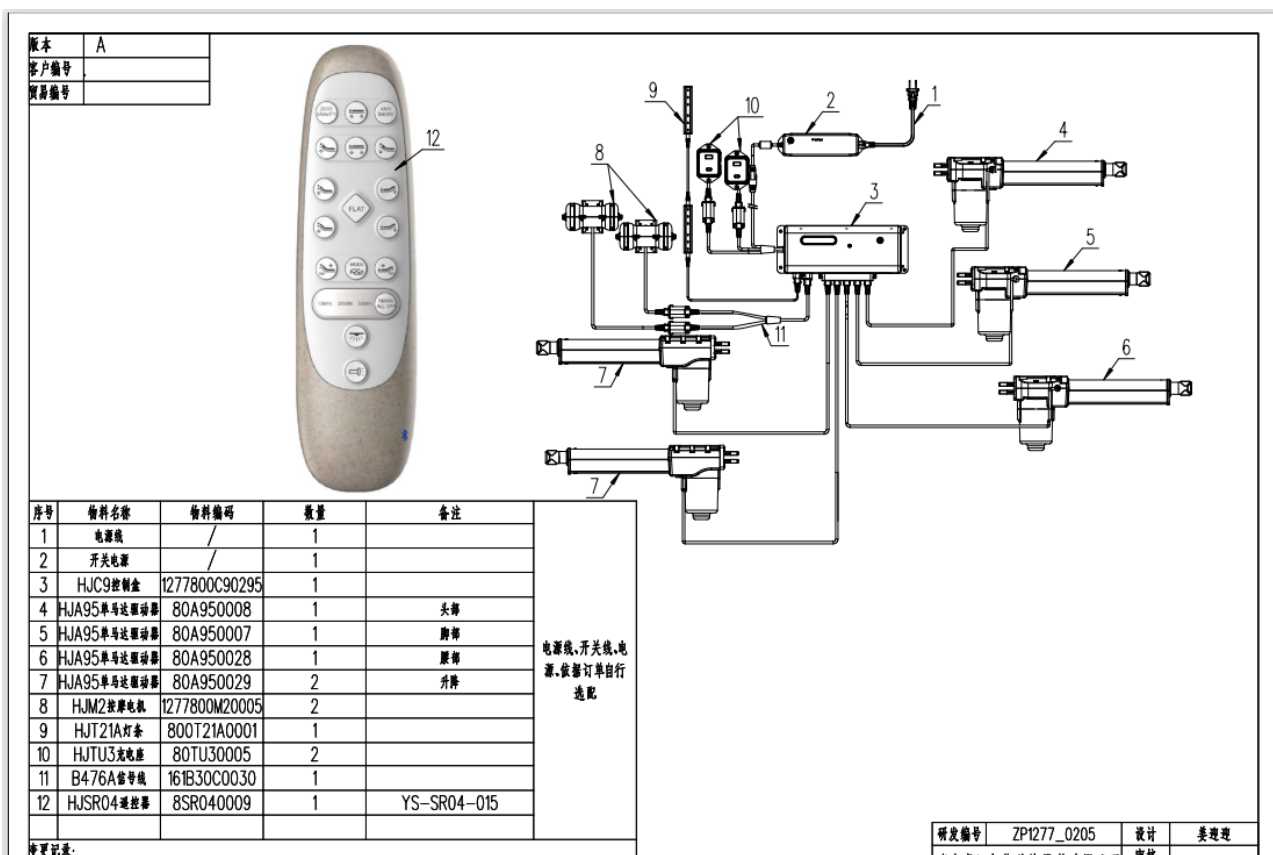

三、 Remote control function description

| Button label | Features |
|--------------|---|
| 1 | Short press and release to run to ZG position (with initial value). Multiplexing function: FLAT+ZG button, the backlight flashes, the buzzer sounds, and the current motor position is recorded to the ZG position |
| 2 | Overall rise (two lift motors for four or five channels, rising synchronously) |
| 3 | Short press and release to run to SNORE position Multiplexing function: FLAT+SNORE button, the backlight flashes, the buzzer sounds, and the current motor position is recorded to the SNORE position |
| 4 | Once the external drag rises, release it to stop. |
| 5 | Overall lowering (four or five channels of two lifting motors, synchronous lowering) |
| 6 | Once the drag is lowered, release it to stop. |
| 7 | Back up, release to stop. |
| 8 | Feet rise; release to stop. |
| 9 | Run to horizontal position, power on reset |
| 10 | Back down; release to stop. |
| 11 | Feet drop, release to stop. |
| 12 | Head massager enhancement: press the button, if the head massager is not activated, start the head massager and enter the "CONSTANT" mode; if the head massager motor is activated, increase the vibration intensity of the massager, 1→2→3 →Off, cycle switching. |
| 13 | Mode switch---CONSTANT-PULSE-WAVE Adjust the massage motor mode, after the massager has been turned on, press this button, the massage motor that has been working will enter the "PULSE" mode, after pressing the button again, the massage motor will enter the "WAVE" mode, press the button again, the massage motor will enter the "PULSE" mode. CONSTANT mode, cycle in turn |
| 14 | Foot massager enhancement: press the button, if the foot massager is not activated, activate the foot massager and enter the "CONSTANT" mode; if the foot massager motor is activated, increase the vibration intensity of the massager, 1→2→3 →Off, cycle switching. |
| 15 | Multiplexed function button: Before pressing the button, if the massager is in working state, then press the button to turn off all the massagers, and set the timing of the next massage motor working time to 10min, 20min, and 30min respectively. Timing time is displayed by two indicator lights. If the massager |

| | |
|---|---|
| | is not working, it will directly time the working time of the next massage motor. |
| 16 | Under bed light on/off |
| 17 | Press the button the flashlight is on, release the button the flashlight is off |
| Coding method: | |
| 1. When the remote control head rises + foot rises (7,8) + control box pairing key, the buzzer will sound, indicating that the pairing is successful. | |

Precautions:

To protect the reliability and safety of the motor and control box, do not switch the buttons frequently.

Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.