


Handset HJH163



Remark:

1. Bluetooth handset
2. Silicon buttons
3. 3x1.5V batteries
4. Button backlight

Dimension:(mm)

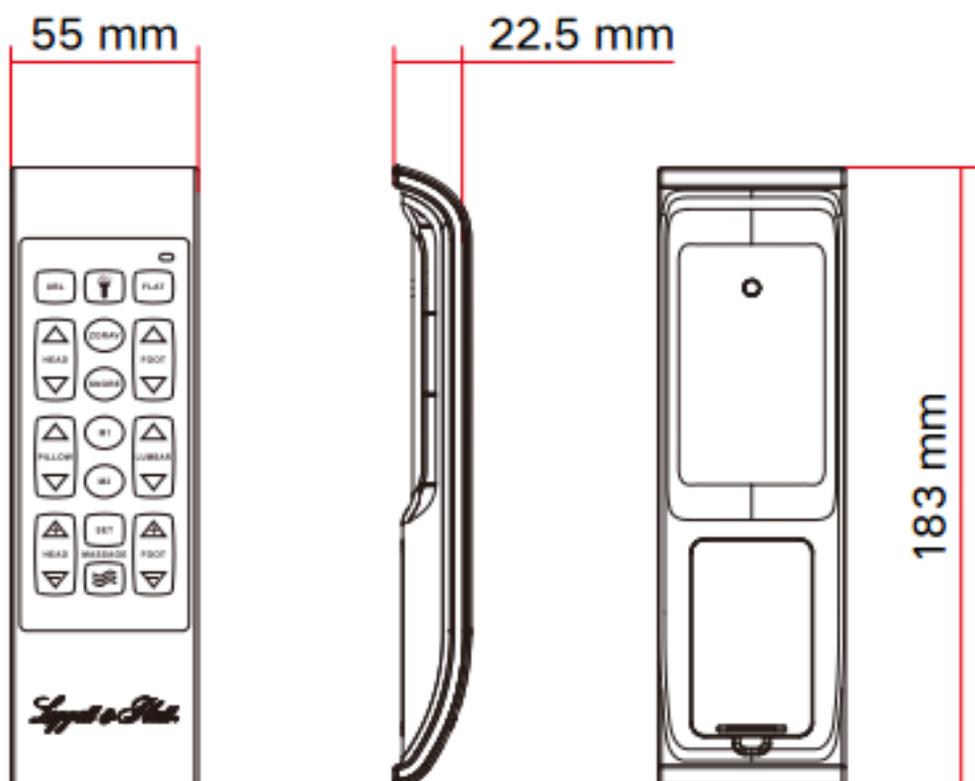

Key Description



1. Coding

After installing the battery on the remote control, press the code matching button on the control box, and then press ⑦ and ⑥ on the remote control at the same time; after hearing the buzzer on the control box or the motor beeps three times, the code matching is successful. Can work

Press any key to activate the white backlight of the panel; 2 seconds after no operation, the backlight will gradually turn off; after it is turned off, the white backlight will turn on when there is touch sensing every 15 seconds; when the remote control is pressed in the power-off state, the red indicator light flashes

2. Button function

- ① Bed bottom lamp function; click this button to turn on the bed bottom lamp, and press this button again to turn off the bed bottom lamp;
- ② Flashlight function; press and hold this key to turn on the flashlight; release this key to turn off the flashlight;
- ③ One-button leveling function; click this button, the back leg motors are leveled at the same time, press any button to stop;
- ④ Back-up function; press and hold this button, the back starts to rise, release this button, the ascent stops.
- ⑤ 0 gravity function; click this key, one key to reach a fixed position, press any key to stop;
- ⑥ Leg ascending function; press and hold this button, the leg starts to ascend, release this button, the ascent stops;
- ⑦ Back down function; hold down this button, the back will start to fall, release this button, the down will stop;
- ⑧ Anti-snoring function; click this key, one key to reach a fixed position, press any key to stop;
- ⑨ Leg descending function; press and hold this button, the leg begins to descend, release this button, the descending stops;

- ⑩ Neck ascent function; hold down this button, the neck starts to rise, release this button, the ascent stops;
- ⑪ Memory function 1; click this button to reach the fixed position of memory with one button;
- ⑫ Waist ascending function; press and hold this button, the waist will start to rise, release this button, the ascent will stop;
- ⑬ Neck descending function; hold down this button, the neck begins to descend, release this button, the descending stops;
- ⑭ Memory function 2; click this button to reach the fixed position of memory with one key;
- ⑮ Waist descending function; hold down this button, the waist begins to descend, release this button, the descending stops;
- ⑯ Back massage enhancement function; press this button once, the massage intensity will increase by one level, and the third level will increase gradually;
- ⑰ Memory setting function; press this button and the memory function button at the same time ○11 The screen flashes, you can remember the current position; and so on to complete the memory of ⑭;
- ⑱ Foot massage enhancement function; click this button once, the massage intensity will increase by one level, and the third level will increase gradually;
- ⑲ Back massage attenuation function; press this button once, the massage intensity will be reduced by one level, and the third level will gradually weaken;
- ⑳ Wave function; press this button once to turn on the wave mode, press again to close the wave mode; long press for 3 seconds to close all massage functions;
- ㉑ Wave function; click this button once to turn on the wave mode, press again to close
Wave mode; long press for 3 seconds to turn off all massage functions;
- ㉒ Foot massage weakening function; press this button once to increase the massage intensity by one level,

FCC Statement:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.