 


H158B Remote Control Manual

Remote control key diagram

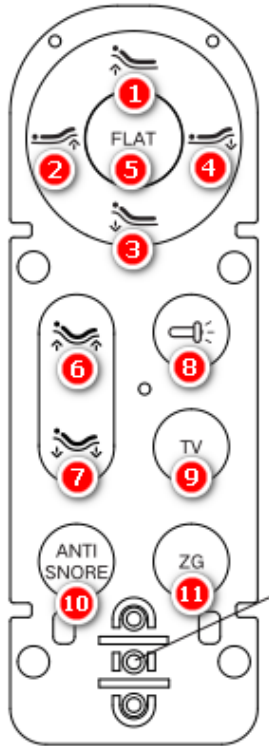

Remote Control Function Description

Key label	Feature
1	Back motor extended, release to stop
2	Foot motor extended, release to stop
3	Back motor retracts, release to stop
4	Foot motor retracts, release to stop
5	One-button reset, all motors retracted to the minimum stroke position, power-on reset
6	Back motor, foot motor out at the same time, release to stop
7	Back motor, foot motor retract at the same time, release stop.
8	Press the flashlight to turn on, release the flashlight to turn off
9	The motor runs to TV position with one click . Reuse function: Press and hold TV for about 3 seconds, the backlight will flash and the buzzer will sound, and the current motor position will be recorded to TV
10	The motor runs to SNORE position with one click . Reuse function: Press and hold SNORE for about 3 seconds, the backlight will flash and the buzzer will sound, and the current motor position will be recorded to SNORE
11	The motor runs to ZG position with one click .

\

	Reuse function: Press and hold ZG for about 3 seconds, the backlight will flash and the buzzer will sound, and the current motor position will be recorded to ZG
Coding method: [Remote control foot rise + Back descent+ control box code key] Buzzer sounds, indicating successful code * The control box has a reset function for the code key * The control box is powered on and reset, all motors are reset at the same time, and the reset process cannot be interrupted by any key	

Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

H158 Remote Control Manual

Remote control key diagram

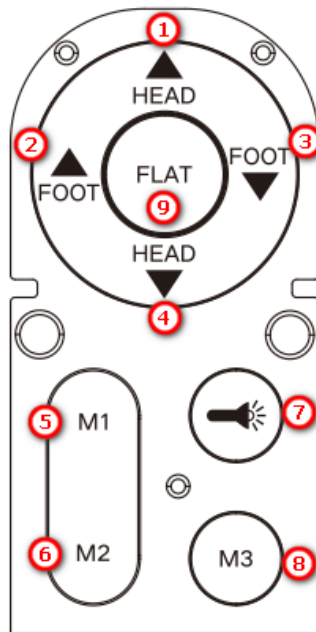

Remote Control Function Description

Key label	Feature
1	Back motor extended, release to stop
2	Foot motor extended, release to stop
3	Back motor retracts, release to stop
4	Foot motor retracts, release to stop
5	The motor runs to M1 position with one click . Reuse function: Press and hold M1 for about 3 seconds, the backlight will flash and the buzzer will sound, and the current motor position will be recorded to M1
6	The motor runs to M2 position with one click . Reuse function: Press and hold M2 for about 3 seconds, the backlight will flash and the buzzer will sound, and the current motor position will be recorded to M2
7	Press the flashlight to turn on, release the flashlight to turn off
8	The motor runs to M3 position with one click . Reuse function: Press and hold M3 for about 3 seconds, the backlight will flash and the buzzer will sound, and the current motor position will be recorded to M3
9	One-button reset, all motors retracted to the minimum stroke position, power-on reset

\

Coding method:

[Remote control head rise + foot rise + control box code key] Buzzer sounds, indicating successful code

*** The control box has a reset function for the code key**

*** The control box is powered on and reset, all motors are reset at the same time, and the reset process cannot be interrupted by any key**

Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

H159 Remote Control Manual

Remote control key diagram

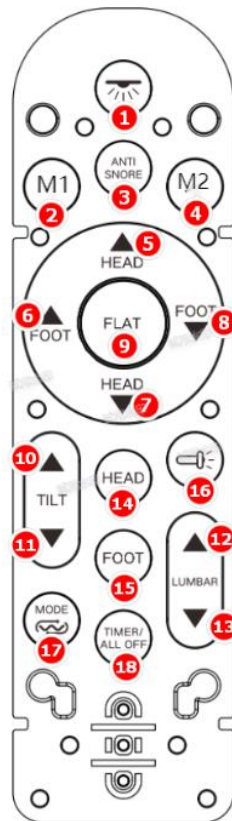

Remote Control Function Description

Key label	Feature
1	Underbed light on/off (default: 15 minutes off)
2	The motor runs to M1 position with one click . Reuse function: Press and hold M1 for about 3 seconds, the backlight will flash and the buzzer will sound, and the current motor position will be recorded to M1
3	The motor runs to SNORE position with one click . Reuse function: Press and hold SNORE for about 3 seconds, the backlight will flash and the buzzer will sound, and the current motor position will be recorded to SNORE
4	The motor runs to M2 position with one click . Reuse function: Press and hold M2 for about 3 seconds, the backlight will flash and the buzzer will sound, and the current motor position will be recorded to M2
5	Back motor extended, release to stop
6	Foot motor extended, release to stop
7	Back motor retracts, release to stop
8	Foot motor retracts, release to stop

9	One-button reset, all motors retracted to the minimum stroke position, power-on reset
10	Once the external drag rises, release the TILT to stop the third way
11	Drag outward and lower, release and stop (TILT) the third way
12	External drag two rises, release and stop (LUMBAR) the fourth way
13	External drag two descent, release and stop (LUMBAR) the fourth way
14	Head massager enhancement: Press the button, if the head massager is not activated, start the head massager and enter the "CONSTANT" mode; If the head massage motor has been activated, increase the vibration intensity of the massager, 1 → 2 → 3 → off, and cycle switching. (Default 30 minute shutdown)
15	Foot massager enhancement: Press the button, if the foot massager is not activated, start the foot massager and enter the "CONSTANT" mode; If the foot massage motor has been activated, increase the vibration intensity of the massager, 1 → 2 → 3 → off, and cycle switching. (Default 30 minute shutdown)
16	Press the flashlight to turn on, release the flashlight to turn off
17	Massage motor mode adjustment. After the massager is turned on, press this button to enter the "PULSE" mode for the working massage motor. Press the button again to enter the "WAVE" mode for the massage motor. Press the button again to enter the "CONSTANT" mode for the massage motor. Press the button again to enter the "PULSE" mode and cycle in sequence
18	The massager is turned off. The working time of the massager is timed, set to 10min, 20min, and 30min respectively, and the timing time is displayed through the indicator light
<p>Coding method: [Remote control Back rise + foot rise + control box code key] Buzzer sounds, indicating successful code * The control box has a reset function for the code key * The control box is powered on and reset, all motors are reset at the same time, and the reset process cannot be interrupted by any key</p>	

\

Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.