



INSTRUCTION MANUAL



We hope you enjoy your **Ncredible FLIPS Bluetooth Headphones** comfortable and convenient design with controls on the earcup for music and calls on the go. The unique feature of the Ncredible FLIPS headphones is that you can use as ordinary headphones but also share your music like a boom box. Please read this instruction manual before using your headphones.

Package Contents:

Headphones	Carrying bag
Micro USB Charging cable	3.5mm audio cable
Users guide	

Compatibility

The earcup controls only work in Bluetooth mode. Functions may vary depending on your device compatibility:

IOS and **Android** smartphones with **Bluetooth**

Laptops, tablets and MP3 players with **Bluetooth**

Listening Safety


Do not wear headphones while driving a vehicle or cycling. This can create a traffic hazard and could be illegal in some areas. To protect your hearing:

Do not listen at high volume. Extended high-volume listening can lead to permanent hearing loss.

Set the volume to the lowest setting, then adjust to a comfortable level.

Avoid increasing the volume. Your ears adapt to volume, so a level that does not cause discomfort could still damage your hearing.

Controls and Connections

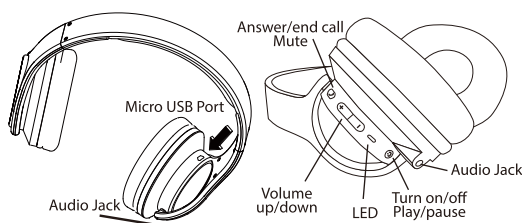

To:	Button:	Press:
Turn on / off		Press and hold
Play / pause		Press quickly
Volume up	+	≥ 1
Volume down		≥ 1
Answer / end call*		Press and Hold
Mute Call		Press quickly

Note: Music playback is paused during call functions and resumes when the call is ended.
*Will not end call if mic is muted.

LED Indications:

Activity	LED Color
Charging	FLASHING BLUE AND RED
Charge is complete	RED
Bluetooth pairing	FLASHING BLUE
Bluetooth paired	BLUE

Note: Light is off in headphone mode and speaker mode when Bluetooth is not being used.

Charge

1. Connect the USB charging cable to the headphones and a USB source.
2. LED flashes blue/red during charging, and turns solid red when charged.

Power On/ Pairing

1. Hold power button until Blue power LED comes on. Head phones will say Power On
2. LED will flash indicating ready for pairing.
3. On your device turn on Bluetooth function.
4. Select Flips BT and connect. (Pairing could take a few minutes.)
5. Once paired, Flips will say Connected and the LED light will stop flashing.

Notes:

During pairing, if the headphones are not connected to a device within 15 minutes, they automatically turn off. Once successfully paired, your headphones will automatically reconnect to the recently paired device the next time they are switched on.

To delete **Flips BT** completely from your device memory, go to your devices Bluetooth setting menu to find **Flips BT**, then select to remove it.

Answering Calls: (must be on and paired)

Press the phone button once to answer call

Note: Press and hold to reject the call

When on a call:

Press once to mute microphone, press again to unmute
Press and hold to hang up

You cannot hang up call if mic is on mute.

Activating Speaker Mode:

Remove headphones from your head. Turn the volume of your music device all the way down.

Flip both ear cups out (BOTH ear cups must be rotated) to activate speaker mode. Adjust ear cups to desired angle. Adjust volume to the desired level.

To flip back to Headphone mode, rotate the ear cups back to the original position.


Note: In speaker mode, your FLIPS will shut off automatically after 15 minutes if no audio from your device, however the batteries will still be on. To extend your battery life, rotate the ear cups back into Headphone mode when not in use.

Wired Mode:

Use the 3.5mm audio cable. Make sure the headphones are switched off to save power. A handy option when your headphone battery power is depleted.

Storage:

Do not leave the Ncredible FLIPS headphones in the speaker mode (open) position while not in use. This will drain the battery even if the Bluetooth power is off.

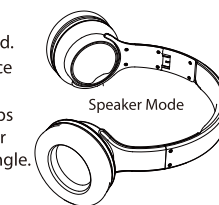

Fold to store in case

Specifications

Charging time	approx. 3 hrs
Operating time (headphone mode)	up to 18 hrs. play
Operating time (speaker mode)	up to 4.5 hrs. play
Bluetooth connection range	30 feet
Frequency Response (Headphone mode)	20Hz-20Khz
Frequency Response (Speaker mode)	100Hz-20KHz
Input Impedance (Line-in, Headphones)	32Ω
Input Impedance (Line-in, Speaker Mode)	10 kΩ
Microphone sensitivity	-38dB

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Lithium Battery Safety

Do not burn or bury batteries. Do not puncture or crush. Do not disassemble. Recycle lithium batteries. Do not dispose of in the trash.

If the electrolyte in the cells should get on your skin, thoroughly wash with soap and water. If in the eyes, rinse thoroughly with cool water. Immediately seek medical attention.

The built-in battery may discharge completely after a long period without use. Recharge.

Follow the instructions for charging. Do not charge longer than recommended. Unplug the USB cable when the battery is charged. The headphones should never be left unattended while charging.

FCC Information

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: The equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits were designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Limited Warranty

General Wireless Operations Inc., doing business as RadioShack (hereafter RadioShack) warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a RadioShack-owned store or an authorized RadioShack franchisee or dealer. **RADIOSHACK MAKES NO OTHER EXPRESS WARRANTIES.**

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a RadioShack-authorized service facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store in the U.S. RadioShack will, at its option, unless otherwise provided by law (a) replace the product with the same product, or (b) replace the product with a comparable product (as determined by RadioShack). All replaced products become the property of RadioShack.

RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, RADIOSHACK SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RADIOSHACK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Contact General Wireless Operations Inc. at:

RadioShack Customer Relations
300 RadioShack Circle
Fort Worth, TX 76102 12/15
www.radioshack.com

U.S. Patent No. 9,161,117 U.S. Patent No. 9,319,773 U.S. Patent No. 9,344,794 Other Patents Pending
--

© 2016 General Wireless Operations Inc. All rights reserved. The Ncredible logo is a trademark of Nick Cannon Inc. used under licence by General Wireless Operations Inc. dba RadioShack. Flips is a registered trademark of IdeaVillage

Distributed by:
idea village

Wayne, NJ 07470
Made in China © 2016 Ideavillage.com
customerservice@ideavillage.com
FFR5090116MW