

SOUND CUBE

INSTRUCTION GUIDE

1. Push the power button to turn on the Sound Cube (you will hear "power on").
2. If the speaker does not automatically connect to a device, it goes into pairing mode and the blue light will blink - to pair it, go to the bluetooth menu on your device and select the RIF6 Sound Cube.

3. If your device doesn't have bluetooth, use the AUX cable to connect it to the Sound Cube, as you would when using it with the Cube.
4. Use the USB cable to charge the Sound Cube.
5. Push the power button to turn off the Sound Cube.

Contact support at:
support@rif6.com

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.