

DIFRNCE

User's Manual

Bluetooth MP4 player

Model Number: MP390B



*ANY PROBLEM OR QUESTIONS, CALL SUPPORT DESK 0900-3437623 (NL)

*VRAGEN OF PROBLEMEN, BEL ONZE SUPPORT DESK 0900-3437623 (NL)

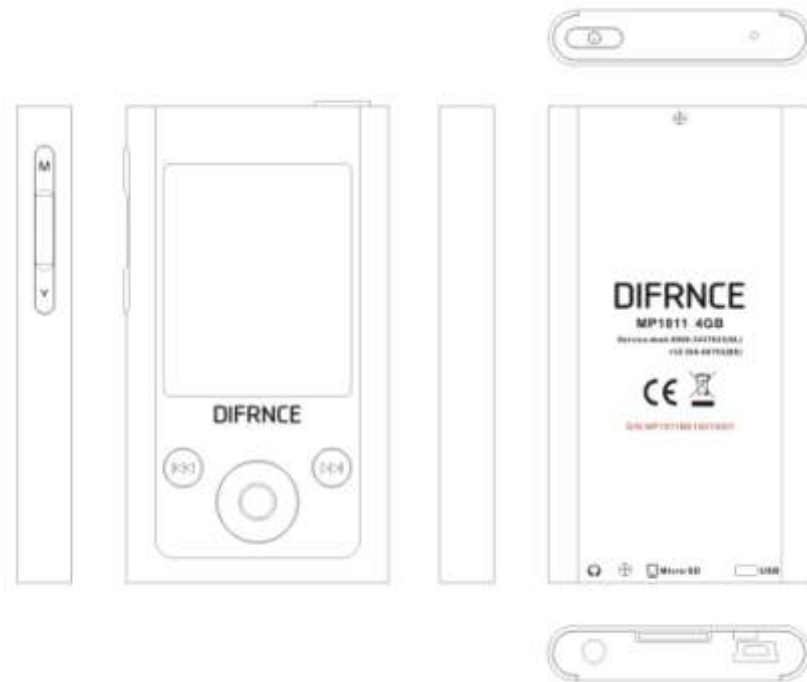
*BEI FRAGEN ODER PROBLEMEN WENDEN SIE SICH BITTE AN UNSEREN
SERVICE: 00-31-348 409 371 (DU)

*VRAGEN OF PROBLEMEN, BEL ONZE SUPPORT DESK +32 380-80793 (BE)




*SI VOUS AVEZ DES QUESTIONS SOIR DES PROBLEMES, CONTACTEZ-NOUS AU
NUMERO DE SAV SUIVANTE: +32 380-80793 (BE)

Preparation before use


Exterior view



M key: refers to the Menu key. The menu will pop up after pressing this key, and then enter the next interface after confirming (Enter or Exit). Hold the key to go back to the main interface.

- 1、 key: choose the previous option or file.
- 2、 key: choose the next option or file.
- 3、 key: refers to the Play/Stop key, playing the role of confirmation also.
- 4、**V** key: quick press to 'Return', press and hold it to enter Volume adjustment mode,

Switch on/off

Push and hold the Power button '' on top of the player for 3 seconds to turn on, press and hold this button again to turn off.

When the idle time of the system reaches the off time customized by the user, the player will automatically be turned off.

Note: When the player is connected to a PC or being charged, this function is invalid.

Low battery

When the battery power is low, the prompt screen will appear and then the player will automatically shut down into the sleep mode. It should then be charged instead of restarting it.

Note: When charging the player, be sure to switch the Power switch to the ON position, or charging will not occur.

Bluetooth

Select **Bluetooth** on the main interface, and press **▶|** key to enter the Bluetooth submenu.

Select 'BT Control' and press **▶|** key to enter the next submenu,

Select 'Turn BT On' and press **▶|** key to activate the Bluetooth function,

Press **V** button and return to previous Bluetooth submenu, then select 'Search Device' and press **▶|** key to search all Bluetooth devices available,

Select the Bluetooth device from the 'Device List' and press **▶|** key to pair it,

Press **V** button and return to previous Bluetooth submenu, select 'All Music' and press **▶|** key to enter the music list,

Select a song, press **▶|** to start playing it via the Bluetooth device,

Press and hold the **V** button to enter the Volume adjustment mode, and then press **◀◀** and **▶▶** to adjust the sound volume, ranging from 0-24.

Music

Select **Music** on the main interface, and press **▶|** key to enter the music play interface.

Press **▶|** key to switch modes between **Play** and **Pause**. Press **◀◀** and **▶▶** keys to choose the previous file or next file. Hold **◀◀** and **▶▶** key to Fast Forward or Fast Reverse.

Press and hold the **VOL** key to enter the **Volume adjustment** mode, and then press **◀◀** and **▶▶** to adjust the sound volume, ranging from level 0-24.



Notice: At full volume, prolonged listening to the portable audio device may damage the user's hearing.

DIFRNCE device is with 'max volume limit' function (level 14), because listening music with high volume may harm your hearing; you can press the 'M' button to cancel this volume limit in case you may really need to.

Movie

1. Select the video play function on the main interface, and press **▶|** to enter.

2. Use **▶▶** to select the video to play. Press **▶|** to start playback.

3. Supported resume play from the last breakpoint.

4. Under the halted state, press **M** to enter the menu options, including **Local folder**, **Delete file**, **Delete all**, **Repeat mode**, and **Exit**. The functions and operation methods are the same as that of music application.

Recording

Select Record on the main interface and press **▶|**. Press **▶|** again to start/pause/restart and continue the recording. Press **V** key and it will remind you to save the current recording content or not, and be ready for new recording.

If the low-power signal appears in the process of pause mode, the system will automatically save the recording content and go back to the recording function interface.

Press **▶▶** to select the other submenu options, including **Recording Library** (to play the recorded files), **Record Format**, **Record Settings**..

Images

Press the **▶** key on the main interface to enter the picture browsing.

Press **▶▶** to select the picture to view.

Press **▶** to view the picture browsed, and press it again to enter slideshow mode.

Press **◀◀ / ▶▶** to browse pictures back and forth.

Press **M** key to enter the submenu, including **Brightness, Backlight timer, Slideshow settings, Delete picture, Create Playlist.**

Press **V** key to exit.

Play setting

Manual play: in case you need to manually play each picture, press **◀◀** or **▶▶** to view the previous or next picture.

Auto play: after the entry, press **M** key and select 'Slideshow settings', adjust the time interval (2-30s) for automatic play and press **▶** to confirm, press **V** to return to Playlist and press **▶** to start browsing, then press **▶** again to start auto play. .

E-book

Press **▶** key on the main interface to enter the e-book,

Use **▶▶** to select the text file and press **▶** to start reading.

Press **◀◀** or **▶▶** for last page or next page,

Press **M** key to enter the submenu, including **Play settings, Delete ebook, Bookmark settings** and etc.

Press **V** key to exit.

System settings

1. System time: press **Volume control** to switch among the options of Second, Minute, Hour, Day, Month and Year, press **◀◀** or **▶▶** to adjust the value, and press **M** to save the settings.

2. LCD (Screen) settings:

Dark (black screen) mode: The backlight will be turned off in case of no key operation. Setting range is from 0 ~ 50 seconds. Setting step size: 5 seconds. The setting of **Dark mode** is invalid on the following five interfaces: picture display interface, video player interface, e-book reading interface, USB on-line equipment interface, and lyrics play interface.



3. Language selection: Supports many languages such as: Simplified Chinese, Traditional Chinese, English, Japanese, Korean, French, German, Italian, Dutch, Portuguese, Spanish, Swedish, Czech, Danish, Polish Russian, Turkish, Hungarian, Romanian, Arabic, Hebrew, Thai, Indonesian, and Greek.

4. Power off setting:

Power-saving mode: The system shall be automatically turned off in case of no key operation. Setting range is from 0 ~ 200 seconds. Setting step size: 10 seconds. This mode is invalid in the modes such as USB, audio and video playback, recording, FM listening, auto-play of pictures and e-books.

Sleep time: Set the sleep and shutdown time in case of no operation, with the range of

0-120 min, and the step interval of 10 min. The sleep mode shall be valid under all other modes than the USB mode.

5. Memory info: Displays the total capacity and the used space percentage of master disc or SD card of player. To switch between the information stored in two discs use  or 

6. Format device: Formats the master disc and the disc where cards can plug in.
CAUTION: Use of this operation will delete whatever is on the master disc.

7. Firmware version: displays the current firmware version information.

8. Firmware upgrade

The player can upgrade or repair the player's firmware through the firmware upgrade tool.

9. Keypad tone: Set the volume level of keypad tone, with a range from 0—24. If the step length is 1.0, it indicates the keypad tone shall be closed.

10. Exit: back to the main interface of system setting.

Troubleshooting

Media player does not work or LCD does not display contents.

- Check the battery power.

Power key does not work.

- The battery is depleted.

Unable to download files

- Check the connection between computer's USB port and USB cables.

- Format the media player.

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

(1) This device may not cause interference; and

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux CNR exemptes de licence d'Industrie Canada . Son fonctionnement est soumis aux deux conditions suivantes :

(1) Ce dispositif ne peut causer d'interférences ; et

(2) Ce dispositif doit accepter toute interférence , y compris les interférences qui peuvent causer un mauvais fonctionnement de l'appareil.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.