
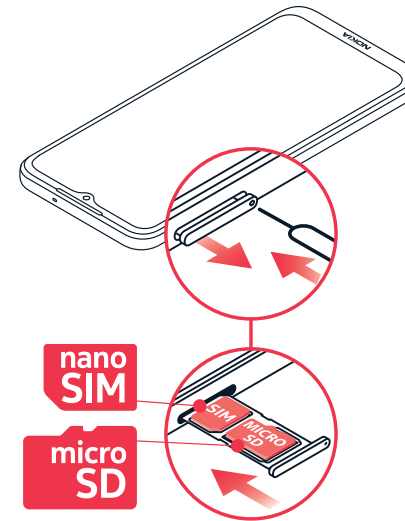


NOKIA

Nokia G400 5G

EN – Get Started
ES-US – Inicio

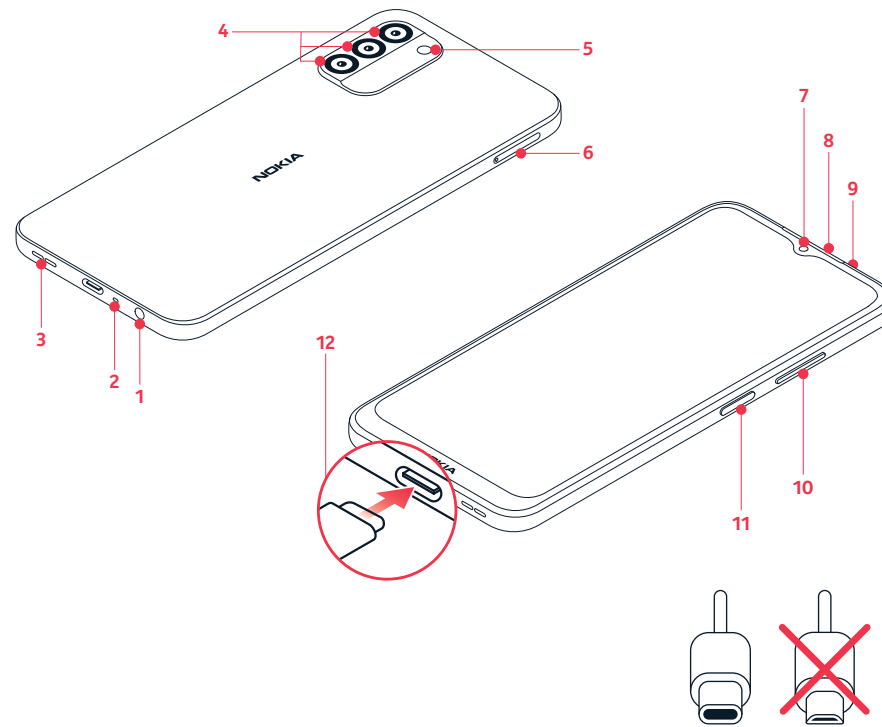

TA-1448

EN, ES-US



EN

1. Headset connector 2. Microphone 3. Loudspeaker
4. Camera 5. Flash 6. SIM and memory card slot
7. Front camera 8. Earpiece 9. Microphone
10. Volume keys 11. Power/Lock key, Fingerprint sensor
12. USB-C connector

1. Insert the SIM and memory card

1. Open the SIM card tray: push the tray opener pin in the tray hole and slide the tray out.
2. Put the nano-SIM in the SIM slot on the tray with the contact area face down.
3. If you have a memory card, put it in the memory card slot.
4. Slide the tray back in.

Use only original nano-SIM cards. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.

Use only compatible memory cards approved for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.

Important: Do not remove the memory card when an app is using it. Doing so may damage the memory card and the device and corrupt data stored on the card.

2. Charge the battery and switch the phone on

Plug a compatible charger into a wall outlet, and connect the cable to your phone. Your phone supports the USB-C cable. You can also charge your phone from a computer with a USB cable, but it may take a longer time.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.

To switch your phone on, press and hold the power key. The phone guides you through the setup.

For an online user guide with safety and legal information, and troubleshooting help, go to www.nokia.com/mobile-support.

ES-US

1. Conector para auriculares 2. Micrófono 3. Altavoz
4. Cámara 5. Flash 6. Ranura para tarjetas de memoria y SIM 7. Cámara frontal 8. Auricular 9. Micrófono
10. Teclas de volumen 11. Tecla de encender/apagar y bloquear, Sensor de huella digital 12. Conector USB-C

1. Insertar la tarjeta SIM y la tarjeta de memoria

1. Abra la bandeja de la tarjeta SIM: inserte la herramienta especial en el orificio y extraiga la bandeja.
2. Coloque la tarjeta nano-SIM en la ranura SIM con el área de contacto hacia abajo.
3. Si tiene una tarjeta de memoria, colóquela en la ranura destinada a estas.
4. Vuelva a insertar la bandeja en la ranura.

Use solo tarjetas nano-SIM originales. El uso de una tarjeta SIM incompatible podría dañar la tarjeta y el dispositivo, así como los datos almacenados en la tarjeta.

Utilice solamente tarjetas de memoria compatibles aprobadas para este dispositivo. Las tarjetas incompatibles podrían dañar la tarjeta y el dispositivo, así como los datos almacenados en la tarjeta.

Importante: No retire la tarjeta de memoria cuando la está usando una aplicación. Esto puede dañar la tarjeta de memoria, el dispositivo y los datos almacenados en la tarjeta.

2. Cargar la batería y encender el teléfono

Conecte un cargador compatible al tomacorriente y luego conecte el cable al teléfono. El teléfono es compatible con el cable USB-C. También puede cargar el teléfono desde una computadora con un cable USB, pero puede tardar más tiempo.

Si la batería está completamente descargada, el indicador de carga puede tardar varios minutos en encenderse.

Para encender el teléfono, mantenga presionada la tecla de encender/apagar. El teléfono lo guiará durante el proceso de configuración.

Para ver la guía del usuario en línea junto con información legal y de seguridad, más ayuda para solucionar problemas, visite www.nokia.com/mobile-support.

EN

Product and safety info

Important: For important info on the safe use of your device and battery, read the Product and safety info booklet before you take your device into use.

You can only use your device on the GSM 850, 900, 1800, 1900; WCDMA 1, 2, 4, 5; LTE 1, 2, 3, 4, 5, 7, 8, 12, 13, 17, 20, 25, 26, 38, 39, 40, 41, 66, 71; 5G NR n25, n41, n66, n71, n77 networks.

You need a subscription with a service provider.

Important: 5G might not be supported by your network service provider or by the service provider you are using when traveling. To make sure your device works seamlessly when full 5G service is not available, it is recommended that you change the highest connection speed from 5G to 4G. To do this, on the home screen, tap **Settings > Network & internet > SIMs**, and switch **Preferred network type to 4G**. For more info, contact your network service provider.

Your device has an internal, non-removable, rechargeable battery. Do not attempt to remove the battery or back cover, as you may damage the device. To replace the battery, take the device to the nearest authorised service facility.

Charge your device with the AD-020U charger. HMD Global may make additional battery or charger models available for this device. Charging time can vary depending on device capability. Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.

The surface of the device is nickel-free.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic stripe cards near the device for extended periods of time, since the cards may be damaged.

Note: Pre-installed system software and apps use a significant part of memory space.

Keep a safe distance when using the flash. Do not use the flash on people or animals at close range. Do not cover the flash while taking a photo.

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

APPROVED FIRMWARE VERSIONS

This device will only operate with firmware versions that have been approved for use by your wireless carrier and the device manufacturer. If unauthorized firmware is placed on the device it will not function.

INFORMATION ABOUT SAFEGUARDING DEVICES

We encourage customers to take appropriate measures to secure their devices and invite them to take advantage of the features available on this device to help secure it from theft and/or other unauthorized access and use. This device has a locking function (e.g., user-defined codes or patterns) that can serve as a first line of defense against unauthorized use or access to stored information. If a security feature that allows customers to track or locate misplaced devices is available, it is recommended to enable it. Lost or stolen devices should be immediately reported to your

wireless carrier so that proper measures can be taken to protect accounts. For additional information, visit your wireless carrier's Privacy Policy.

Emergency calls

Important: Connections in all conditions cannot be guaranteed. Never rely solely on any wireless phone for essential communications like medical emergencies.

Before making the call:

- Switch the phone on.
- If the phone screen and keys are locked, unlock them.
- Move to a place with adequate signal strength.

1. On the home screen, tap
2. Type in the official emergency number for your present location. Emergency call numbers vary by location.
3. Tap
4. Give the necessary info as accurately as possible. Do not end the call until given permission to do so.

You may also need to do the following:

- If your phone asks for a PIN code, tap **Emergency call**.
- Switch the call restrictions off in your phone, such as call barring, fixed dialing, or closed user group.
- If the mobile network is not available, you may also try making an internet call, if you can access the internet.

Battery and charger safety

- Once charging of your device is complete, unplug the charger from the device and electrical outlet. Please note that continuous charging should not exceed 12 hours. If left unused, a fully charged battery will lose its charge over time.
- Always keep the battery between 15°C and 25°C (59°F and 77°F) for optimal performance. Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.
- Obey local regulations. Recycle when possible. Do not dispose as household waste.
- Do not expose the battery to extremely low air pressure or leave it to extremely high temperature, for example dispose it in a fire, as that may cause the battery to explode or leak flammable liquid or gas.
- Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.
- Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service center or your phone dealer before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm.
- To unplug a charger or an accessory, hold and pull the plug, not the cord.

Additionally, the following applies if your device has a removable battery:

