

User Manual for S8 Wireless Audio Player

Thank you very much for choosing the wireless audio player manufactured by us. We provide you a detailed user manual herein to introduce the product in details and instruct your operation. Please read this manual carefully before using. In case of any printing or translation errors, we appreciate your understanding.


Functions

- Wireless audio: stereo audio play, max. linear receiving range: 10 m.
- Wireless communication: includes a Hi-Fi wireless chip, provides clear voice and has no echo or limited volume.
- TF card function: memory play and cycle play.
- USB function: memory play and cycle play.

- External audio input: includes a standard 3.5 mm headset jack, and connected with computer, mobile or other devices easily.
- Voice prompt: humanized and unique intelligent voice prompt.

Packaging instruction:

- Player
- Charge line
- External audio input line
- User manual

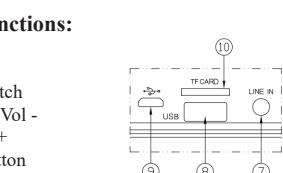

1

Panel Functions:

1. Mode switch
2. Previous/ Vol -
3. Next/ Vol +
4. Power button
5. Playback/pause/answer/ hang up/ refuse
6. Charge/battery indicator
7. External audio input port
8. USB port
9. Charge port
10. TF card port



2

Operation Instruction for Startup and Shutdown

Startup: Press the start button for a second at least to start up the product. The blue indicator light on the panel will be on and the product will enter Wireless mode after voice prompt.

Shutdown: Press the power button for a second at least in any mode, and the product will be shut down after voice prompt.

Automatic Shutdown under Low Voltage: The product may operate abnormally or be shut down under low voltage. In this case, please charge the player as soon as possible.

3

Wireless Functions: When you use the Wireless at the first time, the blue light on the panel will flicker and the voice will prompt "Wireless mode" after the product is started up. Then, open the Wireless device to search the Wireless device and locate the device S8. Then, match with S8. You may need to input the password to match with some mobiles and devices. You only need to input "0000". After the successful connection, you can play music. In case the Wireless is connected, the voice prompts "Wireless disconnected" and the Wireless will search the device for connection automatically. In case of failure in 10 seconds, you need to connect it manually.

4

Key Function in Wireless Mode: Short-press "-" to play the previous track and long-press "-" to reduce the volume. Short-press "+" to play the next track and long-press "+" to increase the volume. Short-press the play key to pause or play. When someone calls you, you may short-press the "play" key to answer and hang up and long-press the "play" key to refuse. You may press the volume key by fingers to control the volume. Wireless Call Function: You may press the corresponding key to answer the Wireless call. You can get the best communication effect in 1-1.5 m away from the player. You may also adjust the volume of player as per your own demand.

5

IF Card Functions

TF Card Play Function: Press the mode button or insert TF card directly. Then, it can switch into IF card play mode. The voice will prompt "music". During play, the blue light flickers slowly. During pause, the blue light will be on. It has break-point memory function and cycle play.

Key Function in TF Card Mode: Short-press "-" to play the previous track and long-press "-" to reduce the volume. Short-press "+" to play the next track and long-press "+" to increase the volume. Short-press the play key to pause or play.

6

USB Functions

USB Play Function: Press the mode button or insert USB directly. Then, it can switch into USB play mode. The voice will prompt "music". During play, the blue light flickers slowly. During pause, the blue light will be on. It has break-point memory function and cycle play.

Key Function in USB Mode: Short-press "-" to play volume. Short-press "+" to play the next track and long-press "+" to increase the volume. Short-press the play key to pause or play.

7

External Audio Input Functions

External Audio Input Function: Press the mode button or directly insert external audio input line. Then, it can switch to the external audio input mode. The voice prompts "AUX mode".

Key Function in External Audio Input Mode: Short-press the play key to play/mute the external audio. Long-press "-" to reduce the volume and long-press "+" to increase the volume.

Radio Mode

Radio Mode: Press the mode button to switch into the radio mode.

8

Key Function in Radio Mode: Short-press the play key to play /mute the radio, and long-press the play key for 2 seconds to search channels automatically and memorize them. Long-press "-" to reduce the volume and long-press "+" to increase the volume. Short-press "-" or "+" to search channels.

Charge Function:

The device will not operate normally in low battery. Please charge timely. Insert the charge line and the battery indicator light will be on. When fully charged, the battery indicator light will be on fully.

9

Red Indicator Light Function:

- In the Wireless mode, the red light flickers slowly during play. The red light flickers quickly during search and the red light will be on during pause.
- In the TF mode, the red light flickers slowly during play. The red light will be on during pause. In the external audio input mode, the red light flickers slowly during play. The red light will be on during pause.

Technical Specifications:

10

- Output power: 2x5W
- Operating voltage: DC 3.7V
- Internal battery: 3.7/1800mAh
- Frequency response: 100Hz-18KHz
- Wireless Core: 2.1
- Operating scope of Wireless: 10 m (linear operating distance)
- Signal to Noise Ratio: >70dB
- Distortion factor: <10%
- Supports MP3: bit rate: 32kbps-320kbps

Safety Notes

Please read following notes carefully to guarantee good performance.

· Do not strike the device violently.

· Do not approach the device to the high-intensity magnetic field.

11

· Do not expose the product in the high-strength direct light and heating equipment.

· Do not try to disassemble, repair or transform the product.

· Do not listen to the player at high volume for too long, to avoid affect on hearing.

· Do not clean the product by clean water. You can only clean the product surface by slightly wet cloth.

· To extend the battery life, please timely charge the player in case of low battery. After it's fully charged, the charge line shall be pulled out.

· Please dispose waste package, battery and discarded electronic products in classification properly

12

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.