

**win2**

# **Operating Instruction Manual**

[www.gpd.hk](http://www.gpd.hk)

**Shenzhen GPD Technology Co., Ltd.**

**Technology Department**

Add:Room 1006 Block 4D,Software Industry Base,  
High tech park,Nanshan district,Shenzhen.Guangdong  
Province,518000,China

Email add : [sales03@gpd.hk](mailto:sales03@gpd.hk)

Telephone : +86 0755-86572275

# Catalog

<b>I. Language Settings upon Boot Up</b>	3
<b>II. How to prevent vertical rotation</b>	5
<b>III. Keyboard and Gamepad Tests</b>	5
What is the meaning of Dinput mode and Xinput mode	5
<b>IV. Initial System Optimization</b>	6
1. Optimizations for the best performance	6
2. Disable Win10 functions	7
3. Disable Windows Defender	9
4. Disable automatic update of Win10	11
5. Disable the firewall of Win10	14
6. Turn off Cortana	16
Method 1. Use the registry to disable Cortana	16
7. Disable Win10 boot login password	17
8. Disable and optimize system services	18
9. Adjust font size	20
10. Turn off the system restore function	22
<b>V. System FAQ</b>	23
System is broken, how can I re-install it?	23
Cannot find any Wi-Fi hotspot, what should I do?	26
How to upgrade to newer versions of BIOS?	26
<b>VI. Technical service</b>	28
Mailing information	28


I. Language Settings upon Boot Up

The first thing to do after boot up is “Gamepad \ Mouse mode switch”, that is: switching on the “mouse mode” by adjusting the mode control key to the middle.




After logging in into the system, the default setting is in English, please do not select the language on the selection box, instead just directly click the NEXT on the bottom right


Go to the “Establish Connection” page, at this point you do not have to set up a Wi-Fi connection, just click “Skip this step” at the bottom and go to the next step.

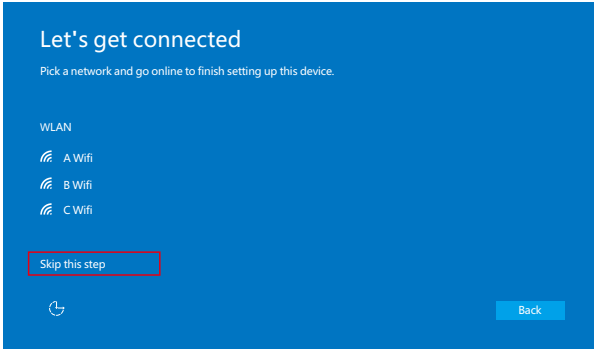


In the “Get going fast” page, click “Use Express settings” and skip to the next page.

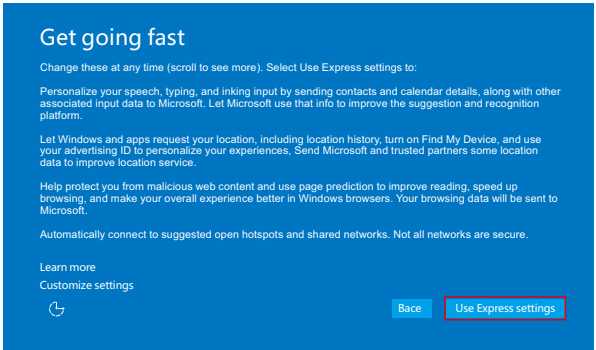


Now you need to create an account for the computer, for which you need to enter a user name and password and filling out password prompt questions. Be sure to remember the password, otherwise you will have to reset the whole system and start over. Click “Next” after creating an account.

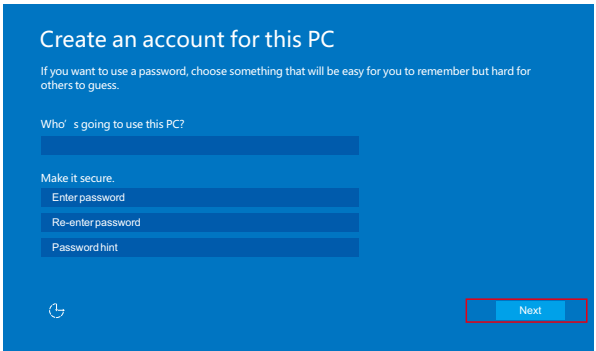

Wait a little while for the system to finish loading.

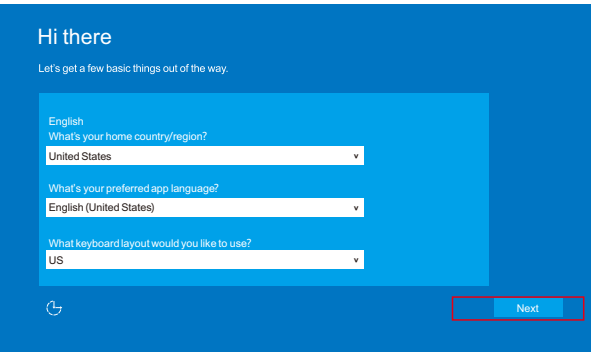


When going into the next page, the below content will be shown, The content is about some legal issue. After viewing it, please click Accept on the bottom right

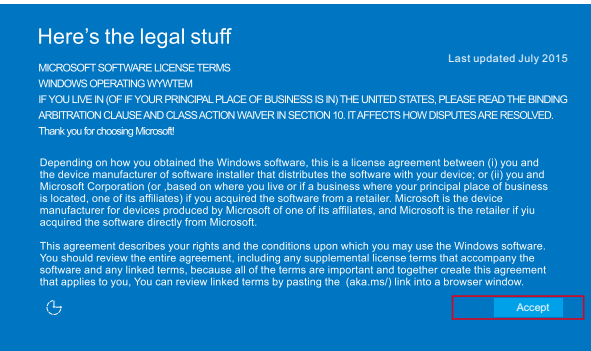

## II. How to prevent vertical rotation

After entering the system, the first thing to do is to prevent vertical screen rotation. It is very easy to do this, just move the pointer (using mouse mode) to the system tray in the lower right corner of the screen and click "Notification", and then click "Rotation Lock" in the notification area.

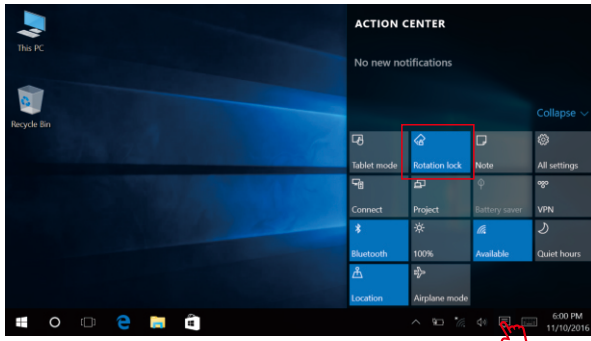

## III. Keyboard and Gamepad Tests

Go to <http://www.gpd.hk/news.asp?id=1519&selectclassid=002002>

Download "XD\_WIN User Full Test Instructions.rar", which contains three applications, namely:

- JoyTester.exe
- keyboardtestutility.exe
- PS3&PS4 0607.exe
- XD\_WIN 用户全检测指导说明 (20161021).docx

- JoyTester.exe for gamepad test in Dinput mode
- PS3 & PS4 0607.exe for gamepad test in Xinput mode
- Keyboardtestutility.exe for keyboard test

"XD\_WIN User Full Test Instructions" contains detailed explanation of test steps.

Description of handle mode:




The handle is the Xinput mode. Microsoft to promote console Xbox 360 console and transplanted into the PC game, a new Xinput apis interface standard, game cover if there is a "Games - for - Windows", you need to use the handle of the Xinput support mode. For example, the game "F1 2010", "colin McCreary rally" and so on.


## IV. Initial System Optimization

### 1. Optimizations for the best performance


Step 1: Right click "My Computer" and click "Properties".

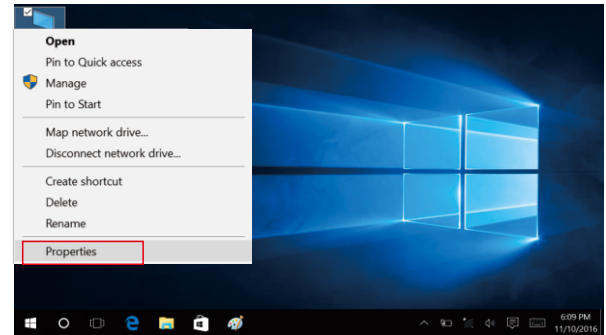


Step 2: Click on the area circled by the red box.

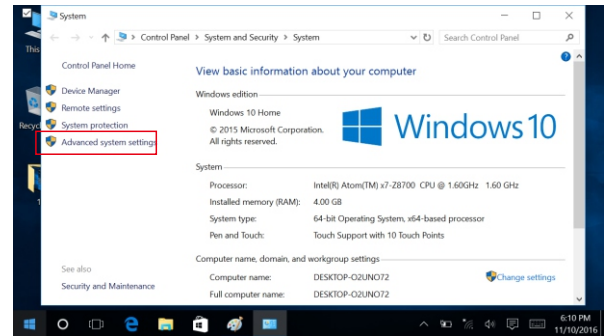

Step 3: Click on the area circled by the red box.

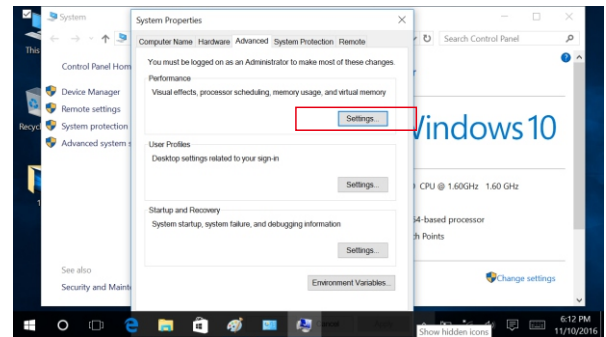


Step 4: Click on the area circled by the red box.

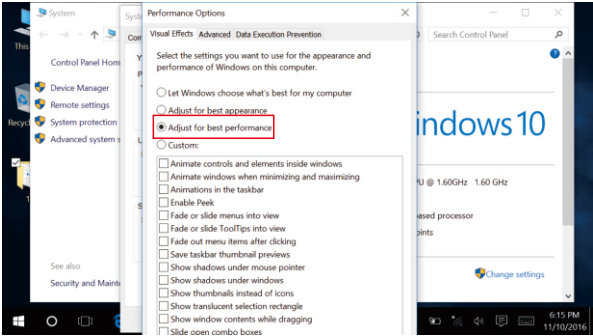


Step 5: Click OK to save and exit.

2. Disable Win10 functions


Step 1: Right-click the start menu button of Windows10, then select “Programs and Features” in the pop-up menu.

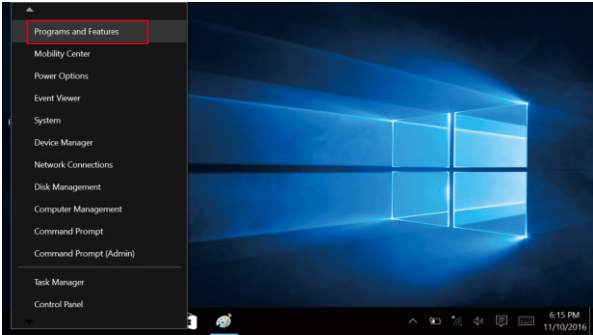


Step 2: In the opened window of Programs and Features, click the quick link “Enable and Disable Windows Services” on the left.

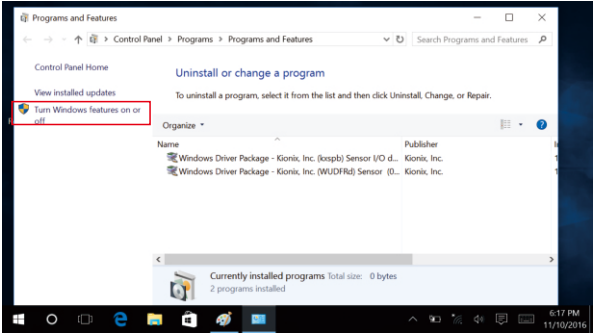


Step 3: A Windows function screen will appear, in which you can see some system services that come with Windows10.

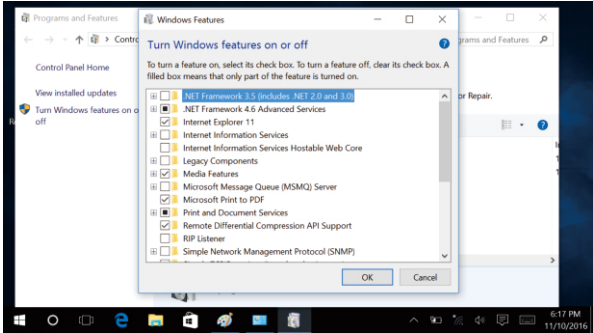


Step 4: For example, in order to disable the Fax and Scan Service of Windows10, you need to pull on the right side of the scroll bar and drag it to find the item of Print and Services, then expand the same for more sub-items, in which you will see the sub-item of Fax and Service, uncheck the box in front to turn off this service.

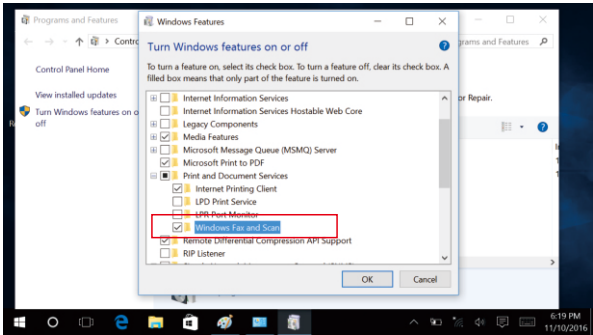


Step 5: A pop up window showing “Searching for Required Files” will appear.

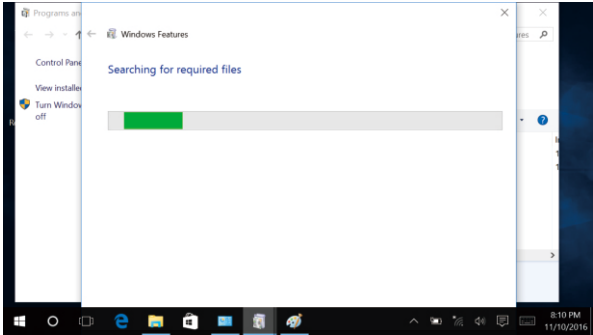

Step 6: A pop-up window showing "Windows has completed the requested changes" will appear shortly. Click the "Restart Now" button below, then the system will restart for the latest changes to take effect.

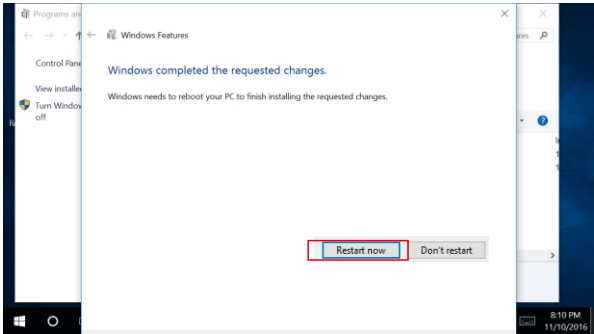


Step 7: Re-open the Windows Features you will see that the box before Windows Fax and Scan has been un-checked. You can easily re-enable this service by simply checking the box again.

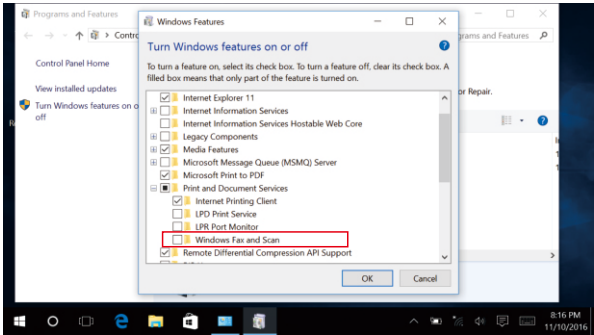


3. Disable Windows Defender


Step 1: Right click "Start" - "Command Prompt (Administrator)"

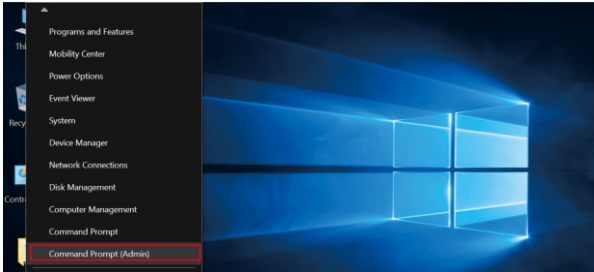

Step 2: In the DOS windows,input command line: reg add "HKLM\SOFTWARE\Microsoft\Windows Defender" /v DisableAntiSpyware /t REG\_DWORD /d 1 /f and press Enter, then restart GPD WIN.

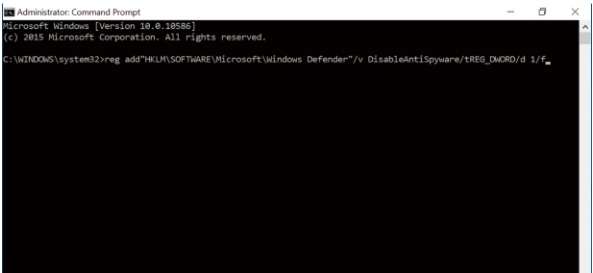

Step 3: Going to the computer desktop, double click "Control Panel" on the desktop.

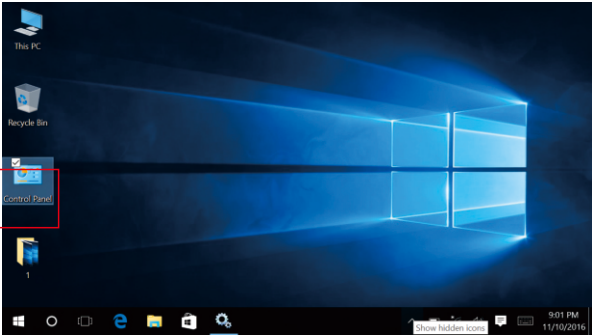

Step 4: Click "Administrative Tools"

