User manual Model:GPD WIN Brand:GPD

One. To Start(start up)

- 1. Press power button to start.
- 2. The computer enter power-on self-test and system guide
- 3. Enter Windows 10 interface, like picture below:



■ Two Lay out (power off)

- 1. Click system tray bottom left logo
- 2. Click "power" selection



3. Click the "power off" when popup a dialog box, like below pitcture:

■ Three Mouse operation

The device provide joystick and mouse mode switch, when switch to mouse mode, you need slip the button to the middle. Like below:



• Left joystick is taken as rolling button of mouse, to use to rolling up or down the

pages.


- L1 L2 is taken as left button of mouse
- R1 R2 is taken as right button of mouse
- > How to adjust the mouse double click speed and pointer movi

ng speed below:

• First step: double click the control panel, like below picture:



• Second step: Click" Check device and printer"

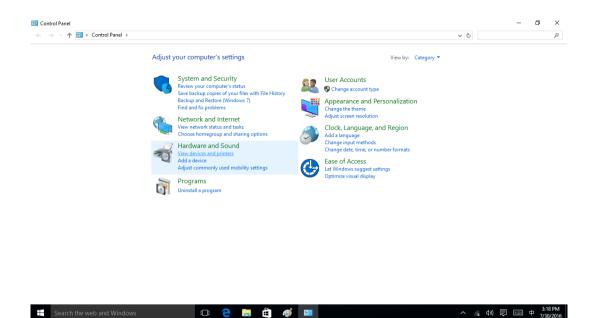


• The third step: Click right on the mouse icon, select "mouse setting", start "mous

🗆 🧲 🚍 🛱 🚿 📟

e" attribute dialog box.

 	✓ Č Search Devices and Printers	م
Add a device Add a printer Remove device	2	•
Devices (3)		
DESKTOP-RC75		
KG Create shortcut pid		
Printers (3) Remove device Troubleshoot		
Properties		
Fax Microsoft Print to Microsoft XPS PDF Document Writer Unspecified (1)		
Fax Microsoft Print to Microsoft XPS PDF Document Writer Unspecified (1)		
PDF Document Writer Unspecified (1) Roadcom BRoadcom B22.11ac Wireless PCIF Full Dongle		
PDF Document Writer Unspecified (1) Broadcom Broadcom Struetess		

The fourth step: adjust on the "speed" line.

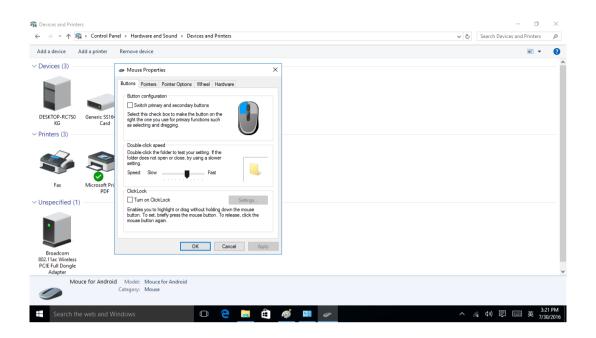

• The fifth step: Click "Pointer Options" label, adjust pointer movement speed.

📷 Devices and Printers			- 0 ×
← → × ↑ 🛱 > Control Par	nel > Hardware and Sound > Devices and Printers	~ ♡	Search Devices and Printers 💫 🔎
Add a device Add a printer	Remove device		■ • ?
✓ Devices (3)	Mouse Properties X Buttons Pointers Pointer Options Wheel Hardware		^
DESKTOP-RC750 KG Generic S516 Card	Motion Select a pointer speed: Slow Fast Strance pointer precision State		
Fax Fax	Shap To Automatically move pointer to the default button in a diadiog box Vability Daplay pointer trails Shot Long		
V Unspecified (1)	C Hole pointer while typing Show location of pointer when I press the CTRL key OK Cancel Apply		
802.11ac Wireless PCIE Full Dongle Adapter			v
Mouce for Androic	d Model: Mouce for Android Category: Mouse		
Search the web and W	indows 🗇 🤁 🧮 🛱	👏 😐 🖉	‰ Ф》 厚 英 ^{3:21 PM} 7/30/2016

■ Four Joystick operation

GPD WIN support Dinput and Xinput two joystick modes, they matches Direct Input a nd Xbox Input mode.

> Switch Dinput mode

Switch joystick mode to Dinput mode, need to move the button to left side, like below picture:




To test the effectiveness of each button :

• The first step: Double click control panel



• The second step: click "check device and printer"

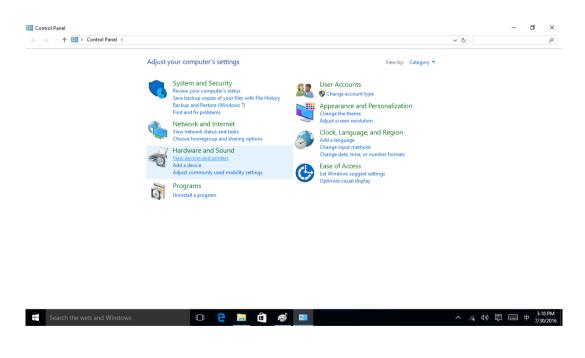

• The third step: right click joystick icon, choose "Controller for PC"

🔂 Devices and Printers						-	٥	×
← → → ↑ 🛱 → Control Panel → Hardware and Sound → Dev	vices and Printers				~ Ō	Search Devices and Prin	ters ,	p
Add a device Add a printer Remove device						E	•	?
V Devices (3)								^
Game controller settings DE Create shortcut								
Pri Remove device Troubleshoot								
Properties								
Fax Microsoft Print to Microsoft XPS Document Writer								
V Unspecified (1)								
Broadcom 802.11ac Wireless PCIE Full Dongle Adapter								~
Controller for PC Model: Controller for PC Category: Game controller Status: Device setup in progress								v
Search the web and Windows	(1) 🤤	📒 â 🧃			<u>^</u> (" d») 📮 📟 🕈	3:33 P 7/30/20	

• The fourth step: Click the "attribute" when popup the dialog box

	el > Hardware and Sound > Devices and Printers	✓ ♂ Search Devices and Printers
Add a device Add a printer	Remove device	• •
Devices (3)		
	Game Controllers	
	These settings help you configure the game controllers installed on your computer.	
DESKTOP-RC7S0 Generic SS16G KG Card	Controller Status	
Printers (3)	Controller for PC OK	
	to Advanced Properties	
Fax Microsoft Print PDF	to Auvanceu Properes	
Unspecified (1)	ОК	
Broadcom 802.11ac Wireless		
PCIE Full Dongle Adapter		
Controller for PC	Model: Controller for PC	
	tegory: Game controller Status: Device setup in progress	

• The fifth step: When popup" Controller for PC attribute "dialog box, please press the cross button/joystick/shoulder button/function buttons to test the effectiveness.

♣ Devices and Printers ← → ▼ ↑ ♣ > Control Panel > Hardware and Sound > Devices and	Printers	→ ⑦ Search Devices and Printers	×
Add a device Add a printer Remove device		•	()
v Devices (3)			^
	See Controller for PC properties		
	Settings Test		
Carne Controllers	Test the game controller. If the controller is not functioning property, it may need to be calibrated. To calibrate it, go to the Settings page.		
Controller for PC DESKT These settings help you configure the game co your computer.	Axes Z Axis		
V Printers (3) Installed game controllers			
Controller	+ Z Rotation		
Controller for PC	X Axis / Y Axis		
	Buttons Point of View Hat		
Fax Micros			
V Unspecified (1)			
78101000			
•			
Broadcom 802.11ac Wireless	OK Cancel Apply		
PCIE Full Dongle Adapter			
Controller for PC Model: Controller for PC			
Category: Game controller			
Search the web and Windows	2 📙 🛱 💷 🦔	^ *‰ 00) 同 Ⅲ 英 7/30/3	

> Switch to Xinput mode

Switch joystick mode to Dinput mode, need to move the button to left side, like below picture:




On how to test the effectiveness of the buttons is blow:

• The first step: double click the control panel



• The second step: "Check device and printer"

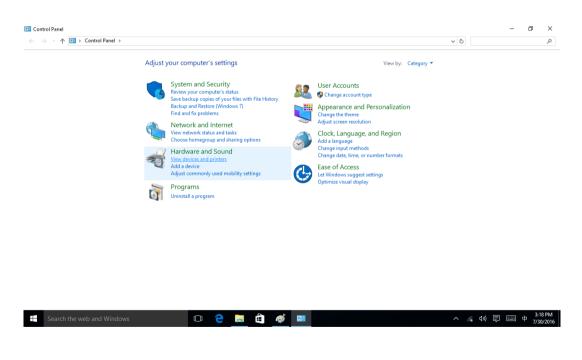

• The third step: Right click joystick icon, click "Controller for Windows"

The Devices and Printers	- 0	×
\[\] \[Search Devices and Printers	,p
Add a device Add a printer Remove device		?
V Devices (3)		^
DESKTOP-RC750 Generic SS16G SD Controller for KG Controller Mitodause		
V Printers		-1
Create shortcut		
Troubleshoot		
Properties		
Fax Microsoft Print to Microsoft XPS PDF Document Writer		
V Unspecified (1)		
Broadcom 802.11ac Wireless		
PCIE Full Dongle Adapter		~
Controller for Windows Model: Controller for Windows Category: Game controller		
🕂 Search the web and Windows 🗆 C 🗧 🛱 🛄 🕖 🔨	《 4》 🗊 📟 中 👫	41 PM 0/2016

• The fourth step: Click the "attribute" when popup a dialog box.

 	und > Devices and Printers	ڻ ~	Search Devices and Printers	P
dd a device Add a printer Remove device				•
	Controllers ×			
DESKTOP-RC7S0 Generic SS16G SD Cor KG Card V Printers (3)	ur computer. game controllers			
Fax Microsoft Print to Mic PDF Docu	Advanced Properties			
	ОК			
Broadcom 802.11ac Wireless PCIE Full Dongle Adapter				
Controller for Windows Model: Control Category: Game of				

 The fifth step: When popup a dialog box" Controller for Windows attribute", pleas e press the cross button and joystick/shoulder button/function buttons to test the eff ectiveness.

To Devices and Printer $\leftarrow \rightarrow \checkmark \uparrow$		Hardware and Sound > Devices and	l Printers	ڻ v	- 🗇	×
		nove device		• 0		0
 > Devices (3) 	ad a printer Kem		Im Controller (Controller for Win properties X Settings Test		E V	Ŷ
DESKTOP-RC750 KG	Generic SS16G SD Card	Game Controllers Game Controllers These settings help you your computer. N Installed game controllers	Text the name controller. If the controller is not functioning property it may			
Fax	Microsoft Print to	Controller Controller (Controller for Win	Y Rotation			
V Unspecified (1)	PDF					
Broadcom 802.11ac Wireless PCIE Full Dongle Adapter			OK Cancel /cply			v
		Model: Controller for Windows Category: Game controller				
Search the	web and Window	ws []]	🤤 🚍 🛱 🚥 🛷 🐢	~		42 PM 0/2016

■ Use the keyboard

Esc $\tilde{1}$ 1^{1} 1^{2} 3^{4} 5^{5} 6^{6} 7^{8} 8^{7} 8^{7}	F8 9	F9 0	10 -	F11 ()+ F	12	\boxtimes			\otimes
Tab ≬Q≬W≬E≬R≬T≬Y≬U≬I(0	P){ [)] }($)^{\dagger}$	Del) ∎, (1)
Caps ≬ A ≬ S ≬ D ≬ F ≬ G ≬ H ≬ J ≬ H	<≬।	- (0	" ()	ı ب	Enter) L3 (R3
shift ∅ Z ∅ X ∅ C ∅ V ∅ B ∅ N ∅ M	<	> (?	PgUp		Shift	间	SELECT	START
	Alt (Ctrl	Home	PgDn V	End >			PrtScn	Pause ScrLk


The keyboard is a integrated highly QWERTY keyboard. The default output for first ro w is number keys. If you want to switch to F1-F12 button/ special character just need to press the Fn/Ctrl at the same time.

PgUp/Home/PgDn/End and $\leftarrow \uparrow \downarrow \rightarrow$ buttons overlap, the default output is $\leftarrow \uparrow \downarrow$

 \rightarrow , press the Fn button to switch to PgUp/Home/PgDn/End modes.

■ Six Networking operation

• The first step: Click the Wi-Fi logo on bottom right corner of the system tray

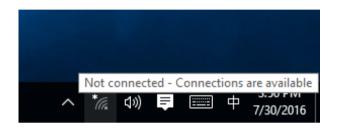

• The second step: Click to connect



• The third step: Input the pass words



- The fourth step: When the system tray display and, that means connect successfull y.
- Seven Connect to Bluetooth device operation
- The first step: Click the Start menu system




• The second step: Click the setting




• The third step: When popup the "setting", click the "device" icon.

Settings					- σ × Find a setting ρ
	System Display, notifications, apps, power	Devices Bluetooth, printers, mouse	Network & Internet Wi-Fi, airplane mode, VPN	Personalization Background, lock screen, colors	Accounts Your accounts, email, sync, work, family
	Time & language Speech, region, date	Ease of Access Narrator, magnifier, high contrast	Privacy Location, camera	Update & security Windows Update, recovery, backup	
Search the web	b and Windows	• 👌 🗮	Ê <u>ø</u> ¢		へ <i>底</i> 句》 見 (三) 英 400 PM 7/30/2016

• The fourth step: Click the "Bluetooth", start the "manage Bluetooth device"

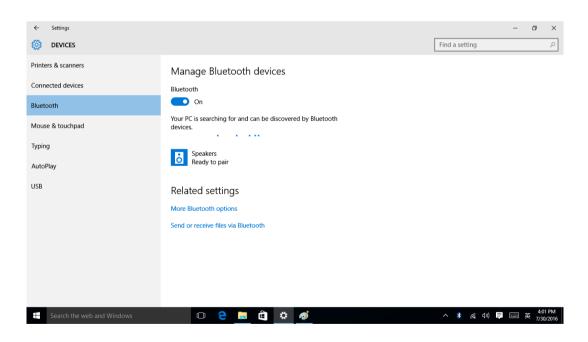

• The fifth step: If there is Bluetooth device within 10 meters around, the computer can recognize automatically, click and enter the passwords to finish Wi-Fi connecti

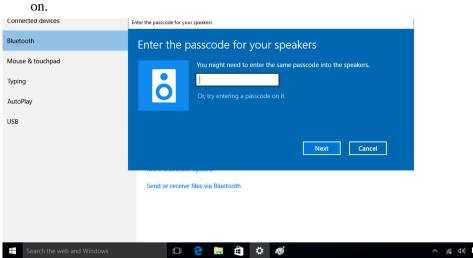

へ *í* (2 PM へ *í* (10) 同 三 英 7/30/2016

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: GPD-WIN (FCC ID: 2AJQ5GPD-WIN) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the Wrist is 0.962W/kg and when properly worn on the body is 0.640W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0mm/10mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0mm/10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 0mm/10mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.