
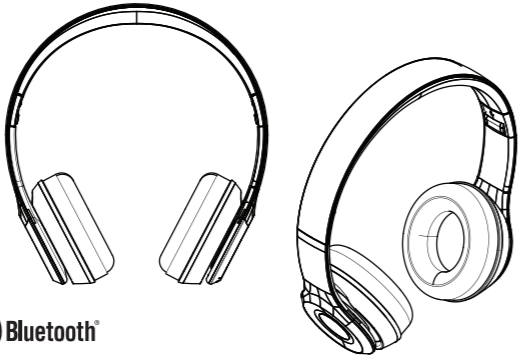


FRONT

BACK



Wireless Headset
Foldable Headphones
with On-Ear Controls



Bluetooth

©Disney
www.disney.com


USER MANUAL

DISTRIBUTED BY: QUEST USA CORP.
495 FLATBUSH AVE BROOKLYN, NY 11225


IJOY® GOJOY & IJOY ARE REGISTERED TRADEMARKS OF QUEST USA CORP. ALL OTHER TRADEMARKS AND TRADE NAMES ARE PROPERTY OF THEIR RESPECTIVE OWNERS. DESIGNED BY GOJOY & IJOY IN NEW YORK. ALL RIGHTS RESERVED QUEST USA CORP.

THE BLUETOOTH® WORD MARK AND LOGOS ARE REGISTERED TRADEMARKS OWNED BY BLUETOOTH SIG, INC. AND ANY USE OF SUCH MARKS BY QUEST USA CORP. IS UNDER LICENSE. ALL PICTURES SHOWN ARE FOR ILLUSTRATION PURPOSE ONLY. ACTUAL PRODUCT MAY VARY DUE TO PRODUCT ENHANCEMENT.

MADE IN CHINA.



• DEVICE FUNCTIONS

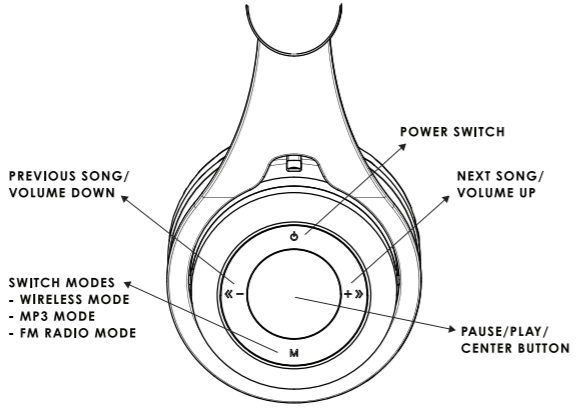

• PRODUCT SPECIFICATIONS

USB charge: DC5V/0.22A
SNR: 85dB
FM frequency: 87.5-108MHz
Wireless distance: 10 meters
Frequency: 20HZ-20KHz
Output power: 35mW
Wireless frequency: 2.402-2.480GHz
Charging time: 2 hours
Playing time: 2-3 hours at 70% volume; 4-6 hours at 50% volume
Standby time: 18 hours
Battery: 200mAh

CONTENTS:
1x FOLDABLE HEADPHONE
1x 12in CHARGING CABLE
1x MANUAL

• OPERATING INSTRUCTIONS

1. On/Off
- Long Press the ϕ for three seconds to turn the device on or off.

2. Answering/Refusing Calls
- When receiving calls in wireless mode, short press center button to answer the call.
- Long press the center button to refuse the call.
- Hit the center button twice to redial.

3. Play/Pause
- Short press the center button to play music.
- Short press the center button while music is playing to pause.

4. <<- Wireless Mode/FM Mode:
- Short press <<- to go to the previous track.
- Long press <<- to decrease the volume.

5. +>> Wireless Mode/FM Mode:
- Short press +>> to go to the next track.
- Long press +>> to increase the volume.

6. M
- Short press **M** to switch modes between **Wireless/MP3/FM Radio**


• BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substances. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of the reach of infants and small children.

• BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

• IMPORTANT REMINDERS



This device can ONLY be charged by 5V adapter/ USB ports only. Quick charging devices over 5V may cause heat and fire.

• OPERATING INSTRUCTIONS

7. LED Indicator
Wireless Mode
- While pairing, the blue LED light will quickly flash.
- Once paired, blue LED light will slowly flash.
MP3 Mode
- Blue LED light will flash slowly while playing.
FM Mode
- Blue LED will be lit when listening a radio connection is established.
- The LED will flash when searching for radio connection.

8. Connecting to an Audio Jack
- Plug in an aux-in cable to the aux plug-in port to enjoy the music directly. All button functions will stop working under aux mode.
- Supports mobile phone/iPod/MP4/MP3/CD/PC, etc.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

• FCC STATEMENT 2AJQ7-DSNCHP

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

PLEASE FOLD ON THE GREEN LINES AND PRINT DOUBLE SIDED. DO NOT PRINT GREEN LINES