

#### FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. RF Exposure Information
  The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

# YOUR IJOY PRODUCT

Thank you for purchasing and using the "JOY AURORA LANTERN SPEAKER" This product can provide high quality listening and enjoyment for mobile phone, computer and multimedia. Before using this product, carefully read this manual to correctly manipulate and play its best performance. Please ask your local dealer or call us if you have any questions

# PACKAGE CONTENTS

LIOY AURORA LANTERN SPEAKER X 1 AUX Cable X1 Charging Cable X 1 User Manual X 1

# •PAIRING YOUR PRODUCT

- ace device within 30 ft of bluetooth enabled device 2. Hold the 🕚 button to turn on the speaker. You will hear a 'beep' sound. The speaker body will light up, indicating that it is ready to pair,
- 3. Follow the instructions of your device to search for the device. 4. The bluetooth pairing name is "IJOY AURORA"

"IJOY AURORA" to match to both speakers.

- 5. Press the LED mode button  $\mathring{\mathbb{Q}}$ , to choose from 10 options of of flashing LED lights 6. For pairing with two AURORA speakers: turn on both speakers and hold down the LED mode button 0, until a "beep" sound is heard. Both speakers will now be in TWS (True Wireless Sound) mode. Open your mobile phone and choose

# **•BATTERY CAUTION**

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Never dissasemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substance. Always confirm that the temperature is 5 degrees Celsius before you change the battery. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct sunlight or fire. Never use the battery pack in an unventilated vehicle where excessive internal temperatures may be encountered. Always keep the battery out of reach of infants and small children.

# \*BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died and you do not want us to replace your battery, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

# •DEVICE FUNCTIONS

1 Light Mode Switch

Long press: TWS connection 2 Short press: Previous song

3 Short Press: Pause / Play / Hand free Calling

4 Short press: Next song

Long press : Volume increse

5 ON/OFF Switch Mode(s) Switch: Wireless / FM/TF


6 Charging port

7 LED Indicator

8 Micro SD (TF) Card Slot

9 AUX Input

10 USB Flash Drive Slot

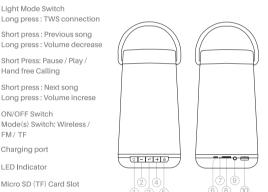

# •INSTRUCTIONS

Please ensure that your device (Mobile Phone, Tablet or other devices) is paired with the Wireless Speaker to stream music wirelessly. Once it is paired, play music from your device

Function	Operation buttons
Increase Volume	Long press + key
Decrease Volume	Long press - key
Play	Short press ►in key
Pause	Short press ► ii key
Previous song	Short press - key
Next song	Short press + key
	Increase Volume  Decrease Volume  Play  Pause  Previous song

Handsfree Mode	Function	Operation buttons
Incoming Call	Answer incoming call	Short press ►in key
Incoming Call	Reject incoming call	Long press ⊾n key
Incoming Call	End the Call	Short press ⊾n key
ON the line	Increase Volume	Long press + key
ON the line	Decrease Volume	Long press - key

# SPECIFICATIONS

Wireless Version / Wireless Distance	5.0+ EDR / up to 10 Metres
Output Power / Horn Type	1 x 5 Watts / 4 0 57mm
FM Frequency Range	87-108MHz
Unit Size	185*95*80mm
Power Input	DC 5V ( 1.0 A )
Charging Time	2 - 3 hours
Play time	up to 2-3 hours
Built-In Rechargeable Battery	3.7V / 1200 mAh
Micro SD (TF) Card/USB Drive	Support up to 32GB
Multiple Functions	Wireless Play / FM Radio / USB Drive / Hands-Free Call / TF card / AUX Input / TWS Connection / LED Colorful Lights

# •FM RADIO MODE INFORMATION

to a USB port.

To use your AURORA speaker for FM Radio Mode, please follow the instructions below.

- 1. Turn on the 🐧 button and quick press to switch to FM radio mode, 2. Press the Dutton to begin scanning for channels
- 3. Once you find a a desired station channel, press the
- button again to save the channel. 4. Press the volume and volume buttons to change station
- channels. 5. If a radio frequency can't be heard, plug in the USB cord to the speaker. The cord will act as an antenna to search for stations. There is no need to plug in the other side

# ·LIMITED LIFETIME WARRANTY

Our product is warranted for a limited lifetime warranty from the date of purchase. The warranty is provided on all material defects and workmanship. Guarentee of 24 months does not apply to decrease in the accumulators effective capacity caused by its use or age. Effective capactity gradually decreases depending on the method of use of the accumulator. WE RESERVE THE RIGHT TO CHANGE TECHNICAL **SPECIFICATIONS.** For more information please visit, www.goijoy.com

Tip: Must choose the formal manufacturer certified charger, output voltage of 5v. If the product is not in use for a long time, please charge it.

QUEST USA CORP. 495 Flatbush Ave Brooklyn, NY 11225

© GOIJOY & IJOY are registered trademarks of QUEST USA CORP. All other trademarks and trade names are property of their respective owners. Designed by GOIJOY & IJOY in New York. All rights reserved QUEST USA CORP. Brooklyn, NY. Limited lifetime warranty. To activate your product warranty go to our website www.goijoy.com & register this product.

Made in China.