### PRINT ARTWORK ON DIRECTLY ON PAPER. **DO NOT PRINT RED FOLD AND CUT LINES.** OPEN USER MANUAL DIMENSIONS: 6.46"W x 5.5" H

enabled devices

I FOLD LINE **CUT LINE** FRONT BOOM X I İJOY ijoľ DISTRIBUTED BY QUEST USA CORP. 495 Flatbush Ave Brooklyn, NY 11225 © GOIJOY & IJOY are registered trademarks of QUEST USA CORP. All other trademarks and trade names are property of their respective owners Designed by GOIJOY & IJOY in New York. All rights reserved QUEST USA COPP for use with USER MANUAL Bluetooth Made in China

#### •YOUR IJOY PRODUCT

Thank you for purchasing and using the LED WIRELESS "IJOY BOOM X" SPEAKER. Before using this product, carefully read this manual to in order to operate at maximum benefit. Please ask your local dealer or call us if you have any questions.

IJOY BOOM X x 1 Charging Cable x 1 User Manual x 1

#### •PRODUCT SPECIFICATIONS

BLUETOOTH VERSION: 5.1V BLUETOOTH CONNECTING RANGE: UP TO 10 METERS DRIVER UNIT: **0**66MM, 40 10W OUTPUT POWER: 10W X 2 BATTERY CAPACITY: 2400MAH PLAYTIME: 3-5 HOURS FREQUENCY RESPONSE RANGE: 85HZ-20KHZ PRODUCT SIZE: 245X106X108MM

#### BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substances. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of the reach of infants and small children.

#### •BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics railers now recycle batteries and other electronic components at no charge.

# BACK

#### •FEATURES

How to pair under Bluetooth Mode: Turn on the speaker, the RGB light will tun on at the same time. The machine enters the search pairing state.

Find the pairing name "IJOY BOOM X" from your list and connect it. The speaker will be issued a successful tone to indicate the device has been connected successfully.

Note: The speaker will be automatically connected to the previous connected phone when power on.

FM Radio Mode:

After power on the speaker, short press the "M" button to switch to FM radio state. In FM mode, long press the "Play/Pause" button to search station automatically, short press to stop searching. Short press '+" or "-" buton to change the stored FM channel. Long press '+" or "-" buton to adjust volume up and down.

SD card Mode: After power on the speaker, insert the memory card you wish to listen to into the TF card slot, press play to begin media playback.

USB Mode: After power on the speaker, insert the USB flash drive you wish to listen to into the USB port, press play to begin media playback.

#### **•OTHER IMPORTANT SAFETY INFORMATION**

Disposal of old electronic & electronic equipment (Applicable in the European Union and other European Counties with separate collection systems) The trash can symbol (seen on the bottom) on the production indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.

#### WARNING

At full volume, prolonged listening may lead to a ruptured eardrum (temporary or permanent deafness, hearing drone, tinnitus, hyperacusis). Please listen at a medium-low volume and no more than one hour a day

Please insert the proper battery needed correctly to prevent explosion.

 
#### Hand free calling Function

- Answer call: When receiving a call, click the play/pause button to answer the call. Hang up call: When call ends, click the play/pause button to hang up the call. Reject call: If you don't want to answer an incoming call double-click the
- play/pause button to reject the call.
- Last number redial: While on standby or playing music, double-click the play/pause button to dial the last number in your call log.

#### How to charge:

- Please charge your speaker fully before first use. And when the Bluetooth speaker battery power is low, it will issue a low battery tone, then please charge it in time. The charger is not included in the accessories. Please use the universal 5V/0.5A charger to charge this device.
- Power off the speaker, put the provided charging cable into the charge slot of unit, connect the other end to PC or other charger with DC 5V output (When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may not be able to afford the high current temporarily under the maximum volume)
- When charging, the red charging indicator turn on. When fully charged, the red indicator light will turn off.
- In order to prolong the life of battery, please do not charge more than 8 hours.





2 Charging

XX



8

Search and store (fast flickering)

Listening the radii (dow flickering)

O





## FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

□ Reorient or relocate the receiving antenna.

 $\hfill\square$  Increase the separation between the equipment and receiver.

□ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

□ Consult the dealer or an experienced radio/TV technician for help.

## **RF warning statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.