FRONT



•BATTERY CAUTION

Mini Bluetooth Earbuds X 2 Charging Case X 1 USB Charging Cable X 1 User Manual X 1

·SPEC

- Model: IJFTW01 Chipset: JL 6963
- Bluetooth Version: V 51 • Earbuds battery: 300mah + 35mah*2
- Play time: 2-3 hoursBluetooth Distance :10 M
- Driver Size: 10mm
- Charging port: LightningCharging time: 1.5 hours

BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Neve dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge,

pose the battery to excessive heat such as direct light or fire. Always keep the battery out of the reach of infants and small children,

BACK

PAIRING YOUR PRODUCT •INSTRUCTIONS Press the button on the back of the case. You POWERING ON/OFF should see blue lights flashing from the case. Press the button on the back. Blue lights should lit from the case. Open the case and take the earbuds out. You Take the earbuds out. Blue and red lights should be flashing from the should see blue and red lights flashing from earbuds. If this does not work, try charging the case with the earbuds inside. Connect the USB charger to the port on the bottom of the case Enable Bluetooth® on the device you want to connect the earbuds to and connect your deand a power source. The earbuds will turn off automatically after being disconnected from vice to IJOY BUDZ, SKIPPING TRACKS **DEVICE FUNCTIONS** To play the last song: tap • twice, To play the next song: tap twice, ANSWERING/ENDING PHONE CALLS CALL FUNCTION To answer or hang up the phone: tap either • To answer or hang up the phone: tap either • or • once. • or • once. To use intelligent voice assistant: Press and CHARGING The earbuds will automatically charge when inside the case. hold either 0 or 9 for 2 seconds Place the earbuds inside the case and close the case. Use the USB ADJUSTING VOLUME AND CONTROLLING charging cable provided and connect it to the port on the bottom of MUSIC PLAYBACK To play or pause music: tap either • or • the case and a power source to charge both the case and the earbuds. To play the last song: tap • twice, To play the next song: tap twice. To increase the volume: tap 9 three times, To decrease the volume: tap **0** three times.

OTHER IMPORTANT SAFETY INFORMATION

To avoid danger of choking, please keep cables away from babies and children. This product is not a toy. Do not treat this product as household waste. Dispose of this device properly by handing it over to local collection services for recycling of electronic equipment. By ensuring that this product is properly disposed of, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling, For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.

•LIMITED LIFETIME WARRANTY

Our product is warranted for a limited lifetime warranty from the date of purchase. The warranty is provided on all material defects and workmanship. Guarantee of 24 months does not apply to decreases in the effective capacity caused by its use or age. WE RESERVE THE RIGHT TO CHANGE TECHNICAL SPECIFICATIONS. For more information please visit, www.goijoy.com,

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference

that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The

device can be used in portable exposure condition without restriction.

Consult the dealer or an experienced radio/TV technician for help.

PLEASE FOLD ON THE GREEN LINES AND PRINT DOUBLE SIDED. DO NOT PRINT GREEN LINES