


# FRONT

# BACK

## ijoy DICE

EARBUDS WITH CHARGING CASE

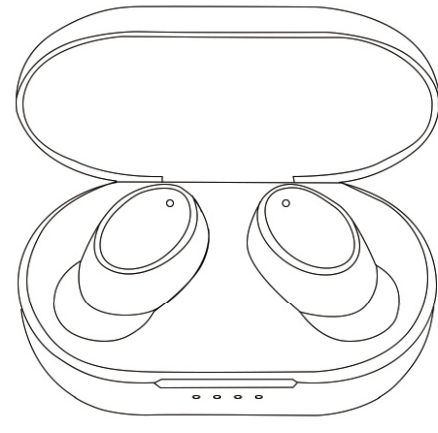

IJEBDE01 for use with Bluetooth enabled devices

USER MANUAL

## ijoy

Quest USA CORP  
495 Flatbush Ave.  
Brooklyn, NY 11225

© Gojoy & IJOY are registered trademarks of Quest USA Corp. All other trademarks and trade names are property of their respective owners. Designed by GOIJOY & IJOY in New York. All rights reserved. Limited lifetime warranty. To activate your product warranty, go to our website [www.gojoy.com](http://www.gojoy.com) & register this product.

Made in China.

### •YOUR IJOY PRODUCT

Thank you for purchasing and using the "IJOY DICE" wireless Bluetooth® earbuds with case. This product can provide a high quality listening experience for your mobile phone, computer and other media devices. Before using this product, carefully read this manual to correctly operate this device. Please ask your local dealer if you have any questions.

DICE Bluetooth® Earbuds X 2  
Charging Case X 1  
Charging Cable X 1  
User Manual X 1

### •SPECS

Bluetooth® version: 5.0  
Operating distance: 32 ft  
Earbud battery: 40mAh  
Charging case battery: 300mAh  
Playtime: Up to 10 hours  
Charging time: 1 hour for earbuds, 2 hours for charging case  
Frequency: 20-20000 Hz  
Impedance: 32Ω

### •BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substances. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of the reach of infants and small children.

### •BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.


### •DEVICE FUNCTIONS

#### CALL FUNCTION

- Answering a call: Press 1 or 2 once
- Ending a call: Press 1 or 2 once
- Reject a call: Press and hold 1 or 2 for 2 seconds
- Wake up intelligent voice assistant: Press and hold 1 or 2 for 2 seconds

#### ADJUSTING VOLUME AND CONTROLLING MUSIC PLAYBACK

- Play/Pause Music: Press 1 or 2 once
- Decrease volume: Press left earbud twice
- Increase volume: Press right earbud twice
- Play previous song: Triple click left earbud
- Play next song: Triple click right earbud

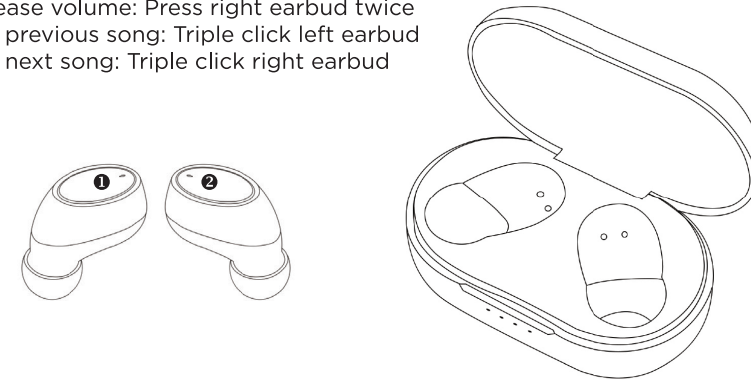

### •INSTRUCTIONS

#### POWERING ON/OFF

- The earbuds should automatically turn on when you remove them from the charging case. If they do not, press 1 or 2 for 5 seconds. Lights should flash.
- To turn the earbuds OFF, press 1 or 2 for 5 seconds until the lights turn off or just put them inside the charging case.

#### PAIRING YOUR PRODUCT

- Take the two earbuds out of the case. They should automatically power on and the left and right earbuds will enter pairing mode. When one's LED light turns off and the another one's red light flash, the earbuds have successfully connected to each other.
- Place the earbuds within 32 ft of a Bluetooth® enabled device. Enable Bluetooth® on the device you want to connect the earbuds to and search for "IJOY DICE". Select "IJOY DICE" to connect. The earbuds will automatically connect to this same device next time both items are turned on.

#### CHARGING

- The charging case offers additional power for the earbuds.
- Use the charging cable provided to charge the charging case. Connect the cable to the port of the case.

Tip: The formal manufacturer certified charger must be chosen, output voltage of 5v. If the product is not in use for a long time, please charge it.

### •OTHER IMPORTANT SAFETY INFORMATION

To avoid danger of choking, please keep cables away from babies and children. This product is not a toy. Do not treat this product as household waste. Dispose of this device properly by handing it over to local collection services for recycling of electronic equipment. By ensuring that this product is properly disposed of, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.



### •LIMITED LIFETIME WARRANTY

Our product is warranted for a limited lifetime warranty from the date of purchase. The warranty is provided on all material defects and workmanship. Guarantee of 24 months does not apply to decreases in the effective capacity caused by its use or age. WE RESERVE THE RIGHT TO CHANGE TECHNICAL SPECIFICATIONS. For more information please visit, [www.gojoy.com](http://www.gojoy.com).

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

### •FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PLEASE FOLD ON THE GREEN LINES AND PRINT DOUBLE SIDED. DO NOT PRINT GREEN LINES