

ijoy ORB SPEAKER



WIRELESS SPEAKER
USER MANUAL

for use with
 **Bluetooth**
enabled devices

INSTRUCTIONS

1. **MODE**
Press once for switching BT, TF card and USB Mode.
2. **+||◀**
Play the previous music under BT, TF Card and USB Mode. Play previous radio station under FM mode. Short press play previous radio station, long press to reduce volume under FM mode.
3. **||**
Press once for music play/pause
Short press for radio station automatic searching under FM mode.
4. **▶||**
Press once to skip to next song under BT, TF card and USB mode. Press once to play next radio station under FM mode. Hold for 3 seconds to increase volume under FM mode.
5. **DC 5V**
For charging, plug in the charging cable to an outlet
Once charging, the and LED indicator will light up
6. **AUX**
Aux IN can connect to PC, MP3 and WAV format music in U Disk
9. **TF CARD PORT**
Supports USB and can play MP3 and WAV format music in CARD
10. **MIC**
Plug the microphone input the port to enjoy your favorite music
11. **BLUETOOTH MICROPHONE**
-Power on the product or press MODE button to enter into mode.
-Open mobile devices (cell phones, computers, ect.) in BT mode search for BT devices, when It appears the item pairing name will be IJOY ORB).
-After the device has been paired successfully for the first time, it will take 10 seconds to connect automatically to the device that was previously connected. (Note: Each product can only connect to one bluetooth device at a time.)

DEVICE SAFETY

- Your Wireless Speaker has an internal rechargeable battery. Improper usage may result in the speaker becoming hot, igniting por bursting and causing injury if exposed to conditions of abuse.
Do not disassemble, throw away or damage the speaker.
Store speaker in a dry place, keeping environments such as salt air.
Keep the speaker away from direct sunlight, fire and high voltage equipment. Do not store the speaker inside a car during hot weather.
Remember, a closed car acts as a green house allowing the inside to reach high temperatures.
The speaker is not a toy. Please keep it out of the reach of children.
Please do not discard the speaker.
Consult your local waste collection agency for proper disposal or recycling methods.

Charging The Battery

1. Plug the charger cable into the charge port.
2. Connect the charger to a USB power source. The red indicator light will display during charging. If charging does not start, disconnect the charger and plug it in again, and retry. Charging the battery fully may take 3.5 hours.
3. When the battery is fully charged, the red indicator light will turn off. Disconnect the charger from the USB power source and the speaker. The fully charged battery has power for 4 hours of music time.
4. Important! To prevent a complete discharge of your speaker's battery, charge it up at least every six months.

FCC ID STATEMENT

FCC ID: 2AJQ7ORB

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

YOUR IJOY PRODUCT

Thank you for purchasing and using the "IJOY ORB" SPEAKER. This product can provide a high-quality listening experience for your mobile phone, computer and other media devices. Before using this product, carefully read this manual to correctly operate this device. Please ask your local dealer if you have any questions.

PACKAGE CONTENTS

- a.) 1 x IJOY ORB SPEAKER
- b.) 1 x User Manual
- c.) 1 x Charging Cable

SPECIFICATIONS

Bluetooth specification: Bluetooth5.0
Wireless transmission range: 10M
Audio noise ratio: ≥ 80dB
Battery capacity: 800mAh
Built-in voltage: 3.7V
Normal volume: around 3H
Speaker specifications: ∅45mm
Speaker power: 5W
Frequency response: 150HZ-18khz
Charging voltage: 5V/500mA

Function: BT/USB/TF/FM/TWS/ full-screen colorful lights and support line-in MIC port (wired microphone not included)
dimensions of 6.5inch height and 6inch width

BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substances. Always confirm the temperature is 41° Fahrenheit before you change the battery. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of the reach of infants and small children

OTHER IMPORTANT SAFETY INFORMATION

To avoid danger of choking, please keep cables away from babies and children. This product is not a toy. Do not treat this product as household waste. Dispose of this device properly by handing over to local collection services for recycling of electronic equipment. By ensuring that this product is properly disposed of, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for speaking and listening to music



Distributed by QUEST USA CORP.
495 Flatbush Ave Brooklyn, NY 11225

© GOIJOY & IJOY are registered trademarks of QUEST USA CORP.
All other trademarks and trade names are property of their respective owners.
Designed by GOIJOY & IJOY in New York. All rights reserved QUEST USA CORP.

Made in China.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by QUEST USA CORP. is under license. Other trademarks and trade names are those of their respective owners.



IMPORTANT REMINDERS

This device can ONLY be charged by 5V adapters/ USB ports only. Quick charging devices over 5V may cause heat and fire.

FRONT

BACK