

PRINT ARTWORK ON DIRECTLY ON PAPER.

**DO NOT PRINT RED FOLD AND CUT LINES.** OPEN USER MANUAL DIMENSIONS: 6.46"W x 5.5" H



FOLD LINE



CUT LINE

## Front

**ijoy**

**WIRELESS SPEAKER**  
**POWER HOUSE**

FCC ID: 2AJQ7POWERHOUSE  
MODEL: IJ10093-VW



**ijoy**

QUEST USA CORP.  
495 Flatbush Ave Brooklyn, NY 11225

© GOIJOY & IJOY are registered trademarks of QUEST USA CORP.  
All other trademarks and trade names are property of their  
respective owners.  
Designed by GOIJOY & IJOY in New York. All rights reserved QUEST USA  
CORP.

Made in China.

**USER  
MANUAL**

for use with  
 **Bluetooth**  
enabled devices

### •YOUR IJOY PRODUCT

Thank you for purchasing and using the "IJOY POWER HOUSE" LED Wireless Speaker. This product can provide a high quality listening experience through phones, computers, and multimedia. Before using this product, carefully read this manual to in order to operate at maximum benefit. Please ask your local dealer or call us if you have any questions.

IJOY POWER HOUSE SPEAKER x 1  
Charging Cable x 1  
User Manual x 1

### •PRODUCT SPECIFICATIONS

- OUTPUT POWER: 5W X2
- FREQUENCY RESPONSE: 100HZ - 18KHZ
- SNR: >80DB
- THD: <10%
- BATTERY: 1200MAH RECHARGEABLE BATTERY
- POWER SUPPLIED: POWER ADAPTER 5,0V/1A

### •BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substances. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of the reach of infants and small children.

### •BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.


## Back

### •FEATURES

- 1.MODE**  
Short press to switch mode among BT/USB/TF/AUX. Long press to on/off LED light.
- 2.⏮**  
Short press to play the previous music under BT/USB/TF/AUX.
- 3.VOLUME**  
Rotate the knob in the front to control volume.(Turn left to decrease and turn right to increase.)
- 4.▶||**  
Short press for music play/pause. Double click play/pause button, then turn on/turn off TWS. Long press "Play/Pause" button to auto-search all stations among frequency 87.5MHz-108MHz. After few minutes, the searching will be finished and you could press "next" or "previous" button to switch stations. The latest station you choose will be memorized. When enter mode next time, it will be enter the station automatically.
- 5.▶▶**  
Short press to play the next music under BT/USB/TF/AUX.
- 6.DC 5V**  
Insert a charging cable(Android type) to charge the machine.
- 7.AUX**  
Connect a aux device with a 3.5 mm audio cable to enter aux mode.
- 8.OFF/ON**  
Speaker power off / Speaker power on.
- 9.USB PORT**  
Insert an USB drive to play musics.(Ultimate 32G, support MP3 format files)
- 10.TF CARD PORT**  
Insert a TF card to play musics.(Ultimate 32G, support MP3 format files)
- 11.BLUETOOTH CONNECTION**  
Switch the machine into BT mode. Open bluetooth in smartphone/bluetooth device. Search and connect the machine in the smartphone/bluetooth device. When a prompt voice sounds, BT is connected successfully. (The machine will memorize the machine who is connected last time and will connect to it automatically when in BT mode.)
- 12.** Insert a microphone(6.35mm) to the mic jack to enter mic function.

### •OTHER IMPORTANT SAFETY INFORMATION

Disposal of old electronic & electronic equipment (Applicable in the European Union and other European Counties with separate collection systems) The trash can symbol (seen on the bottom) on the production indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.

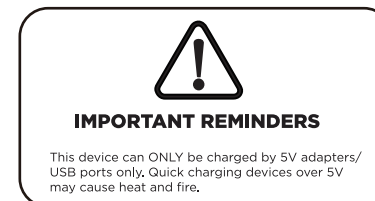

### •FCC ID STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
  - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.