
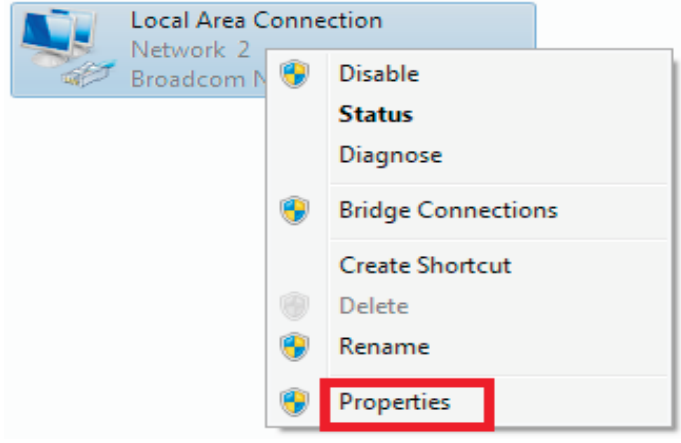

Quick Installation Guide

Wireless Router




1. Computer Setting (Windows 7)


1) Click: " [Start] — [Control Panel] — [Network and Internet] — [Network and Sharing Center] — [Change adapter settings] — [Local Area Connection] ", select the connected network card, Then right click "Local Area Connection", select [Properties]



2) Select [Internet Protocol Version 4 (TCP/IPv4)] , click [Properties]

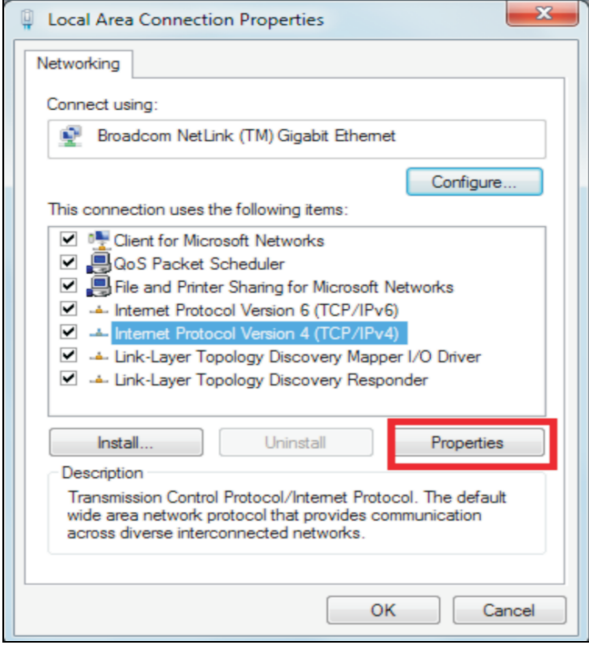


3) Select [Obtain an IP address automatically] . [Obtain DNS Server address automatically] , click [OK] . Return back to the previous interface and click [OK] .

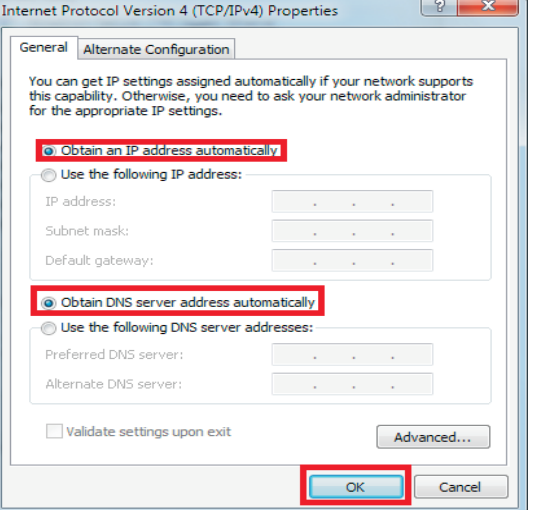

2. Router setting


1. Open the browser, input and connect: http://192.168.1.1. Click "GO".


2. Input the username and password on the login screen (the default username and the password are admin).

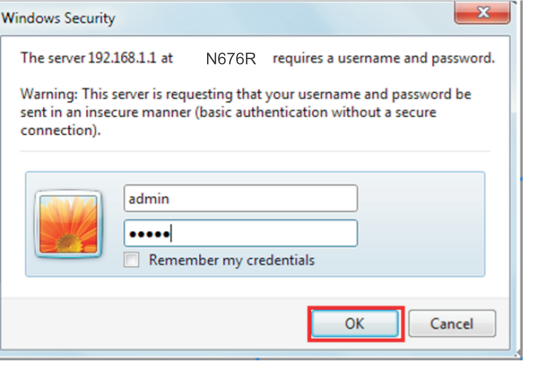

Click "OK"

3. Router Management screen will appear (Router default routing mode)




Quick Installation Guide

4 Set your router network name (SSID) and password

Service Set Identifier (SSID): JCG-000014
Pre-Shared Key: 0k0k0k0k

5. WAN Interface Setup

Method 1: Automatic obtain (DHCP)

WAN Connection Type: Fixed IP Auto Config (DHCP) PPPoE Dial-up
Host Name: JCG-000013
Clone MAC Address: 00:00:00:00:00:00 | 00:00:00:00:00:00

Method2: Fixed IP
If you choose the fixed IP connection, the static IP settings page will appear, show in, enter the IP address, Subnet Mask, Default Gateway and DNS.

WAN Connection Type: Fixed IP Auto Config (DHCP) PPPoE Dial-up
IP Address: 172.1.1.1
Subnet Mask: 255.255.255.0
Default Gateway: 172.1.1.254
Domain Name Server (DNS): 0.0.0.0
Clone MAC Address: 00:00:00:00:00:00 | 00:00:00:00:00:00


Method3: PPPoE connection
If you use the PPPoE(ADSL)connection, the PPPoE settings page will appear Show in, please enter the user name and the password provided by your ISP.

WAN Connection Type: Fixed IP Auto Config (DHCP) PPPoE Dial-up
User Name: pppuser
Password: *****
Clone MAC Address: 00:00:00:00:00:00 | 00:00:00:00:00:00


Choose your best WAN connection, then click "save/apply."

3.wireless connection: (for example with Windows Windows 7)


1. Click "Start—Control Panel—Network and Internet—Network and Sharing Center—Change adapter settings—Wireless Network Connection", Then right click "Wireless Network Connection", select "Connect/Disconnect".

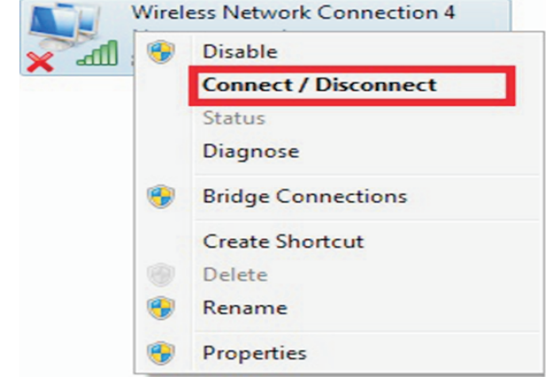


2. Select the wireless network name (SSID) in the wireless network list, click "Connect."

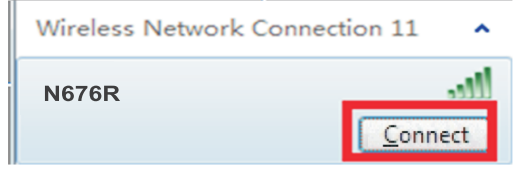

3. Enter Wi-Fi key, click "OK."
Note: the default SSID and Network Key is on the product label on the bottom

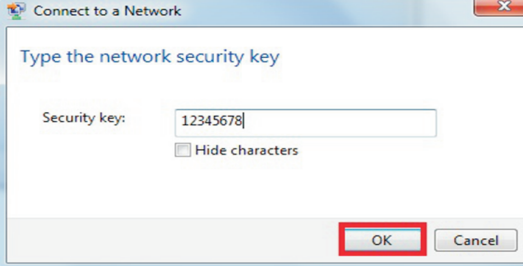

4. Connection is successful.

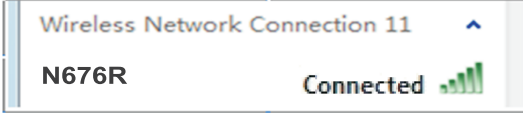

4. FAQs

4.1 How to reset to defaults?
Keep pressing the Reset button near to the wan port and gurantee the device is in power, releasing it after 5~10 seconds.

4.2 Laptop can not search out the wifi signal?
a. If your laptop is with built-in wireless adapter, please confirm that the wireless adapter is working or not.
b. Check the wireless service in the laptop is open or not. Methods is as follows: Right-click "my computer", choose "management", then choose "service and application", check the "wireless Zero Configuration" in the "Service" page. If the stage is not open, please right-click "wireless zero configuration" and click "open". If the open type shows it is forbidden, please right-click and choose the attribute, change the open type to automatic, then change the state to open.
c. Confirm the wireless function of Router is opening.
d. Check the driver of the wireless adapter in the device manager is successfully installed or not.

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.