

115mm

90mm

Technical Parameters :

Applicable platform : PlayStation®Classic Console
 Power supply: 2 x AA batteries (Not included)
 Search for pairing current : ≤30mA
 Low electric alarm voltage : 2.3V±0.1V
 Working current : ≤20mA
 Sleep current : ≤35uA
 Connection method : RF 2.4G Wireless connection

PRECAUTION AND MAINTENANCE

1. Store in a cool, dry & dust free area.
2. Do not store in areas of extreme low temperatures (0°C) or high (40°C).
3. Avoid direct sunlight and heat sources.
4. Do not allow the product to get wet or dirty; doing so may cause damage.
5. Do not clean with benzene, paint thinner, acetone, alcohol, or other solvents.
6. Do not take the product apart; doing so will void your warranty and may cause electrical shock or damage to internal components.
7. Please help to conserve the environment by recycling the cardboard packaging of this product.
8. This product should NOT be disposed of in normal household waste. It should be disposed of separately. Please take it to an electrical waste collection point.
9. Please do not put the product under extreme pressures.



PlayStation®Classic and PlayStation are registered trademarks of Sony Interactive Entertainment Inc. SONY is a registered trademark of Sony Corporation. Although this product is compatible with SONY® or PlayStation® related products, this product is not licensed, authorized or endorsed by those companies, or their related entities.

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and
 (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

YÖK

Wireless Controller

For PlayStation® Classic
 M/N: EB678

USER MANUAL

Contents:

 
- 1 x Wireless Controller
- 1 x USB Dongle
- 1 x Manual

Requires:


2 x AA batteries (Not included)

Product Description :

Full function wireless (RF) controller for use with the Sony PlayStation®Classic Console.

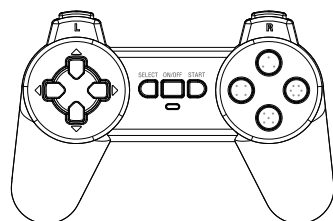

Playstation Classic Wireless Controller

 

Playstation Classic Wireless Dongle

Installing Batteries:

1. Remove the battery door from the back of the controller
2. Place the 2 x AA Batteries into the controller ensuring they are placed in the controller correctly
3. Close the battery door on the controller

 
Set Up:

1. Insert the USB Dongle into one of the USB Controller Ports in the front of the console

2. Press the ON/OFF button on the controller – The LED indicator will flash slowly
This controller and dongle have been paired and ready for use already. If the controller can't direct connect to the dongle, please follow the following steps to pair:
3. Press the “:” function button and “▽” on the D-pad at the same time for a few seconds - The LED indicator will flash quickly. (The controller is now in pairing status mode and will pair with the dongle automatically)
4. When pairing is complete the LED indicator will stop flashing and remain “ON”
5. The controller is ready for use

NOTE: If the pairing has been unsuccessful after a period of 40 seconds, the controller will turn off. Please repeat steps 2-5.

Button and function instruction : PlayStation®Classic

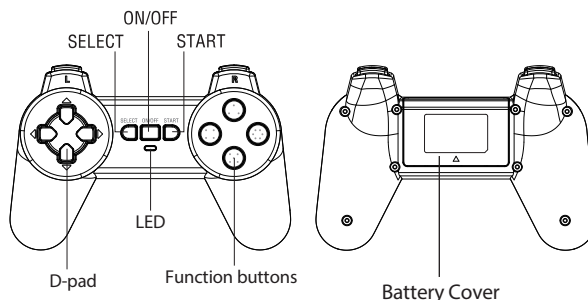

Button Name	Button Function
	Menu page operation and character movement in game.
	Menu page operation and character movement in game.
	Menu page operation and character movement in game.
	Menu page operation and character movement in game.
SELECT	Select button, select and operate game type in the game menu
START	Game start button, press this button to enter the selected game
ON/OFF	Power button
	Function button
	Function button
	Function button
	Function button
	Function button
L1/L2 button	Function button
R1/R2 button	Function button

Low Battery LED Warning:

The controller includes a low battery warning LED. When the batteries are getting low and need replacing the LED will begin to flash slowly.

NOTE: Please replace the batteries immediately to avoid damage to the controller.

Sleep Mode:

The controller will auto into sleep mode when not any action in 3 minutes. Press "ON/OFF" button to wake up the controller.