
正面

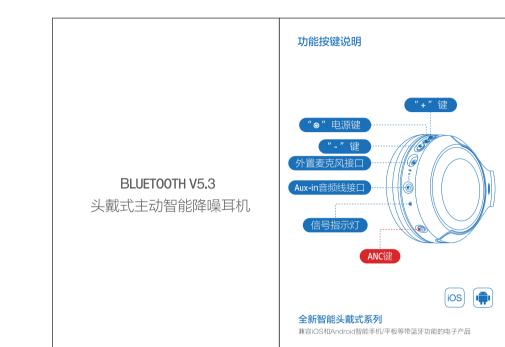

轻松配对

点击并完成配对

1 将耳机从包装盒里拿出来佩戴好 ② 长按电源键 "◎"2秒,听到出现中文提示音,则开机成功

降噪模式 【长按】 "ANC"键2秒 循环切换"音乐模式/降噪模式/环境音模式

媒体操作 增加音量: 【短按】"+"键, 音量递增一个音阶, 最大音量时"流 降低音量: 【短按】 "-" 键,音量递减一个音阶,最小音量时 "? 上 一 曲: 【长按】2秒 "-" 键 下 一 曲: 【长按】2秒 "+" 键 播 放:【单击】电源键"◎" 暂 停:【单击】电源键"◎" 唤醒语言助手:【三击】电源键"◎"

拒接电话: 【长按】2秒电源键 " ◎ "

游戏模式 开启游戏模式:【三击】"ANC"键,听到提示音则成功进入流

关闭游戏模式: 【三击】"ANC"键,听到提示音则成功退出游戏机 3 打开手机蓝牙功能,在配对页面上,搜索设备:iKF-King Pro, 通话操作 接听来电:【双击】电源键" @ "

> 重新配对 关机状态下长按电源键 " ◎ " 5秒,强行进入配对状态。出现 语音提示则出现配对成功,指示灯白绿交替闪烁

注: 如有必要,请关闭耳机后重复上述步骤重新连接

开机:【长按】电源键"◎"2秒,出现中文提示音 关机:【长按】电源键"◎"3秒,出现中文提示音

LED指示灯状态 开机状态:指示灯白绿交替闪烁 关 机 状 态: 指示白灯堂亭2秒 连接上设备:均无提示灯 充电状态:电源指示灯红灯常亮 满 电 状 杰: 电源指示灯红灯熄灭

低电状态: 低电时语音提示一次 来电状态: 来电时,同步提示手机铃声,如果手机不支持同步 铃声,提示音"滴滴滴滴滴滴滴",LED指示灯绿灯隔10秒亮一次。 查看当前电量

开机后,【单击】ANC键,亮2秒电量状态显示灯 100%~75%绿灯慢闪4下 74%~50% 绿灯慢闪3下 49%~25% 绿灯慢闪2下 <24% 绿灯慢闪1下

插入后,自动切换外置麦克风,通话声音更大,更清晰。 *麦克风功能只在蓝牙模式下生效

注: 出现红灯时请及时给产品进行有线充电

3.5mm音频线,插入Aux-in线(音频线),蓝牙功能自动关闭,切换到Aux-in播放。

使用ANC主动降噪功能小提示 开启英文模式: 【四击】 "ANC"键,听到三下提示音则进入英文模式 关闭英文模式: 【四击】 "ANC"键,听到一下提示音则退出英文模式 *出厂默认中文,该功能只在开机后蓝牙未连接状态下操作有效

融音(如车行驶的声音、机器运转的声音、风声等等),对于

产品充电注意事项

◆ 建议使用Type-C充电线接5V—2A手机充电器给产品进行充电 ② 若没有对应充电参数的手机充电器,亦可使用其他参数如: 9V=2A 或 5V = 4.5A 等规格手机快充头对产品进行充电。

❸ 此处需注意手机充电头功率≤24W(如9V==2A 功率18W), 超过此功率容易充坏电池 4 不要使用车充、座充、USB墙充、USB排插、快充充电宝对产品进行 有线充电,因输出功率较高且不稳定,极容易出现产品无法充电 及产品耗电异常快(续航变短)、甚至信号不稳定等情况。

[耳机充电口] [信号指示灯]

蓝牙连接名: 蓝 牙 版 本: 5.3 输入电压: DC 5V 输入电流: 500mA 充电接□·Type-C 电池容量, 1000mAh 充电时间:约2小时 支持协议: HSP/HFP/A2DP/AVRCF 包装明细: 头戴式蓝牙耳机本体、Aux-in音频线、Type-C充电线、指导说明书、精美包装盒

产品上有电源键、功能键、音量键,均为物理按键,需正确按下 并回弹后,产品方可响应,若首次操作不成功,建议重新进行一

遍操作即可。 回顾耳机是否有机械损坏(摔坏、进水、挤压等),若无以上行为,

PC电脑或者笔记本等设备拥有蓝牙功能情况下,也可以使用蓝牙

可联系客服帮助您进行售后流程并处理。

产品名称: 头戴式主动智能降噪耳机

产品规格

[用心研发的好产品,深怕用户们误解它,iKF-King Pro 也不想被大家所怪罪]

使用头戴耳机时请留意以下信号等注意事项: 同顾耳机是否有机械损坏(擦坏、进水、挤压等)。若无以上行为 日常耳机与手机之间,确保两者距离不要超过10-20米,以及其中

不能有太多干扰性强的障碍物(比如腔体),避免影响蓝牙信号传 输出现断连卡顿问题。

- #町に央地町は下郷中の認。 ② 日常使用过程中,若有偶尔斯连问题属于正常现象,毕竟蓝牙属于 无线信号传输,就跟wifi网络一样,偶尔的不稳定属于正常现象。 可能此时信号传输受到了部分环境的干扰,请稍等片刻或者换一下 位置即可解决。
- 位直即可解状。

 关于头戴耳机的隔音、是否漏音问题与佩戴方法有很大的关系,避免耳机包耳海绵部分没有完全封闭在耳朵,您可以根据实际使用的舒适性,及时调整耳机的佩戴角度和包耳程度。

 头戴耳机将音量调至最大,出现部分的音频漏音情况实属正常,若您想要更私密的隔音环境,建议将音量调低到正常情况以及佩戴角度调整至最佳情况。

产品日常维护

请勿佩戴耳机洗澡/淋雨,或将产品泡入水中,以及异常温 度情况等极端环境下使用,且每次正常使用后,建议用干 布、纸巾等工具擦干耳机上的汗水、雨水、污渍后,再讲 度上避免故障的出现。

自用户签收日起12个月内

1、使用产品前请仔细阅读本使用说明书并请妥善保管。 2、首次使用,请先将本产品充满电。

石产品添起以1个月个用、16分具允两电后、再多香醇直好似、期间建议每一个月都对其充满电、可收入有效变长产品的使用寿命、否则产品内的电池会因自身的特性持续性的自放电、过度放电会导致产品创底损坏、无法继续使用、亦不属于庚保范围。 公须进连订规厂金生产经过国家CCC认证的充电器分产品进行充电。 若手机无法搜索蓝牙耳机、请喻认蓝牙耳机是否处于开机等待配对的状态、若长时间未成功配对或者链接、蓝牙耳机混对功能将关闭(关闭)、需重开机压对耳机并处于起对状态中、若手机程序出错,请重开机手机,若蓝牙耳机程序出错,请重开机连牙耳机。

- 富古 认请勿以任何理由拆除或维修改装耳机,否则可能会导致产品起火、电子击穿甚至彻底损坏本产品,而该行为损坏产品与我司无关,后果将由买家自行承担。 之、请勿将设备置于温度0°C以下或45°C以上的环境中。 3、请避免靠近儿童或动物的眼睛使用设备指示灯。 4、请勿在雷暴天气下使用该设备、雷暴可导致设备工作不正常,并
- 增加触电的危险。 、请勿用油及其他挥发性化学液体擦拭本产品表面,但可采用酒精



4. Follow all instructions.

5. Do not use this apparatus near water
6. Clean only with a dry cloth.

7. Only use attachments/accessories specified by the

required when the apparatus has been damaged in anyway. been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not

WARNINGS/CAUTIONS

 Do NOT use the headphones at a high volume for any extended period. To avoid hearing damage, use your headphones at a comfortable, moderate volume level.

- Turn the volume down on your device before placing the headphones on your ears, then turn the volume up

Do NOT use your headphones while driving for phone calls or any other purpose.

Do NOT use the headphones with noise canceling on at any time the inability to hear surrounding sounds may present a danger to yourself or others, e.g., while riding a

railroad, etc., and follow applicable laws regarding headphone use.

- Remove the headphones, or use the headphones with

noise cancelling off and adjust your volume, to ensure you can hear surrounding sounds, including alarms and warning signals. - Be aware of how sounds that you rely on as reminders or warnings may vary in character when using the headphones.

arming sensation or loss of audio. eadphones to airplane seat jacks, as this could result in iry or property damage due to overheating.

> Contains small parts which may be a choking hazard. Not contains smail paits which may be a choking hazard. No suitable for children under age 3. This product contains magnetic material. Consult your physician on whether this might affect your implantable

nedical device.

To reduce the risk of fire or electrical shock, do NOT pose this product to rain, liquids or moisture. lo not place objects filled with liquids, such as vases, on

Use this product only with an agency-approved power

If the battery leaks, do not allow the liquid to come in ontact with the skin or eves. If contact is made, seek

 Do not expose products containing batteries to excessive eat (e.g. from storage in direct sunlight, fire or the like). Do NOT wear the headphones while charging.

inusual noise. If this happens, turn the headphones off and

service at the website where you purchased the product. as possible.



Specifications

Input parameters: 500mA Noise reduction depth: - 38dB Charging time: about 2 hours

How to charge

or the first time use, please fully charge the product. harging: The power indicator light is solid red ull power: The red light of the power indicator is off v battery alarm: Voice prompt once when the battery is lov

Charging port Signal light

Warnings

Instruction



Headphone Status



fter power on, click the ANC button, the power indicator will light up for 2 seconds Green light flashes 4 times slowly: 75%-100% Green light flashes 3 times slowly: 50%-74% Green light flashes 2 times slowly: 25%-49%

Turn on and Turn off

ear the prompt "kaiji" that it is turned on; urn off; Long press the power button 3 seconds and

Turn on: Signal light flashing white and green Turn off: The signal light is white for 2 seconds (When a call comes in, it will prompt the ringtone of the mobi hone synchronously, if the mobile phone does not support

lease charge the headset in time when the red

How to connect

prompt "Power on" that it is turned on;

2. Open the Bluetooth interface of the mobile phone, search for "iKF- King Pro", click to connect;

headset will automatically connect to the last mobile phone

the game mode when you hear the prompt sound 3 click the "ANC" button, and you will successfully exit

Listen to music with headset

Click the + button Click the - button
Long press the + button 2S

Cycle through "Music Mode/ANC Mode/Ambient Sound Mode

Wired connection

Use the audio cable to connect a non-wireless device o the headphone battery is depleted. Insert the cable into the 3.5 mm jack on the right earcup.
 Insert the other end of the cable into the 3.5 mm jack on

your device.

External microphone

iack.Calls/voices are clearer. There may be third-party software incompatibility problems during the use of the external Microphone, resulting in the inability to receive audio, and the actual experience may be slightly different.

TIPS

within a valid connection range and there are not too man obstacles that interfere with the signal;

occasionally. Just like WiFi, occasionally the connection i transmission. Please wait a moment or change the

location to resolve; 3. When the headset cannot be connected to the device please check whether the headset has power or is connected to other devices; 4. Please fully charge the Headphone once a month. If the

Headphone isnot used for a long time, the battery of the Headphones may be damaged. 5. The sound insulation and sound leakage of headphones are related to the way of wearing the headphones and the volume of the headphones.

wrapping of the headphones in time according to the actu comfort of use. Please close the ear/head foam part of the headphone as much as possible.

6. Please use a standard- compliant charging head to charge the headset

Do not wear the product for bathing, or use it in the rain, and do not soak the product in water. After each normal use, it is recommended to dry the sweat or stains. on the headphone with a dry cloth, paper towel, etc., and then store it.

You can adjust the wearing angle and degree of ear

Limited warranty

Warranty period: 1 year from the date of product receipt

the product itself, please contact us with the warranty card nd shopping records to receive a return authorization / free

Fault Table

The following conditions will not provide free repair

abuse, accident, alteration, or damage or alteration of the annearance of the product:

3 Damage caused by self- disassembly: 4.Failures caused by accidents such as water ingress or falling, squeezing, etc;

damage caused by contact with chemical reagents, contact with sharp objects, etc; Outer packaging and accessories, gifts, services other

an the products promised by the sales staff, Improper storage: If the product is exposed to abnorm