 


 


LED LIGHT UP

WIRELESS WATER RESISTANT
SHOWER SPEAKER

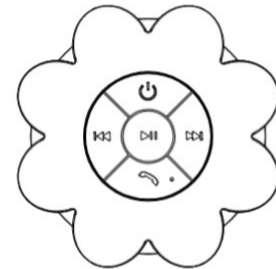

— User Manual —

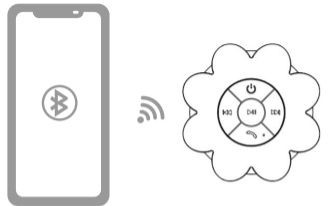

Bluetooth™ Connection

To pair: Turn on both the LED Flower Shower Speaker and your Bluetooth™ enabled device. Hold down the power button on the shower speaker. Go to the Bluetooth™ setting on your device and click on pairing name *AC FLOWER SPEAKER* to connect. Once your device is connected to the flower shower speaker you will hear a voice prompt saying it has been connected successfully.



Android & iPhone



Laptop

 


iPod



Mac

The flower shower speaker can be connected to these Bluetooth™ devices.

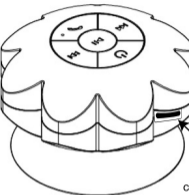

Charging

Connect the charging cable to speaker's charging port, insert the other end to an adapter in 5V (not include). A red light will turn on when the speaker is charging, and will turn off when it is full charge.



Power On/Off

Press and hold the power button to turn the flower shower speaker on and turn off



Previous Track

Short press this key to play previous music or long press this key to decrease the volume



Next Track

Short press this key to play next music or long press this key to increase the volume



Hands-Free Calling

Short press to hang up or to answer an incoming call. Double click to redial the last calling or long press to reject an incoming call.



Pause/Play

Short press to pause a song or press again to resume the song

Safety Instructions

- Keep the device away from heat, direct sunlight and sharp edges
- Do not insert any metal objects into the device as this is a risk of short circuit
- To avoid static charge, do not use in an extremely dry climate.
- Do not repair the unit yourself. Contact an authorized specialist
- Do not charge in the shower or other wet environments
- Only charge when unit is dry
- Do not submerge under water

Specifications:

- Input: 5V/0.5A
- Output Power: 3W
- Operating Distance: 32 Feet
- Battery Capacity: 300mAh/3.7V
- Music Playtime: 1-2 Hours
- Charge Time: 1-2 Hours
- Battery Type: Built-in Lithium Battery
- Product Size: 3.35in. x 3.35in. x 2.17in. (8.5cm x 8.5cm x 5.5cm)
- Frequency Range: 100Hz-18 KHz

FCC Statement

This device complies with part 15 of the FCC Rules Operation. It is subject to the following two conditions:
1.) This device may not cause harmful interference.
2.) This device must accept any interference that is received, including any interference that may cause an undesired operation.

We're here to help. If you have any issues with this product, please contact us at cs@aconicproducts.com
Telephone: 718-747-8886

©Aconic, All rights reserved. Trademarks and registered trademarks are the property of their respective owners.

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.